


# Compatibility Illustration



\*\*\*All trademarks and brand names are the property of their registered owners\*\*\*



**CANON BP-80 / 85**

**DURACELL DR5**

**HITACHI VM-BPL13A / BPL27A / BPL30A / BPL60A**

**JVC BN-V607U / V615U / V812U / V814U**

**PANASONIC VW-VBD1 , PV-BP5 , AG-BP25**

**RADIOSHACK 23-383 / 385**

**RCA BB-55L / 65L / 85L**

**Sony InfoLithium L/M Series**

NP-F330 / F530 / F550 / F730 / F750 / F950 / F960 / F970

NP-FM30 / FM50 / FM51 / FM55H / FM70 / FM71 / FM90 / FM91

NP-SQM50 / SQM51 / SQM70 / SQM71 / SQM71D / SQM90 /

SQM91 / SQM91D

**2 Sony InfoLithium P Series**  
NP-FP50 / FP60 / FP70 / FP71  
NP-FP90

**3 Sony InfoLithium F Series**  
NP-FF50 / FF70 / FF71  
FF90 / FF91

**4 Sony InfoLithium A Series**  
NP-FA50 / FA70

**5 SONY NP-F100 / F200 / F300**

## \* Match the + & - symbols



**STEP 1 :** Check the + & - symbols in the charger slot.

**STEP 2 :** Check the + & - symbols on the battery.

**STEP 3 :** Be sure to match the + & - symbols when inserting the battery into the charger for recharging.

\* The charger may not work properly if failing to follow the above instructions.

