


Compatibility Illustration



All trademarks and brand names are the property of their registered owners



CANON

BP-911 / 914 / 915 / 924
BP-927 / 930 / 941 / 945

SAMSUNG

SB-L110 / L220 / L160
SB-L320 / L480



HITACHI


DZ-BP16 / BP28

PANASONIC

CGA-DU07 / DU14 / DU21
CGR-D120 / D220 / D320
CGR-S602
VW-VBD070 / VBD140
VW-VBD210
DMW-BL14, PV-BP8A
VW-VBD20

* Match the + & - symbols


STEP 1.



STEP 2.



STEP 3.




STEP 1 : Check the + & - symbols in the charger slot.

STEP 2 : Check the + & - symbols on the battery.

STEP 3 : Be sure to match the + & - symbols when inserting the battery into the charger for recharging.

* The charger may not work properly if failing to follow the above instructions.



CANON

BP-608 / 608A / 617