


Compatibility Illustration



All trademarks and brand names are the property of their registered owners

* Match the + & - symbols




STEP 1 : Check the + & - symbols in the charger slot.

STEP 2 : Check the + & - symbols on the battery.


STEP 3 : Be sure to match the + & - symbols when inserting the battery into the charger for recharging.

* The charger may not work properly if failing to follow the above instructions.



BENQ NP-60
CASIO NP-30
DIGIMASTER NP-60
FUJIFILM NP-60 / 95 / 120
KODAK KLIC-5000 / 5001
OLYMPUS Li-20B
PANASONIC SU-AV30 ,
VQ-VBA12, VW-VBA10
PENTAX D-Li2 / Li7
PREMIER NP-60

RICOH DB-40 / 43
SAMSUNG SLB-1037 / 1137
TOSHIBA PDR-BT3 , Li2



FUJIFILM NP-80 / 100
JVC BN-V712U / V714U
KODAK KLIC-3000
RICOH DB-20 / 20L / 30
TOSHIBA NP-100
PDR-BT1 / BT2 / BT2A



FUJIFILM NP-40
PANASONIC
CGA-S004E , DMW-BCB7
PENTAX D-Li8