



Compatibility Illustration



All trademarks and brand names are the property of their registered owners

*** Match the + & - symbols**



- STEP 1 :** Check the + & - symbols in the charger slot.
- STEP 2 :** Check the + & - symbols on the battery.
- STEP 3 :** Be sure to match the + & - symbols when inserting the battery into the charger for recharging.

* The charger may not work properly if failing to follow the above instructions.

- ① Sony InfoLithium L Series**
 NP-F330 / F550 / F570 / F730 / F750 / F770
 NP-F930 / F960 / F970
- Sony InfoLithium M Series**
 NP-FM30 / FM50 / FM51 / FM51D / FM55H
 NP-FM70 / FM71 / FM90 / FM91
 NP-QM50 / QM51 / QM51D
 NP-QM70 / QM71 / QM71D
 NP-QM90 / QM91 / QM91D
- HITACHI** VM-BPL13A / 27A / 30A / 60A
- JVC** BN-V607U / 615U / 812U / 814U
- PANASONIC** VW-VBD1 / PV-BP5 / AG-BP25
- CANON** BP-80 / BP-85
- RCA** BB-55L / 65L / 85L

- ② Sony**
 NP-F100 / F200 / F300
- ③ Sony InfoLithium F Series**
 NP-FF50 / FF51 / FF51S
 NP-FF70 / FF71 / FF71S
 NP-FF90 / FF91
- ④ Sony InfoLithium P Series**
 NP-FP50 / FP51 / FP50D
 NP-FP70 / FP71 / FP70D
 NP-FP90 / FP91 / FP90D
- Sony InfoLithium H Series**
 NP-FH50 / FH70 / FH100