




Compatibility Illustration



All trademarks and brand names are the property of their registered owners



CANON BP-208
BP-308 / 308S / 308B
BP-310 / 315



PANASONIC CGA-S303

* Match the + & - symbols



STEP 1 : Check the + & - symbols in the charger slot.

STEP 2 : Check the + & - symbols on the battery.

STEP 3 : Be sure to match the + & - symbols when inserting the battery into the charger for recharging.

* The charger may not work properly if failing to follow the above instructions.



MINOLTA NP-400
NIKON EN-EL3 / EL3a / EL3e