



LOWEPRO D-PODS SERIES MATRIX 6-2009

Digital Camera Bags

|  | |  D-Pods 10 |  D-Pods 20 |  D-Pods 30 |  D-Pods 40 |  D-Pods 50 |
|---|--|--|---|---|---|---|
| Agfa | DC-8330i | | • | | | |
| Argus | DC-6340 | | • | | | |
| BenQ | C840 | | | • | | |
| | DC C1050 | | • | | | |
| | DC C740i | | | • | | |
| | DC C750 | | • | | | |
| | DC C820 | | • | | | |
| | DC C850 | | • | | | |
| | DC E100 | | • | | | |
| | DC E800 | | • | | | |
| | DSC X800 | | • | | | |
| Canon | Digital IXUS 80 | • | | | | |
| | IXUS 70 | | • | | | |
| | IXY Digital 820IS | | • | | | |
| | PowerShot A1000 IS | | • | | | |
| | PowerShot A1100 IS | | • | | | |
| | PowerShot A2000 IS | | • | | | |
| | PowerShot A2100 IS | | | • | | |
| | PowerShot A470 | | | • | | |
| | PowerShot A480 | | | • | | |
| | PowerShot A570 IS | | | • | | |
| | PowerShot A580 | | | • | | |
| | PowerShot A590 IS | | | • | | |
| | PowerShot A650 IS | | | | | • |
| | PowerShot A720 IS | | | • | | |
| | PowerShot D10 | | | | | • |
| | PowerShot E1 | | | • | | |
| | PowerShot G10 | | | | | • |
| | PowerShot G9 | | | | • | |
| | PowerShot SD1000/IXUS 70 | • | | | | |
| | PowerShot SD1100 IS/IXUS 80 | • | | | | |
| | PowerShot SD1200 IS | • | | | | |
| | PowerShot SD770/IXUS 85 | • | | | | |
| | PowerShot SD780 IS | • | | | | |
| | PowerShot SD790 IS/IXUS 90 IS | • | | | | |
| | PowerShot SD850 IS/IXUS 950 IS | | • | | | |
| | PowerShot SD870 IS/IXUS 860 IS | | • | | | |
| | PowerShot SD880 IS/IXUS 870 IS | | • | | | |
| | PowerShot SD890 IS/IXUS 970 IS | | • | | | |
| | PowerShot SD950 IS/Digital IXUS 960 IS | | • | | | |
| | PowerShot SD960 IS | | • | | | |
| | PowerShot SD970 IS | | • | | | |
| | PowerShot SD990 IS/IXUS 980 IS | | • | | | |
| | PowerShot SX100 IS | | | | | • |
| | PowerShot SX110 IS | | | | | • |
| | PowerShot SX200 IS | | | • | | |
| | PowerShot TX-1 | | • | | | |
| | SD1200 IS | • | | | | |
| | SD850IS/Ixus 950IS | | • | | | |

*Availability may vary by country or location

|  | |  D-Pods 10 |  D-Pods 20 |  D-Pods 30 |  D-Pods 40 |  D-Pods 50 |
|---|--------------------------------|---|--|--|--|--|
| Casio | EXILIM EX-FC100 | | • | | | |
| | EXILIM EX-FS10 | | • | | | |
| | EXILIM EX-S10 | • | | | | |
| | EXILIM EX-S12 | • | | | | |
| | EXILIM EX-S5 | | • | | | |
| | EXILIM EX-S880 | | • | | | |
| | EXILIM EX-V7/V8 | | • | | | |
| | EXILIM EX-Z100 | | • | | | |
| | EXILIM EX-Z1080 | | • | | | |
| | EXILIM EX-Z11 | | • | | | |
| | EXILIM EX-Z200 | | • | | | |
| | EXILIM EX-Z250 | | • | | | |
| | EXILIM EX-Z270 | | • | | | |
| | EXILIM EX-Z29 | | • | | | |
| | EXILIM EX-Z300 | | • | | | |
| | EXILIM EX-Z400 | | • | | | |
| | EXILIM EX-Z80 | • | | | | |
| | EXILIM EX-Z85 | | • | | | |
| EXILIM EX-Z850 | • | | | | | |
| EXILIM EX-Z9 | | • | | | | |
| DXG | 110 | | • | | | |
| | 202V | | | | • | |
| | 305V | | | • | | |
| | 568 | | | • | | |
| | 572V | | | | | • |
| Fuji | FinePix A100/A150 | | • | | | |
| | FinePix A820/A825/A900 | | • | | | |
| | FinePix A850 | | • | | | |
| | FinePix A920 | | • | | | |
| | FinePix F100fd | | • | | | |
| | FinePix F200EXR | | • | | | |
| | FinePix F40fd | | • | | | |
| | FinePix F47fd | | • | | | |
| | FinePix F480 | | • | | | |
| | FinePix F50fd/F60fd | • | | | | |
| | FinePix J10/J20 | | • | | | |
| | FinePix J100/J110W/J120W/J150W | | • | | | |
| | FinePix J12/J50 | | • | | | |
| | FinePix Z10fd/Z100fd/Z200fd | • | | | | |
| | FinePix Z20fd | • | | | | |
| | FinePix Z30fd | | • | | | |
| | FinePix Z33 | | • | | | |
| | FinePix Z5fd | • | | | | |

LOWEPRO D-PODS SERIES MATRIX 6-2009

Digital Camera Bags

|  | |  D-Pods 10 |  D-Pods 20 |  D-Pods 30 |  D-Pods 40 |  D-Pods 50 |
|---|-----------------|--|---|---|---|---|
| GE | A730 | | • | | | |
| | A735/A835 | | • | | | |
| | E1035/E1235 | | • | | | |
| | E1050 | | • | | | |
| | E840S | | • | | | |
| | G2/G3 | | • | | | |
| | H855 | | • | | | |
| HP | Photosmart E337 | | • | | | |
| | Photosmart E427 | | • | | | |
| | Photosmart M437 | | • | | | |
| | Photosmart M447 | | • | | | |
| | Photosmart M537 | | • | | | |
| | Photosmart M547 | | • | | | |
| | Photosmart M627 | | • | | | |
| | Photosmart M637 | | • | | | |
| | Photosmart M737 | | • | | | |
| | Photosmart Mz67 | | • | | | |
| | Photosmart R742 | • | | | | |
| | Photosmart R837 | | • | | | |
| | Photosmart R847 | | • | | | |
| | Photosmart R937 | | • | | | |

|  | |  D-Pods 10 |  D-Pods 20 |  D-Pods 30 |  D-Pods 40 |  D-Pods 50 |
|---|--------------------------|--|---|---|---|---|
| Kodak | EasyShare C180 | | • | | | |
| | EasyShare C513 | | • | | | |
| | EasyShare C603 | | | • | | |
| | EasyShare C613 | | | | • | |
| | EasyShare C653 | | | | • | |
| | EasyShare C703 | | | | • | |
| | EasyShare C713 | | • | | | |
| | EasyShare C763 | | • | | | |
| | EasyShare C913 | | • | | | |
| | EasyShare M1033 | | • | | | |
| | EasyShare M1063 | | • | | | |
| | EasyShare M1073 IS | | • | | | |
| | EasyShare M1093 IS | | • | | | |
| | EasyShare M320/M340 | | • | | | |
| | EasyShare M380 | | • | | | |
| | EasyShare M753/M853 | | • | | | |
| | EasyShare M763/M863 | | • | | | |
| | EasyShare M873/M883 | • | | | | |
| | EasyShare M893 IS | | • | | | |
| | EasyShare Picture Viewer | • | | | | |
| | EasyShare V1073/V1273 | | • | | | |
| | EasyShare V1233/V1253 | | • | | | |
| | EasyShare V1285 | | • | | | |
| | EasyShare V803/V1003 | | | | • | |
| | EasyShare Z1085 IS | | | | • | |
| | EasyShare Z1275 | | • | | | |
| | EasyShare Z1285 | | • | | | |
| | EasyShare Z1485 IS | | | | • | |
| | EasyShare Z885 | | • | | | |
| | EasyShare Z915 | | | | • | |
| | Zi6 | | | | • | |
| | Zx1 | | | | • | |
| Leica | C-Lux 1 | | • | | | |
| | C-Lux 3 | | • | | | |
| | D-Lux 3 | | | • | | |
| | D-Lux 4 | | | | • | |
| Minox | DC 7022 | | • | | | |
| | DC-6033 WP | | | | • | |
| | DC-8011 | | • | | | |
| Mustek | DV-4500 | | | | • | |
| | GSmart D35 | | | • | | |
| | MDC-6500z | | | | | • |

|  | |  D-Pods 10 |  D-Pods 20 |  D-Pods 30 |  D-Pods 40 |  D-Pods 50 |
|---|---------------------|--|---|---|---|---|
| Nikon | Coolpix L14/L15 | | | • | | |
| | Coolpix L16/L18 | | • | | | |
| | Coolpix L19/L20 | | • | | | |
| | Coolpix P5000/P5100 | | | | • | |
| | Coolpix P60 | | | | • | |
| | Coolpix P6000 GPS | | | | | • |
| | Coolpix S200 | • | | | | |
| | Coolpix S202 | • | | | | |
| | Coolpix S210 | • | | | | |
| | Coolpix S220 | • | | | | |
| | Coolpix S51/S51c | | | • | | |
| | Coolpix S510 | • | | | | |
| | Coolpix S52 | | | • | | |
| | Coolpix S520 | • | | | | |
| | Coolpix S52c | | | • | | |
| | Coolpix S550 | • | | | | |
| | Coolpix S560 | | | • | | |
| | Coolpix S60 | | | • | | |
| | Coolpix S600 | • | | | | |
| | Coolpix S610/S610c | | | • | | |
| Coolpix S620 | • | | | | | |
| Coolpix S630 | | | • | | | |
| Coolpix S700 | • | | | | | |
| Coolpix S710 | • | | | | | |

|  | |  D-Pods 10 |  D-Pods 20 |  D-Pods 30 |  D-Pods 40 |  D-Pods 50 |
|---|------------------------------|---|--|--|--|--|
| Olympus | FE-190 | | • | | | |
| | FE-20 | | • | | | |
| | FE-25 | | • | | | |
| | FE-280 | • | | | | |
| | FE-300 | | • | | | |
| | FE-3000/3010 | | • | | | |
| | FE-310 | | • | | | |
| | FE-320 | | • | | | |
| | FE-340 | | • | | | |
| | FE-350 | | • | | | |
| | FE-360 | | • | | | |
| | FE-370 | | • | | | |
| | FE-45 | | • | | | |
| | FE-5000/5010 | | • | | | |
| | Mju 1040 | • | | | | |
| | Mju 1050SW | | • | | | |
| | Mju 1060 | | • | | | |
| | Stylus 1010/1020 | | • | | | |
| | Stylus 1030SW | | • | | | |
| | Stylus 1040 | • | | | | |
| | Stylus 1050SW | | • | | | |
| | Stylus 1200/Mju Digital 1200 | | • | | | |
| | Stylus 550WP/Mju 550WP | | • | | | |
| | Stylus 7000/Mju 7000 | | • | | | |
| | Stylus 770SW | • | | | | |
| | Stylus 780 | | • | | | |
| | Stylus 790SW/Mju 790SW | | • | | | |
| | Stylus 830/Mju Digital 830 | | • | | | |
| | Stylus 840 | | • | | | |
| | Stylus 850SW | | • | | | |
| | Stylus Tough 6000/Mju 6000 | | • | | | |
| | Stylus Tough 8000/Mju 8000 | | • | | | |
| | X835 | | • | | | |

|  | |  D-Pods 10 |  D-Pods 20 |  D-Pods 30 |  D-Pods 40 |  D-Pods 50 |
|---|-----------------------|---|--|--|--|--|
| Panasonic | Lumix DMC- FX07 | | • | | | |
| | Lumix DMC-FS12/FS62 | | • | | | |
| | Lumix DMC-FS20 | | • | | | |
| | Lumix DMC-FS25 | | • | | | |
| | Lumix DMC-FS42 | | • | | | |
| | Lumix DMC-FS6 | | • | | | |
| | Lumix DMC-FS7 | | • | | | |
| | Lumix DMC-FX100 | | • | | | |
| | Lumix DMC-FX150 | | • | | | |
| | Lumix DMC-FX33 | | • | | | |
| | Lumix DMC-FX35 | | • | | | |
| | Lumix DMC-FX37 | | • | | | |
| | Lumix DMC-FX40/FX48 | | • | | | |
| | Lumix DMC-FX500 | | • | | | |
| | Lumix DMC-FX55 | | • | | | |
| | Lumix DMC-FX550/FX580 | | • | | | |
| | Lumix DMC-LS60/LS75 | | • | | | |
| | Lumix DMC-LS80 | | • | | | |
| | Lumix DMC-LS85 | | • | | | |
| | Lumix DMC-LX3 | | | | | • |
| | Lumix DMC-LZ6/LZ7 | | • | | | |
| | Lumix DMC-LZ8 | | | | • | |
| | Lumix DMC-TS1/FT1 | | • | | | |
| | Lumix DMC-TZ2/TZ3 | | | | • | |
| | Lumix DMC-TZ4/TZ5 | | | | • | |
| Lumix DMC-TZ50 | | | | • | | |
| Lumix DMC-TZ6/ZS1 | | | | • | | |
| Lumix DMC-TZ7/ZS3 | | | | • | | |
| Pentax | Optio A30 | • | | | | |
| | Optio A40 | • | | | | |
| | Optio E40 | | • | | | |
| | Optio E50 | | • | | | |
| | Optio E60 | | • | | | |
| | Optio E70 | | • | | | |
| | Optio L30 | • | | | | |
| | Optio M30 | | • | | | |
| | Optio M40 | | • | | | |
| | Optio M50/M60 | | • | | | |
| | Optio P70 | | • | | | |
| | Optio S10 | | • | | | |
| | Optio S12 | • | | | | |
| | Optio T30 | | • | | | |
| | Optio V10 | • | | | | |
| | Optio V20 | | • | | | |
| | Optio W30 | | • | | | |
| | Optio W60 | | • | | | |
| | Optio Z10 | | • | | | |

LOWEPRO D-PODS SERIES MATRIX 6-2009

Digital Camera Bags

|  | |  |  |  |  |  |
|---|-------------------|--|---|---|---|---|
| | | D-Pods 10 | D-Pods 20 | D-Pods 30 | D-Pods 40 | D-Pods 50 |
| Polaroid | A310 | • | | | | |
| | i533P | • | | | | |
| | i631 | | • | | | |
| | i633 | • | | | | |
| | i733 | • | | | | |
| Pure Digital | Flip Mino/Mino HD | | • | | | |
| | Flip Video | | • | | | |
| | Flip Video Ultra | | • | | | |
| RCA | CDS4100 | • | | | | • |
| | CDS6300 | | | | | • |
| Ricoh | Caplio 500SE | | | | | • |
| | Caplio GX100 | | | | • | |
| | Caplio GX200 | | | • | | |
| | Caplio RR770 | | • | | | |
| | CX1 | | • | | | |
| | G600 | | | • | | |
| | GR Digital II | | | • | | |
| | R10 | | • | | | |
| | R50 | | • | | | |
| | R8 | | • | | | |

|  | |  D-Pods 10 |  D-Pods 20 |  D-Pods 30 |  D-Pods 40 |  D-Pods 50 |
|---|------------------|---|--|--|--|--|
| Samsung | CL5/PL10 | | • | | | |
| | Digimax i100 | | • | | | |
| | Digimax i70 | • | | | | |
| | Digimax i8 | • | | | | |
| | Digimax i80 | • | | | | |
| | Digimax i85 | | • | | | |
| | Digimax L730 | | • | | | |
| | Digimax L74 Wide | | • | | | |
| | HZ10W/WB500 | | | | • | |
| | HZ15W/WB550 | | | | • | |
| | L100/110/200/210 | • | | | | |
| | L201/SL201 | • | | | | |
| | L310W | | • | | | |
| | L73 | | • | | | |
| | L730 | | • | | | |
| | L830 | | • | | | |
| | L83T | | • | | | |
| | NV100HD | | • | | | |
| | NV11 | | • | | | |
| | NV24HD | | • | | | |
| | NV30/NV40 | | • | | | |
| | NV4 | | • | | | |
| | NV8/10/15/20 | | • | | | |
| | NV9/TL9 | | • | | | |
| | S1060 | | • | | | |
| | S1070 | | • | | | |
| | S630/S730 | | • | | | |
| | S73 | | • | | | |
| | S760/S860 | | • | | | |
| | S85 | | • | | | |
| | S850/S1050 | | • | | | |
| | SC-HMX-R10 | | | | | • |
| | SC-X105L | | • | | | |
| | SL102/ES55 | | • | | | |
| | SL201 | | • | | | |
| | SL202/PL50 | | • | | | |
| | SL30/ES15 | | • | | | |
| | SL420/PL60 | | • | | | |
| | SL620/PL65 | | • | | | |
| | SL820/IT100 | | • | | | |
| ST10 | | • | | | | |
| TL100/ST50 | | | | • | | |
| TL320/WB100 | | • | | | | |
| TL34HD | | | | • | | |
| WB500 | | | | • | | |

|  | |  D-Pods 10 |  D-Pods 20 |  D-Pods 30 |  D-Pods 40 |  D-Pods 50 |
|---|-------------------------|---|--|--|--|--|
| Sanyo | VPC-C1E Xacti | | | • | | |
| | DSC-S5 Xacti | | | • | | |
| | VPC-C40 | | | • | | |
| | VPC-CA9 | | | | • | |
| | VPC-CG10 | | | | • | |
| | VPC-J4 Xacti | | • | | | |
| | VPC-TH1 | | | | | • |
| | VPC-WH1 | | | | | • |
| | VPS-FH1 | | | | | • |
| | Xacti DMX-CA8 | | | | | • |
| | Xacti VPC-CA65 | | | | | • |
| | Xacti VPC-CG65 | | | • | | |
| | Xacti VPC-HD1 | | | | • | |
| | Xacti VPC-HD1000/HD1010 | | | | | • |
| | Xacti VPC-S50 | | • | | | |
| Xacti VPS-T700 | • | | | | | |
| Xaxcti VPC-CA6 | | | • | | | |
| Sigma | DP-1 | | | | • | |
| | DP-2 | | | | • | |
| Sony | DSC-G1 | | • | | | |
| | DSC-G3 | | • | | | |
| | DSC-H10 | | | | | • |
| | DSC-H20 | | | | | • |
| | DSC-S650/S700/S800 | | • | | | |
| | DSC-S730 | | • | | | |
| | DSC-S750/S780 | | • | | | |
| | DSC-S950 | | • | | | |
| | DSC-S980 | | • | | | |
| | DSC-T100 | • | | | | |
| | DSC-T2 | • | | | | |
| | DSC-T20 | • | | | | |
| | DSC-T200 | | • | | | |
| | DSC-T300 | • | | | | |
| | DSC-T500 | | • | | | |
| | DSC-T70 | • | | | | |
| | DSC-T700 | | • | | | |
| | DSC-T77/T770 | | • | | | |
| | DSC-T90/T900 | | • | | | |
| | DSC-W110/W200 | | • | | | |
| | DSC-W115/W125 | | • | | | |
| | DSC-W120/W130 | | • | | | |
| | DSC-W150/W170 | | • | | | |
| | DSC-W210/W220 | | • | | | |
| | DSC-W230/W290 | | • | | | |
| | DSC-W300 | | • | | | |
| | HDR-TG1 | | | • | | |
| | MHS-CM1 | | | | | • |
| | MHS-PM1 | | | • | | |
| | NSC-GC1 | | | • | | |

| | | | | | | |
|---|---------------------------------|--|---|---|---|---|
|  | |  <p>D-Pods 10</p> |  <p>D-Pods 20</p> |  <p>D-Pods 30</p> |  <p>D-Pods 40</p> |  <p>D-Pods 50</p> |
| <p>Vivitar</p> | <p>V6320 Vivicam V6200W</p> | | <p>•</p> | | <p>•</p> | |