


















# LCM Operation Interface

- **Enter setting:**  
Slide the POWER key on side of the unit to turn on the device, press and hold the SETUP key for 3 seconds then release it. The icon will be blinking on the LCM (the smaller screen), scroll the SETUP key upward or downward to change setting.
- **Change setting:**  
Press the SETUP key once to confirm change and to move on next setting.
- **Exit setting:**  
Press and hold the SETUP key again for 3 seconds. The device will return to scanning mode.

Scanning Mode	Signal Dwell Time	Receiver Sensitivity	Audio & Vibration Alert Setting
 1080	 1080	 1080	 1080
EXT. AV input mode	8 seconds	UH (Ultra High / -75dBm)	Alert on/Vibrate Off
 30 Sec. interval mode	 4 seconds	 H (High/-60dBm)	 Alert on/Vibrate On
30 Sec. interval mode	4 seconds	H (High/-60dBm)	Alert on/Vibrate On
 60 sec. interval mode	 2 seconds	 MH (Medium High /-50dBm)	 Alert Off/Vibrate Off
60 sec. interval mode	2 seconds	MH (Medium High /-50dBm)	Alert Off/Vibrate Off
 Standard scanning mode		 M (Medium/-40dBm)	 Alert Off/Vibrate On
Standard scanning mode		M (Medium/-40dBm)	Alert Off/Vibrate On
		 ML (Medium Low /-30 dBm)	
		ML (Medium Low /-30 dBm)	
		 L (Low/-20dBm)	
		L (Low/-20dBm)	

(3)

# DD9004

## Wireless Camera Hunter Operation Manual




Law Enforcement Products Manufacturer

LawMate

V1.0


# Names and Parts



(1)

### ■ Installing the battery

Remove battery cover on back of the unit. Slide the supplied battery at about 15 degree angle to the battery compartment. Please be aware of +/- direction.



### ■ Charging the battery:

Connect the supplied power adaptor to an AC wall outlet and attached the other end of the cord to the DC 5V In socket.



### ■ Power indication:

When charging the battery, a red color LED light will illuminate. Once the battery is fully charged, the LED light will turn off. (The charging time is approximately 3 ~ 4 hours depending on the battery remaining power.) Please charge the battery for 8 hours on the first-time use.

### ■ Antenna connector

Plug antenna 1 to port 1 and antenna 2 to port 2. You can find the indication printed on the antennas as well as on the ports. Turn the antenna's base clockwise until it locks into place.



### ■ Power switch:

The power switch is on the side of the device. When the unit is turned on, it starts scanning the signal automatically. Make sure the antenna is screwed tightly to its allocated position to avoid poor reception.

### ■ Frequency scanning:

Whenever a wireless A/V signal is detected, the image will be displayed on the screen and stays for few seconds. The length of time depends on your setting. You have the option to lock the channel by scroll upward or downward the SETUP key on side of the device to lock the channel or else it will pass on and continue scanning.

### ■ Manual scanning:

Scroll upward or downward the SETUP key to scan manually.

### ■ Low battery alert:

When the battery gets low, the battery icon will blink. Charge your battery immediately.

### ■ External video input:

To connect external video to the device, change the setting to EX mode. Make sure the connector is plugged properly to the Signal In/Out socket on side of the device, otherwise it will result non-signal input.

(2)