

M
MAGNUS™



PV-7451M

Owner's
Manual

MAGNUS™

Photo Tripod

Thank you for choosing Magnus.

The Magnus PV-7451M Tripod employs an adjustable center column that converts to a four-section monopod for enhanced flexibility. Telescoping legs with flip-locks offer fast and easy adjustments, with enclosed spiked feet for all-terrain shooting. The three-way pan and tilt head offers total control over camera positioning, and the quick-release plate is equipped with a 1/4"-20 male thread for universal camera mounting.

Please read and follow these instructions and keep this manual in a safe place.

Overview



*Image is for illustration purposes only.
Features varies by model*

Opening the Tripod

- 1 Loosen the pan handle and position it at an approximate 90° angle to the center column.



- 2 Pull out each flip-lock, extend the legs to the desired height, and relock each leg.



Note: Always extend the legs from the top flip-locks first.

- 3 Rotate the spreader lock counterclockwise to release the center brace. Gently pull the legs out to the open position and rotate the spreader lock clockwise until secure.



Using the Enclosed Spiked Feet

When setting up on soft ground, the spiked feet can provide more stability.

To expose the spikes, rotate the tripod feet clockwise. To enclose the spikes, rotate the tripod feet counterclockwise.



Mounting Your Camera

- 1 Pull and hold the quick-release plate locking lever to release the plate. Lift the plate up and out.



- 2 Align the quick-release plate lengthwise with the bottom of your camera. If you're using a video camera, make sure the video register pin is aligned with your video camera's pin socket.



- 3 Insert the plate's mounting screw into your camera's tripod socket and fasten the screw using the screwhead handle until fully tightened.



Note: Make sure the screwhead handle is flat against the bottom of the quick-release plate before placing it back on the tripod.

- 4 Pull and hold on to the quick-release plate locking lever and insert the camera/quick-release assembly into the tripod head.




Using the Pan and Tilt Head

Tip: Use the bubble levels to make sure your shot is parallel to the horizon.

Tilting

To use the tilt feature, rotate the pan handle counterclockwise. Tilt the tripod head to the desired angle, and rotate the pan handle clockwise to secure the new position.



Panning

To pan, rotate the pan locking knob counterclockwise. When panning, the tripod head will rotate, but the panning marks will remain stationary. To secure the position, rotate the pan locking knob clockwise.



Horizontal/Vertical Orientation

To change the camera orientation from horizontal to vertical, rotate the platform locking knob counterclockwise to loosen. Adjust the platform as desired, and rotate the platform locking knob clockwise to secure the new position.



Extending the Pan Handle

To adjust the length of the telescoping pan handle, rotate the pan handle twist-lock clockwise. Adjust the pan handle to the desired length, and rotate the twist-lock counterclockwise to secure the new position.



Friction Control

Friction control regulates the stiffness of the tilt feature. For less friction, rotate the knob counterclockwise. For more friction, rotate the knob clockwise.



Adjusting the Center-Column Height

- 1 Rotate the center-column locking knob counterclockwise to loosen.
- 2 Adjust the center column to the desired height, and rotate the center-column locking knob clockwise to secure the new position.



Note: To ensure the stability of the center column, do not extend it beyond the marker labeled "STOP HERE."

Using the Monopod

When the center column is removed from the tripod legs, it functions as a four-section monopod.

- 1 Rotate the center-column locking knob counterclockwise to loosen, and then pull the center column all the way out of the tripod.
- 2 Looking down at the monopod, rotate the monopod sections clockwise to loosen, extend fully, and rotate counterclockwise to secure.



Note: Always extend the monopod from the top section first.

Precautions

- Safe operation of this product is the user's responsibility.
- Keep this product away from children.
- The camera should be securely fastened to the quick-release mounting plate before mounting onto the tripod.
- Never mount a camera to the tripod until all tripod legs are locked and stabilized.
- Make sure that this product is intact and that there are no missing parts.
- To avoid damage to this product, be careful not to overtighten or improperly thread any of the threaded fittings.
- Do not exceed the maximum load capacity.
- Do not set up, pull down, move a tripod, or adjust its legs while a camera is mounted.
- Never leave a camera unattended on the tripod.
- Do not stand or rest on, hang anything from, or attempt to remove the mid-level spreader.
- Do not lift or move the tripod by the head.
- To avoid trapping fingers, keep hands clear of the inside of the legs.
- All photos are for illustrative purposes only.

ONE (1) YEAR LIMITED WARRANTY

This Magnus product is warranted to the original purchaser to be free from defects in materials and workmanship under normal consumer use for a period of one (1) year from the original purchase date or thirty (30) days after replacement, whichever occurs later. The warranty provider's responsibility with respect to this limited warranty shall be limited solely to repair or replacement, at the provider's discretion, of any product that fails during normal use of this product in its intended manner and in its intended environment. Inoperability of the product or part(s) shall be determined by the warranty provider. If the product has been discontinued, the warranty provider reserves the right to replace it with a model of equivalent quality and function.

This warranty does not cover damage or defect caused by misuse, neglect, accident, alteration, abuse, improper installation or maintenance. EXCEPT AS PROVIDED HEREIN, THE WARRANTY PROVIDER MAKES NEITHER ANY EXPRESS WARRANTIES NOR ANY IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. This warranty provides you with specific legal rights, and you may also have additional rights that vary from state to state.

To obtain warranty coverage, contact the Magnus Customer Service Department to obtain a return merchandise authorization ("RMA") number, and return the defective product to Magnus along with the RMA number and proof of purchase. Shipment of the defective product is at the purchaser's own risk and expense.

For more information or to arrange service, visit www.magnustripods.com or call Customer Service at 212-594-2353.