


Product Use Guide



Version: V1.0

In order to ensure the best usage experience, please read this User Guide carefully and keep it in a safe place for future reference.

Precautions


This product is a precision electronic product, which needs special attention during the usage:

1. Please keep the product away from electromagnetic environment, excessive humidity, smoke and other harsh environments;
2. Please do not separate or modify the product;
3. Please do not use any corrosive or abrasive cleaner to clean the earphones;
4. Please do not immerse the device in water;
5. Please do not use excessive force to squeeze the product;
6. Please do not put the product in direct sunlight or in a fire environment, and keep the product away from high and low temperature environments;
7. Please do not shake or impact the product violently;
8. Please do not turn the volume up too high to protect your hearing (physicians point out that listening at a high volume for a long time will damage the listener's hearing). Please turn down the volume or stop using if tinnitus occurs;
9. Please ensure that this product is placed safely to avoid accidents and falls caused by children's touch;
10. This machine body will heat up if its USB is connected with the computer for a long time. It is recommended not to connect with the computer for a long time, and unplug it from the USB interface when not in use;
11. Do not disassemble this machine without authorization, otherwise you will lose the right of warranty. If you have any questions, please contact the dealer;
12. Changes due to the performance and function of the product will not be notified. In case of any discrepancy between the Operating Instruction and the material machine, the material machine shall prevail;
13. Please do not use the product when driving or walking on the street, otherwise it may cause a car accident;
14. Do not use the product in a particularly hot, cold, dusty, humid or dry environment;
15. The actual use of this product may be different from the contents of the User Guide due to the software update, please take the purchased product as the standard, and the User Guide is only

for reference;


Product characteristics

1. 1.77-inch TFT display screen, clear and bright.
2. Support the playing of mp3, ape, flac, wav and other mainstream audio formats;
3. Recording pen function, high-quality recording, good helper for learning and recording;
4. Support high resolution Photo and e-book reading function;
5. Support Bluetooth transmission, perfectly match your Bluetooth device;
9. Support video playing and portable viewing of courses/videos;
10. Support background playing, support music listening while reading;
11. Support radio to make your life more convenient;
12. TF card expansion, up to 128GB
13. Support sound playing, get rid of the appearance bothered by earphones



1. SD card slot: Please insert the SD card in the correct direction.
2. M button: keep a short press of M to pop up the menu, and keep a long press to repeat when playing music.
3. ◀ Button: select the previous option or file.
4. ▶ Button: play/stop/confirm button.
5. 3.5 Earphone jack: Standard 3.5mm Earphone interface.

6. USB interface.

7.  Button: select the latter option or file.

8. VOL button: keep a short press: return to the previous interface, keep a long press: Enter the volume adjustment.

9. Reset button: Insert with a toothpick or needle to reset this machine.

10. Built-in speaker: Support local external playing of this machine.

Operation instructions

Startup and shutdown

Keep a long press of play button over 3s to start up, and press 3s again to shut down. The system will shut down automatically after idle for 5 minutes.

Note: This function is invalid when the player is connected to the PC or charged.

Battery low power




When battery low power occurs, the player will display a tip screen, and then automatically shut down and enter the standby mode. Do not restart at this time, please charge in time.


It is recommended to choose the charger with a current specification of 500-1000mA.

PC connection

Connect the computer to charge this machine and operate the data of this machine at the same time. In the startup and shutdown state, use the USB cable provided with this machine to connect the PC and the player, open "My Computer" to see the new "Removable Disk" tip, operating system: Windows XP/Mac OS 10 and above.

Music

Keep a short press of  and  to select music application, and press  to enter the music playing interface.

Select "Music" application in the main interface, and keep a short press of  to enter music list interface. Music playing supports breakpoint continuation and background playing;

Background play: Does not support Photo, recording, radio and video;

It refers to entering the application without conflict with audio while playing songs, and the song plays continuously at the same time. At this time, the music playing would not be stopped.


keep a short press of  : Enter the menu setting .

All songs: Display a list of all songs in memory. Click the song to play.






Underplaying: Display this menu while playing music.

Artists: Display the singer list of all songs in the memory by singer name. For example, select the singer, and the songs in play are the songs in the singer directory.

Special issue: All songs and albums in the memory are arranged in alphabetical order and name pinyin acronym order. Select the album name, and the list will display all the songs of the album, then click the song list to start playing the corresponding songs of the album.




My favorites: Store favorite songs (click while playing music, and mark success when the icon turns red) 

Select the "My Favorites" list and play only the marked songs

Play/pause: Press  to switch between music play and pause, keep a short press of  to switch to the previous song, keep a short press of  to switch to the next song, keep a long press of  and  to go back and fast forward.

Menu selection

1. Press M in the music playing and pause state, and the system will enter the sub-menu.


2. Press  and  to select the browse menu. Press  to confirm the selection, and press VOL to return to the upper interface (the same for other applications).

Return to homepage: Select to return to the main interface;

Variable speed play: Support level 0-9 growth rate and level 0-9 deceleration playing.

Repeat play: Including repeat all, random play, single cycle options.

Bookmark option: Can record up to 5 bookmarks.

Add to my favorites: Click the underplaying song to add to my favorites and mark it as my favorite song (after marking successfully,  is red).

Delete from my favorites: When a song is added to my favorites, you can click to delete it from my favorites (the heart symbol is white after unmarking), and then the mark is canceled. **Equalizer:**

Display "ordinary, pop, rock, jazz, classic, dance, country", click the menu item to automatically confirm and return.

Repetition: Play the music, keep a long press of M button to select repeat starting point, **AS** turns blue, keep a long press again of M button to select repeat ending point and start to repeat such file section, the **AS** icon turns green while repeating, and keep a long press again of M button to stop repeating.

Sound recorder

Shortly press **⏮** and **⏭** to select "recorder", shortly press **▶** to enter the recording menu, and the recording menu options include: Start voice recording, recording database, high-quality recording, common-quality recording, voice control mode, keep a short press of VOL button to return to the upper menu.

In case of any low power signal occurs during recording, the system will automatically save the recording and return to the recording function interface; When the disk is full, the system will prompt "full disk space".

Start voice recording: Select the start voice recording, keep a short press of **▶** to record voice. Keep a short press of **▶** to suspend record while recording, keep a short press of VOL to pop up whether save the current recording, select Yes to save the recording. Recording files are saved in the record folder on the local disk by default. The system will automatically check, find or create this folder and save the file.

Recording database: Enter the recording database, if the voice file has not been recorded, it will pop up the "voice recording not found" tip; If the file has been recorded, select the recorded file, keep a short press of **▶** to play, keep a short press of VOL to return to the upper menu during the playing period.

High-quality Recording: wav format high-quality recording.

Common-quality Recording: wav common-quality recording.

Life testing: This function is voice detection recording. Do not turn off this function when recording important files.

E-books:

Shortly press **⏮** and **⏭** to select "e-book" application, shortly press **▶** to enter the e-book text file list interface. Select target text file, keep a short press of **▶** to open the e-book. The current number of pages and the total number of pages of the file (the total number of pages calculated in the background) are displayed at the top of the e-book.

Page turning: Keep a short press of **⏭** to page down and keep a

short press of **⏮** to page up.

Menu setting: Keep a short press of M button to enter (including auto play time setting, background color, page selection and bookmark option).

Auto play time setting: Set 3-30s option setting. (keep a short press of **⏮** on the e-book page to start auto play).

Background color: Including classic black, pure white and cowhide yellow options.

Bookmark option: Can set up to 5 bookmarks.

Notes: E-book specification: Unicode (UTF-8) small-end encoded text;

Folder

Display all directories and files on the memory card.

Select a file in the file list and click it, and the system will automatically select the corresponding application to open the file. (if you select a music file, the music playing interface will appear; if you select an e-book, the e-book interface will appear). Refer to the corresponding application operating instructions for the corresponding options.

File deletion: Select the file to be deleted in the file list. Keep a short press of M button to pop up whether to delete it, select "Yes" to delete the selected file.

Note: Only support single file deletion, does not support folder deletion.

Setting

Select "Setting" application, keep a short press of **⏮** to enter sub-menu settings, the setting menu options include: Bluetooth, alarm clock, language, date and time, brightness, screen off setting, idle shutdown, information, storage status, factory setting and update playlist.

Bluetooth: Select Bluetooth application and keep a short press of **⏮** to enter it

Bluetooth: Keep a short press of **⏮** to turn on and off the Bluetooth.

Equipment name: Displays the current Bluetooth device name.

Paired device: Can view the paired devices, or cancel or disconnect the paired devices.

Device searching: Keep a short press of **⏮**, the player will automatically search for connectable Bluetooth devices, and

display the device name after searching. Click "device name" to connect the device to be connected.

Note: The top status bar displays the Bluetooth icon after turning on, the Bluetooth icon in the top status bar flashes after entering "search device". When the connection is successful, the Bluetooth icon turns blue, and when the connection is not successful, the Bluetooth icon turns white. (Note: video and radio do not support Bluetooth function).

Alarm clock: Select alarm clock, enter alarm clock setting, including alarm clock (switch), alarm clock time and alarm clock cycle settings.

Alarm clock switch: Turn on and off the alarm clock.

Alarm clock time: Set alarm clock reminder time.

Alarm clock cycle: Can set single time, daily and working day-time.

Note: The shutdown is invalid after setting the alarm clock (after the alarm clock is turned on, the CPU consumes power quickly, so please turn off the alarm clock when you don't use it).

Language: Supported languages include: simplified Chinese, English and other six languages.

Date and time: Including setting time and setting date.

Brightness: The range is 10-100, the default value is 90.

Screen off Setting: (including screen always lighting and screen off time setting).

Screen normal lighting: Turn on and off the screen always lighting.

Screen off time setting: The range is 10-60s, and the default value is 60s.

Idle shutdown: (including idle shutdown, idle shutdown time setting)

Note: It is invalid after the alarm clock is turned on.

Idle shutdown: Turn on and off the idle shutdown.

Idle shutdown time setting: The range is 1-60min, and the default value is 5min.

Note: It is invalid after the alarm clock is turned on

Message: Display software information.

Storage condition: Display total capacity and residual capacity.

Factory setting: Select whether to restore factory settings. Select "Yes" to restore the settings to their original values.

Update playlist: When copying new videos, photos, music and e-books, you need to update the playlist, otherwise you may not be able to view or play these files.

Specifications

Product model	Digital player
Outline dimension	90.5MM*39.5MM*10MM
Software language	simplified Chinese, English and other six languages.
Product weight	About 31g
Display	1.77-inch 128*160
Battery	3.7v lithium battery
Charging specification	5V/1A input
Charging time	About 2h
Bluetooth version	5.0
TF card extension:	≤128GB
Audio format	APE (800Kbps-1000Kbps), FLAC (1000Kbps-1200Kbps), MP3 (8Kbps-320Kbps), WMA (5Kbps-384Kbps), WAV(32Kbps-1536Kbps), AAC-LC (8Kbps-320Kbps)
Video format	AVI128*160 (conversion by conversion tool)
Recording format	WAV
Photo	Support JPG/JPEG/BMP
E-book format	TXT file
Interface	USB1.1, charging
Loudspeaker	1W*8ohm
Working temperature	-5°C ~ 40°C

* The audio indicators shown in this table are for reference only. There will be slight deviation in audio parameters due to the small difference of electronic components of the product. Please take the material machine as the standard.