


Action!™ Teacher Microphone Features



Bravo!™ Student Microphone Features



Microphone Setup

You must register (pair) microphones before first use.

1. Charge Microphones - Place mics in the charger until Battery LED is slowly pulsing green.

2. Activate Base Station - Press the Mic Registration button on the ELEVATE Base Station (or remotely via the CM900 Web Page). The ClassLight will flash green.

3. Activate Mic

- Remove mic from charger, and wait until it wakes up (8 seconds then double-beep)
- Press the Mute button for 4 seconds until you hear a triple-beep, then let go. Both LEDs will flash green.

4. Ready! - Registration takes a few seconds. When complete, the ClassLight will stop flashing and the mic will beep again. The mic is now ready to use.

5. Repeat steps 2-4 for additional mics, or when moving a mic to another room.




Status Indicators

Signal Status


- Green** = Unmuted
- Amber** = Muted
- Amber (slow pulse)** = Not connected
- Amber (short flash)** = Out of range

Battery Status

- Green (slow pulse)** = Fully charged
- Green** = Charging
- Red** = Low battery



Charging



NOTE: The mic will take a few seconds to wake up from charging.

Microphone Tips

- Charge microphones completely before first use.
- There is no ON/OFF button for the ezRoom system or the microphones. They will "wake up" when they are picked up and "go to sleep" when not in use.
- Charge microphones every night by placing them in the charging cradle or via USB cable.
- The Action! and Bravo! Mics can be handheld, worn as pendant microphones, or clipped to a belt. If clipped to a belt, headset or lapel mic must be used.
- Microphone volume should be set so it is audible just above the back-ground noise. If the teacher can hear themselves, it is probably too loud.

Alert Buttons

Press and hold both buttons for 2 seconds (double beep) to activate an Alert. Alerts are custom configured for each school. Consult the installer or system administrator for Alert behavior.




Action Buttons

Action Buttons can be programmed to turn on displays, switch inputs, call the office, or more, depending on your class needs. The Action buttons may also light up to show if PrioriTeach, OptiVoice, Solo, or System Mute are engaged.



PrivaSee


Audio PrivaSee (if enabled) allows for private conversations by automatically muting the microphone when the teacher leaves the room. When the teacher re-enters the room, the microphone will automatically un-mute.



NOTE: Other IR sources such as interactive flat panels or security systems may interfere with PrivaSee, causing the mic to mute while in the classroom. See the complete guide for troubleshooting or turning off PrivaSee.


Batteries

Action! and Bravo! Mics use a rechargeable Lithium Polymer battery and will last up to 10 hours under normal use. All rechargeable batteries decrease their energy capacity over time. Change microphone batteries when the microphone will not hold a charge for the entire teaching day.




Adjusting Lanyard

Pull or push lanyard to adjust length



Pull to separate magnetic lanyard clip



Change wearing options



*For best compatibility and performance, use only FrontRow-supplied headset and lapel microphones.

Important Safety Warnings

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus or batteries near water or if exposed to moisture.
6. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
7. Do not install near any heat sources such as radiators, heat registers, stoves, or other equipment (including amplifiers) that produce heat. Do not expose batteries to temperatures above 40°C (104°F).
8. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.

9. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
10. Only use attachments/ accessories specified by the manufacturer. Replace only with the battery pack designed for this product.
11. Unplug this apparatus during lightning storms or when unused for long periods of time.
12. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped. Do not attempt to open, disassemble or service the battery pack.
13. The apparatus shall not be exposed to dripping nor splashing, and no objects filled with liquids shall be placed on the apparatus.
14. Do not crush, puncture or short external contacts or dispose of in fire or water.



Cleaning

Microphones and Charger can be wiped clean using a damp cloth with common household disinfectants containing ammonia, alcohol or diluted bleach solutions. Do not use alcohol solutions with a concentration greater than 70%. Never immerse a microphone in water or any other liquid.



Scan for complete User and Install Guide



www.gofrontrow.com/elevate-help