

OPENSWIM PRO

User Guide

S710

Contents

DOWNLOADING THE SHOKZ APP

HOW IT WORKS

Headphones Control	05
ON/OFF	06
Pairing	07
How to Wear	08
Volume	09
Multifunction Button	10
More Functions	11
Switching between Bluetooth and MP3 Mode	12
Transferring Files	13
Switching the Order of MP3 Music Playback	15
Check Battery Status	16

EXTRA FEATURES

EQ Modes	18
Switching EQ Modes	19
Multipoint Pairing	20
Turn Multipoint Pairing Off	26
Changing Languages	28
Restore Factory Settings	31

CARE AND MAINTENANCE

Charging Tips	34
Precautions	35
Warranty	36

Contents

WHAT'S IN THE BOX 37

Downloading the Shokz App



Shokz

The Shokz App allows you to switch between Bluetooth and MP3 modes, manage multipoint pairing, upgrade firmware, change EQ modes, switch the order of MP3 music playback, and more. Download the App now for a simple and seamless audio experience.


*Only for limited regions.

Go to userguide.shokz.net/openswimpro for more information.


Apple and the Apple logo are trademarks of Apple Inc., registered in the U.S. and other countries. Google Play is a trademark of Google LLC.

How It Works

Headphones Control



ON/OFF



Turn on the headphones:

Press and hold the Power/Volume + button until the LED Indicator flashes blue.


*A power-on tone will be heard at this time.

Turn off the headphones:


Press and hold the Power/Volume + button until the LED Indicator flashes red.

*A shutdown tone will be heard at this time.

Pairing




1. Start with OpenSwim Pro turned off.
2. Press and hold the Volume+ Button for 5 seconds until the LED **Indicator flashes red and blue.**



3. Open your device's **Bluetooth** settings and select "OpenSwim Pro by Shokz". Once your device confirms successful pairing, you're all set.


How to Wear




Pick up the headphones, bring them behind the back of the base of your neck, position the earhooks on your ears, then enjoy your music!

*Wearing your headphones the wrong way could cause discomfort. The transducers should rest in front of your ears.

Volume

 Operate volume controls while audio is playing.



How to change volume:


While your audio is playing, adjust headphone volume by pushing either the Volume + or Volume - buttons.

*A “beep” will sound when the volume is at its max.



*Listening with headphones at high volume may affect your hearing and the audio will be distorted.

Multifunction Button



▶|| **Play/pause music** ●

Click once

☎ **Answer call** ●

Click once

▶▶ **Next song** ● ●

Double-click while music is playing

📞 **End call** ●

Click Once

◀◀ **Previous song** ● ● ●

Triple-click while music is playing


More Functions*

Prompt device's voice assistant	Press and hold the multifunction button for 2 seconds
Answer call	Click the multifunction button once
End call	Click the multifunction button once
Reject a call	Press and hold the multifunction button for 2 seconds
Answer a second call and end the current call	Press and hold the multifunction button for 2 seconds when the second call comes in
Mute a call	Press and hold the Volume + button and the Volume - button simultaneously for 2 seconds during a call
Unmute a call	Press and hold the Volume + button and the Volume - button simultaneously for 2 seconds during a call
Change the language	Double-click on the multifunction button while in pairing status (red and blue lights flash alternately)

*Only applicable for phone calls, not online calls

*You can also redefine some of the buttons on the Shokz App.

Switching between Bluetooth and MP3 Mode




Audrey will say:
"Bluetooth Mode/MP3 Mode"



Press and hold the Volume + button and the Volume - button for 2 seconds until you hear the prompt tone.

*You can also use the Shokz App to easily switch between Bluetooth/MP3 modes, or redefine the buttons.

Transferring Files




1. Connect OpenSwim Pro to your computer via the magnetic cable provided in the package.
2. A driver disk named **"SWIM PRO"** will appear on your computer. Open the **"SWIM PRO" disk** on your computer.
3. Import audio files (songs, audio books or folders) to the "SWIM PRO" disk.
4. Once the file transfer is complete, remove the "SWIM PRO" disk from your computer.

*Please do not force an interruption during the file transfer, as this may cause damage to the product.

*The following music file formats are currently supported by OpenSwim Pro:

Format	Bit rate	Sampling rate	Remarks
MP3	8kbps - 320kbps	8kHz-48kHz	Bit depth up to 16bit is supported.
FLAC	L0-L8 (1000kbps - 1900kbps)	8kHz-96kHz	Bit depth up to 24bit is supported.
WMA	5kbps - 320kbps	8kHz-48kHz	WMA Lossless, WMA Pro, WMA Voice, or encryption is not supported. Bit depth up to 16bit is supported.
WAV	32kbps - 1411kbps	8kHz-96kHz	Bit depth up to 24bit is supported.
AAC	8kbps - 320kbps	8kHz-48kHz	Bit depth up to 16bit is supported.
M4A	8kbps - 291kbps	8kHz-48kHz	Bit depth up to 16bit is supported.
APE	800kbps - 959kbps	8kHz-48kHz	Fast/Normal format only. Bit depth up to 16bit is supported.

Switching the Order of MP3 Music Playback



Audrey will say:
"Normal/Shuffle/Repeat"




Press and hold the multifunction button and the Volume + button for 2 seconds in MP3 mode until you hear the prompt tone.

*You can also use the Shokz App to easily switch the order of MP3 music playback.

Check Battery Status



Operate controls while audio is not playing



Power/Volume + Button

Volume - Button

Audrey will say :
"Battery high
/Battery medium
/Battery low/Charge me"



How to check battery status :

Click the Volume + or Volume - button while music is paused, Audrey will tell you the battery status.

Extra Features

EQ Modes

There are 2 EQ modes in Bluetooth mode:



Standard Mode:
Balanced frequency
for listening to music.



Vocal Booster Mode:
Enhanced intermediate
frequencies for audiobooks,
podcasts, etc.

There are 2 EQ modes in MP3 mode:



Standard mode:
Frequency band balanced
for non-underwater scenarios.




Swimming Mode:
Specially crafted for swimming.
We recommend that you turn
this mode on while swimming
and use it with earplugs.

Switching EQ Modes



Operate controls while music is playing



Audrey will say :
“Standard Mode/
Vocal Booster Mode/
Swimming Mode”




How to switch EQ mode:

Press and hold the Volume - button for 2 seconds while music is playing until you hear the prompt tone.

*You can also use the Shokz App to change the EQ mode


Multipoint Pairing



Pair Two Devices

Switch between two devices
seamlessly with multipoint pairing


- OFF** Operate controls with headphones powered off




Audrey will say:
“pairing”。



1. Start with your headphones powered off.
2. Press and hold Volume + until Audrey say “pairing” and the LED indicator flashes red and blue alternately.



3. Press and hold the multifunction button and Volume + button until you hear a beep.




Settings 1

4. Open first device's Bluetooth® menu and select "OpenSwim Pro by Shokz."

*Pairing is completed when the first device shows that pairing is successful.

5. Turn your headphones off.



Settings 2

6. Re-enter pairing mode by pressing and holding Volume + until Audrey says “pairing” and the LED indicator flashes red and blue alternately.

7. Open second device's Bluetooth® menu and select "OpenSwim Pro by Shokz."

*Pairing is completed when the second device shows that pairing is successful.

8. Turn your headphones off.




9. Turn your headphones on. Your headphones are now connected to both devices.

*You can also use the Shokz App to easily manage multipoint pairing.

Turn Multipoint Pairing Off


OFF Operate controls with headphones powered off



Audrey will say:
“pairing”



1. Start with your headphones powered off.
2. Press and hold Volume + until Audrey say “pairing” and the LED indicator flashes red and blue alternately.




3. Press and hold the multifunction button and Volume - button until you hear a beep.

*You can also use the Shokz App to easily manage multipoint pairing.

Changing Languages

Your headphones have four built-in languages: Chinese, English, Japanese and Korean.


OFF Follow the instruction when headphones powered off




Audrey will say:
"pairing"



1. Start with your headphones powered off.
2. Press and hold Volume + until Audrey say "pairing" and the LED indicator flashes red and blue alternately.



3. Double-click the multifunction button to switch to the next language. The language order is as follows:
English, Chinese, Japanese, and Korean.




4. Click the Volume + button or the Volume - button to listen to the voice prompt for battery status, so that to confirm if the right language has been chosen.

*You can also use the Shokz App to change the language.

Restore Factory Settings


OFF Operate controls with headphones powered off



Audrey will say:
“pairing”



1. Start with your headphones powered off.
2. Press and hold Volume + until Audrey say “pairing” and the LED indicator flashes red and blue alternately.



3. Press and hold the multifunction button, the Volume - button, and the Volume + button together until you hear a beep.


4. Turn your headphones off. OpenSwim Pro has been reset and needs to be paired again.

*When factory settings are restored, the imported audio files in MP3 will not be deleted.

Care and Maintenance

Charging Tips

OFF The headset will automatically shut down when charging



Magnetic Charging Cable



Charging



Charging Completed

When the headphones are at low battery, there will be a **“charge me”** prompt and the red light **will flash intermittently.** Use the corresponding magnetic charging cable for charging. The LED indicator will turn **red** during the charging process and the headphones will automatically turn off. The LED indicator will turn from red to **blue** when charging is complete.

Note:

The headphones will automatically turn off after standing by 2 hours in MP3 mode.

The headphones will automatically turn off after standing by 6 hours in Bluetooth mode.

Precautions

Preparations Before Wearing Underwater

1. Transfer audio files from your computer to your headphones.
2. Switch the headphones from Bluetooth mode to MP3 mode before entering the water.
3. You may switch to swimming mode and use with earplugs.

*Please refer to the online manual for detailed instructions.

Precautions for Wearing Underwater

1. You won't be able to listen to audio from your smart device or answer incoming calls via Bluetooth® connection while underwater as Bluetooth® radio waves do not propagate in water.
2. The MP3 mode is available when you in the pool or sea. Please ensure to rinse your headphones with clear water after use to prevent saltwater corrosion. Please do keep the magnetic charging port dry during charging or data transfer to ensure proper functioning and safety of the device.

Warranty

Your headphones are covered by a warranty.

Visit our website at <https://shokz.com/pages/warranty-return> for details of the limited warranty.

To register your product, download the Shokz App.

*Failure to register will not affect your limited warranty rights.


Troubleshooting

If you have any trouble or problems, please visit <https://help.shokz.com/s/> for more support!

What's in the Box




OpenSwim Pro
Box




OpenSwim Pro
Headphones



OpenSwim Pro
Carrying Bag




User Guide



warranty card



Magnetic
Charging Cable



Swimming
Earplugs

If any part of your product is damaged or missing, do not use it. Contact authorized Shokz dealer or Shokz customer service.

*Please note that the packaging envelope may vary depending on the sales region.

SHÖKZ