

Kreate

Digital Camera User Manual



Since this product was designed for kids, we recommend shooting outdoors in bright light

Q: Does this camera need to be charged prior to first use?

A: Yes, we suggest you fully charge the camera before use.

Q: After putting in the Micro SD card and everything else, it still says card error and what should I do?

A: Please make sure your card is class10 U1 4-64GB card, and put it in the slot again, if it still can't work, please contact the seller for help.

Q: The camera freezes up and can't turn off, what can I do next?

A: Please remove the battery, then install the battery again and turn the camera on, format SD card.

Q: Does this camera support autofocus?

A: This camera comes in two models: supports autofocus and does not support autofocus. It depends on which camera you choose.

Important Battery Safety Tips

For your better experience with this product, please pay attention to the following safety tips







If the battery pack is mishandled, the battery pack can burst, cause a fire or even chemical burns. Observe the following cautions.

- Do not disassemble.
- Do not crush and do not expose the battery pack to any shock or force such as hammering, dropping or stepping on it.
- Do not short circuit and do not allow metal objects to come into contact with the battery terminals.
- Do not expose to high temperature above 60°C (140°F) such as in direct sunlight or in a car parked in the sun.
- Do not incinerate or dispose of in fire.
- Do not handle damaged or leaking lithium ion batteries.

- Be sure to charge the battery pack using a genuine battery charger or a device that can charge the battery pack.
- Keep the battery pack out of the reach of small children.
- Keep the battery pack dry.
- Replace only with the same or equivalent type recommended by seller.
- Dispose of used battery packs promptly as described in the instructions.

Introduction of Camera Parts

4



NO	Camera Parts	Introduction
1	Power Button	Power the camera on/off
2	Shutter Button	In image mode: take photos In video mode: start/end recording In playback mode: play/pause playing video file
3	W Button	Electronic zoom/zoom out In playback mode: reduce the sound of the video
4	T Button	Electronic zoom/enlarge In playback mode: enlarge the sound of the video
5	Mode Button	Switching camera modes: image mode/ video recording mode/playback mode

6	Menu Button	Enter or exit menu settings. In image mode: image mode setting In video mode: video mode setting In playback mode: delete files
7	OK Button	Confirm selection button In playback mode: stop playing video file
8	Up	Up key: turn on or off fill light /menu selection
9	Down	Down key: shortcut delete key /menu selection
10	Left	Left button: timer selfie button (in image mode, press it to set the timer photo count down time 2s, 5s or 10s) /menu selection


11	Right	Right key: In image mode, continuous shooting button (press this button to take 3 photos in a row)/menu selection.
12	Indicator light	1.The blue light indicates that the camera is working; 2.The red indicator light indicates that the camera is charging; 3.The red light goes out when fully charged
13	Hook	Attachable camera strap
14	Tripod mount	Standard screw port
15	Battery cover	Install battery and Micro SD card
16	LED fill light	LED fill light
17	MIC Port	Recording voice
18	USB	Type-C USB
19	Speaker	Play sound

Product Specifications


Video Resolution	1080P/720P/480P
Image Resolution	44MP/42MP/36MP/24MP/etc.
Memory Card	Support Micro SD card 4-64GB
File Format	JPG, AVI
Taking Photos	Single/Continuous shooting/2s timer /5s timer/10s timer
Electronic Zoom	8X
USB Port	Type-C
Display	2.4 inch Screen

Battery	Rechargeable Li-Ion Battery
Language	Support multi-language
Focal Length	$f=7.36\text{mm}$
Aperture	F/3.2
Power Save	Auto power off in 1Min/2Mins/3Mins/4Mins /5Mins/10Mins
Operating System Requirements	Windows XP, Windows Vista, Windows 7, Windows 8, Windows 10, Mac 10.2


How to Insert and Remove the Battery




1. Open the battery cover



2. Insert the end with electrical contacts until it locks into place




3. Close the battery cover



4. Please push the battery lock lever to remove the battery

How to Charge the Camera

1. Please use the USB cable and charger to charge the camera.
2. When the camera indicator light is red, it means the camera is charging.
3. When the camera light goes out, it means the camera is fully charged.




Please note For the first time, please use the camera after fully charged.

How to Install the Camera strap

Please refer to the right pictures.


1. Please find the strap hole onto the camera
2. Tighten one end of the rope and then try to install the strap

PS. If it cannot be easily installed, you can attach the strap by using tweezers or toothpicks.



How to Insert and Remove Micro SD Card

1. Open the battery cover
2. As shown by the illustration, face the card's metal contacts side toward you and insert it until it locks in place.



Metal contacts side



3. Close the battery cover.

Please caution

1. When the Micro SD card is used for the first time, please format it in the camera.
2. Please keep press the card until the lock lever locks the card. When the card is locked, you will hear a “click” sound.
3. If the Micro SD card is inserted or removed after the camera is powered on, the camera will automatically shut down to prevent damage to the memory card and the camera itself.


How to Format a Memory Card






1. In the image mode, press the “Menu” button to enter the image mode setting interface
2. Press the “Left” and “Right” keys to find the “Format” option
3. Press “OK” button to confirm formatting






Introduction to Image Mode Settings

1. Press the “Menu” button in the image mode to enter the camera image mode settings
2. After the setting is completed, please press the “Menu” button to exit the image mode settings




NO	Option	Introduction
	Anti-Shake	1.On/Off 2.Default is on
	Effect	You can choose photo effects, Default is normal
	Language	Support multi-languauge
	Date	1.Via the up/down/left/right buttons to set date and time 2.Please choose whether to display the date watermark on the photo 3.Press OK to exit the date setting after setup 4.Default is off
	Auto Power Off	Auto power off in 3Min/5Min/10Min Default is Off

	Sound Effect	On/Off Default is on
	Format	You can choose whether to format the SD card or not
	Default Setting	You can choose whether to default setting or not


How to Take Image

1. Please make sure the camera is in image mode
(The camera defaults to image mode when turned on)
2. Press the “shutter” button to shoot an image




How to Play Back and Delete Image

1. Press the “Mode” button twice in the image mode to enter camera playback mode
2. Press “Right” or “Left” button to playback image one by one
3. Press “Down” button and select “Yes” to delete image
4. Please press the “Mode” button to exit image playback mode



How to Record Video

1. The camera defaults to image mode when turned on, you need to press the “Mode” button once to enter video mode
2. Press the shutter button to start/stop video recording



How to Play Back and Delete Recorded Videos

1. Press the “Mode” button once in the video mode to enter camera playback mode
2. Press “Right” or “Left” button to select video
3. Press “Down” button and select “Yes” to delete video
4. After the deletion is completed, please press the “Mode” button to exit video playback mode

How to Download Image/ Video Files to Computer

21


1. When the camera is turned on, use the USB cable (in the package) to connect the computer
2. Then you can download the files from the camera to your computer
3. After downloading, please remove the USB cable



How to Use Camera as Webcam

22

1. Please turn off the camera and use the USB cable (in the package) to connect the computer
2. Then please press the “Power” Button and “Shutter” Button at the same time
3. Then you can use the camera as webcam on the computer
4. After using, please remove the USB cable and the camera will exit webcam mode



NO.DC403/DC403L-AF 250829

CE **RoHS** **FC**  