



XTRA EDGE

Contents

Chapter 1. Setting up.....	3
Introduction.....	3
Attaching the Battery.....	3
Using a microSD Card.....	3
Charging.....	3
Powering on/off.....	3
Chapter 2. Taking the Shot.....	4
Chapter 3. Customizing Your Camera.....	5
Chapter 4. Using the Accessories.....	6
Chapter 5. Sharing Photos and Videos.....	7
With a Mobile Phone.....	7
With a Computer.....	7
Chapter 6. Appendix.....	8
Status LEDs.....	8
Updating the Firmware.....	8
Specifications.....	8
Customer Support.....	8

Chapter 1. Setting up

Introduction



1. Shutter/Record Button
2. Touchscreen
3. Color Temperature Sensor
4. Microphone
5. USB-C Port
6. USB-C Port Cover Release Button
7. Quick Switch Button
8. Speaker
9. Lens
10. Lens Protective Cover (installed by default)
11. Quick-Release Slot
12. Pressure Sensor

13. Battery Compartment Cover Release Button
14. microSD Card Slot (beneath the cover)
15. Status LED

Attaching the Battery

Press the release button on the battery compartment cover and slide upward. Then, lift off the cover and insert the battery.

Using a microSD Card

A microSD card (sold separately) is required to save your videos and photos. Insert a UHS-I U3-rated microSD card and close the cover.

Charging

Press the release button on the USB-C port cover and slide downward. Then, lift off the cover and connect a USB-C charger to the USB-C port using the provided cable.

Powering on/off

Press and hold the Quick Switch button to power on/off the camera.

Chapter 2. Taking the Shot

When the Camera is On

Press the Shutter/Record button to take a photo or start/stop recording.


During video and slow-motion recording, press the Quick Switch button once to mark a highlight moment in the footage. This way, you can quickly locate specific shots during post-editing.

When the Camera is Off

Press and hold the Shutter/Record button to power on quickly and begin shooting.

Press the Shutter/Record button again to stop recording. The camera will automatically power off if left idle for three seconds.

Touchscreen Information



1. Storage Capacity/Remaining Recording Time
2. Battery Level
3. Current Shooting Mode

Tap the icon or swipe left or right in the center of the screen to change shooting modes.

4. Zoom

Tap and hold to set the zoom ratio.

5. Primary Settings

Tap to change the primary settings for the current shooting mode. Taking the Video mode as an example:

- Top left corner: Video recording options, including pre-recording and loop recording.
- Top right corner: Stabilization options.
- In the middle: Resolution, aspect ratio, and frame rate.



Notice: Available settings vary according to the shooting mode.

6. Advanced Settings

Tap to fine-tune image and audio parameters.

7. Playback

Tap to see the last video or photo you took. Swipe left from the right edge of the touchscreen to exit playback.









You can also view the playback on your mobile phone. For details, see [Connecting to the Xtra App \(on page 7\)](#).

Chapter 3. Customizing Your Camera

Control Center

The Control Center allows you to quickly change settings and enable/disable features.

Swipe down from the top of the screen to access the Control Center.

	Quick Switch
	Custom Modes
	Brightness
	General Settings
	Full Front Screen
	Voice Control
	Screen Lock
	Orientation Lock

Storage Management

Swipe down from the top of the screen, then swipe left to access the storage management screen. If a microSD card is used, you can switch to SD card storage.


Tap the right box to format the internal storage or the microSD card.



CAUTION: Formatting will permanently delete all data. Make sure to back up all required data before formatting.



Chapter 4. Using the Accessories

Mounting to a Curved Surface



1. Attach and press down the mount firmly on a clean curved surface, and hold for at least 10 seconds. Wait 30 minutes before attaching the camera. The recommended application temperature is -10° to 40°C (14° to 104°F).
2. Press down on the camera until the clips of the mount adapter are firmly inserted into the quick-release slots on the camera.
3. Secure the assembly using the screw.

Vertical Mounting



1. Lift the clip on the top of the frame and insert the camera into the frame.
2. Push down the clip to secure the camera in place.
3. Secure the assembly using the screw.



Fastpath: When the touchscreen is not accessible, press the Quick Switch button once to scroll through shooting modes.

Chapter 5. Sharing Photos and Videos

With a Mobile Phone

Connecting to the Xtra App

1. Download the Xtra app using the following QR code.



2. Enable Wi-Fi and Bluetooth on the mobile device. Launch the app and tap the camera icon on the home screen.
3. Follow the on-screen instructions to connect your camera to the app.

Playing back and Downloading

Once connected, you can use the app to view, edit, and share your videos and photos.

Tap the playback icon to preview photos and videos. Tap the download icon to download photos and videos.

With a Computer

1. Power on the camera and connect it to a computer using the provided cable.
2. When connected to a computer, a pop-up will appear on the camera.
3. Tap the file transfer option to download the files from the camera to the computer.



Notice: When transferring a file, the camera cannot take photos or record videos.

Chapter 6. Appendix

Status LEDs

The two status LEDs indicate the same status information.

Blinking Pattern	Description
Off	MicroSD card abnormality (no microSD card detected, microSD card storage is full, or microSD card error)
Solid green	Ready for shooting
Temporarily off and stays green	Taking a photo
Blinks red	Recording a video or taking a countdown photo
Blinks red three times rapidly	Powers off the camera or powers on the camera at low battery level
Blinks red and green alternately	Updating firmware
Blinks green	Charging when powered off

Updating the Firmware

When connected to the camera, the Xtra app will notify you if new firmware is available. Tap the prompt and follow the on-screen instructions to update the firmware.

Specifications

Visit <https://www.xtra-us.com/> for specifications.

Customer Support

To reach customer support, contact after-sales@xtra-us.com.