



NEEWER BASICS




LED Photography Flashlight

Instruction Manual

Package Contents




Flashlight x 1




Silicone gobo holder x 1



Gobo x 20




Charging cable x 1




Storage pouch x 1

Product Illustration




Installation Guide




① Insert the silicone gobo holder into the flashlight until it is secured.


② Place a gobo inside the silicone gobo holder. 20 gobos are included.



Gobo:




How to Use




Power on/off:

Long press the dial for 2s until it turns green. Within 5s, rotate the dial to power on the flashlight. Long press the dial for 2s to power off.



Brightness adjustment:

Rotate the dial clockwise to increase brightness, rotate counterclockwise to decrease.



10-30%




<10%

Battery levels:

- Solid green: 30-100%
- Solid red: 10-30%
- Flashing red: Below 10%

How to Use



Light colors:

Short press the dial to cycle through red, blue, white, and yellow light colors.



Charging



fully charged

Charging indicator:

Solid green: In use; solid red: charging; solid green: fully charged

Battery warning

1. Do not attempt to detach, modify, and repair the battery by yourself. Any unauthorized operation may cause battery leakage, overheating, burning, and other hazards.
2. Be sure to use the provided or certified chargers to prevent overcharging and shortcuts.
3. If unusual charging speed and indicator flashing occur, please stop charging and contact our customer service immediately.
4. Keep away from inflammable and explosive items.

Safety Precautions

1. Do not drop the flashlight or subject it to severe collisions and impacts.
2. Do not direct the light source at eyes to prevent eyesight damage.
3. The flashlight is not waterproof. Do not use in the rain or in humid environments.
4. Do not disassemble the product. If malfunction occurs, please contact us or our authorized repair center.
5. If any error occurs, please power off the flashlight immediately.
6. Keep away from chemicals, inflammables, and other hazardous substances.

Specifications

Product name	LED photography flashlight
Model	FL10
Rated power	10 W
Power input	DC 5V / 2A
Battery capacity	3.7V / 7500mAh / 27.75Wh
Continuous runtime	About 180 minutes
Light colors	Red, blue, white, yellow
Maximum illuminance	About 1620lux/0.5m, 2000K

If you have any questions about product ,
we are glad to help.



US +1 732-623-9777



Send us an email
vip@neewer.com



www.neewer.com



UK REP

Lingfeng Electronic (UK) Ltd
International House, 10 Churchill Way, Cardiff,
CF10 2HE, United Kingdom
office.lingfeng@gmail.com
(for both batteries and products)



Facebook

EC REP

NW Formations GmbH
Hoferstrasse 9B, 71636 Ludwigsburg, Germany
info.nwformations@gmail.com
(for both batteries and products)



TikTok

Manufacturer:
Shenzhen Neewer Technology Co.,Ltd.
深圳市纽尔科技有限公司

Room 1903, Block A, Lu Shan Building No. 3023
Chunfeng Rd Luo Hu District, Shenzhen
Guangdong 518001, China
vip@neewer.com



www.neewer.com