



SBP-CRT
Studio Multi-Cell
Cabinet Storage Box

INSTRUCTIONS

Introduction


Thank you for choosing Impact.

The Impact Studio Multi-Cell Cabinet is an ideal solution for cluttered workspaces and photo and video studios. This cabinet will hold objects that are hard to store, like loose paper rolls, backgrounds, boom poles, and tripods. The graduated length of the sections provides stability for longer objects, and solid construction supports heavy studio accessories like folded light stands. Locking casters are included for mobility, so important gear will always be close by when needed.

Precautions ⚠


- Please read and follow these instructions and keep this manual in a safe place.
- Make sure that this product is intact and that there are no missing parts.
- Clean the unit with only a soft, dry cloth.
- All images are for illustrative purposes only.
- Make sure everything is secure before proceeding.

Part List




- | | | |
|--------------------------|--------------------------|---------------------------|
| A. Side panel (left) | G. Upper panel (rear) | 3. Screws (×16) |
| B. Side panel (right) | H. Notched panel (rear) | 4. Casters (×2) |
| C. Lower panel (front) | I. Base panel | 5. Locking casters (×2) |
| D. Lower panel (rear) | J. Grid panels | 6. Screwdriver |
| E. Upper panel (front) | 1. Cam lock screws (×32) | 7. Threaded inserts (×32) |
| F. Notched panel (front) | 2. Cam locks (×32) | |

Assembly Instructions



1. Tap the white threaded inserts (#7) into the 10 holes in side panels (A) and (B). Make sure the inserts are flush with each side panel's surface.





2. Screw the cam lock screws (#1) into the threaded inserts on both side panels (A) and (B).


Screw in the rods until snug. Do not overtighten.

Important! Make sure the cam lock screws are perpendicular to the panels. If they are not straight, unscrew them and repeat the process to make sure they're properly seated.


Place side panel (A) on a flat surface with the cam lock screws pointing up.




3. Press a cam lock (#2) into the end hole of lower panel (C). When inserting the cam lock, make sure the cam lock's arrow is pointed towards the predrilled hole. Repeat this step for lower panel (D).



4. Place lower panel (C) onto the cam lock screw in side panel (A). Tighten the cam lock by turning it clockwise with the screwdriver (#7) until fully locked. Repeat this step to attach lower panel (D) to side panel (A).


E**2** x2

5. Press two cam locks into the end holes of upper panel (E). Place upper panel (E) onto the cam lock screws in side panel (A) and lock the cam locks with the screwdriver.




6. Press cam locks into upper panel (G) and notched panels (F) and (H). Place panels (G), (F), and (H) onto the cam lock screws on side panel (A) and lock the cam locks with the screwdriver.


2 × 10




7. Press cam locks into all cam lock holes on panels (C), (D), (E), (G), (F), and (H).



8. Place side panel (B) over the lower, upper, and notched panels, and align the cam lock screws with the predrilled locking holes.




9. Once all cam lock screws are fully inserted into the locking holes, tighten all cam locks with the screwdriver.




10. Tap threaded inserts (#7) into the 12 holes on the base panel (I). Make sure they're flush with the surface.

1 x12



11. Screw cam lock screws (#1) into the base panel's threaded inserts until snug. Don't overtighten.
For the easiest assembly, place the assembled top portion on its side, so panels (D) and (G) are lying on a flat surface.


2 × 12




12. Press cam locks into all remaining cam holes on panels (A), (B), (C), and (D). Align the base panel's (I) cam lock screws with the holes and cam locks in panels (A), (B), (C), and (D). Press the base panel into the assembly. Tighten all cam locks with the screwdriver.

Important! Once the cart is assembled, check all the cam locks to make sure they are securely tightened.

3 ×12 4 ×2 5 ×2




13. Use screws (#3) to attach the casters (#4) and locking casters (#5) to the predrilled holes in the base panel (I). The casters (#4) should be attached on the panel (D) side and the locking casters (#5) on the panel (C) side.




14. Place grid panels (J) into the slots in the notched panels.

Caster Operation



- Press the foot lock down to lock the caster.



- Pull the lock up to unlock the caster.

Specifications

Dimensions (L × H × D)	30.2 × 30.25 × 16.1 in. (76.7 × 76.8 × 40.8 cm)
Weight	48 lb. (21.6 kg)
Features	Locking casters
Color	Black
Material	Particle board
Number of compartments	18

One-Year Limited Warranty

This Impact product is warranted to the original purchaser to be free from defects in materials and workmanship under normal consumer use for a period of one (1) year from the original purchase date or thirty (30) days after replacement, whichever occurs later. The warranty provider's responsibility with respect to this limited warranty shall be limited solely to repair or replacement, at the provider's discretion, of any product that fails during normal use of this product in its intended manner and in its intended environment. Inoperability of the product or part(s) shall be determined by the warranty provider. If the product has been discontinued, the warranty provider reserves the right to replace it with a model of equivalent quality and function.

This warranty does not cover damage or defect caused by misuse, neglect, accident, alteration, abuse, improper installation or maintenance. EXCEPT AS PROVIDED HEREIN, THE WARRANTY PROVIDER MAKES NEITHER ANY EXPRESS WARRANTIES NOR ANY IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. This warranty provides you with specific legal rights, and you may also have additional rights that vary from state to state.

To obtain warranty coverage, contact the Impact Customer Service Department to obtain a return merchandise authorization ("RMA") number, and return the defective product to Impact along with the RMA number and proof of purchase. Shipment of the defective product is at the purchaser's own risk and expense.

For more information or to arrange service, visit www.impactstudiolighting.com or call Customer Service at 212-594-2353.

Product warranty provided by the Gradus Group.

www.gradusgroup.com

Impact is a registered trademark of the Gradus Group.
© 2026 Gradus Group LLC. All Rights Reserved.

