

Product overview

Designed for Nikon cameras, the QPro-N trigger controls NEEWER flashes with built-in Q wireless control system. Featuring multiple channels, a stable connection, and quick responsiveness, this compact and portable trigger is perfect for various shooting requirements in all types of photography. The QPro-N can be mounted on Nikon cameras' hotshoes, or connected to another camera's PC port via a PC cable. This trigger also features support for TTL flash and high speed sync (HSS).

Package contents

QPro-N flash trigger ×1  
Manual ×1

Product diagram

Flash Trigger Front

Group buttons  
Press to select  
Double-press to expand

Back button  
(Back to previous)

Dial:  
Turn clockwise for +  
Counterclockwise for -

Function buttons  
(defined by UI)

Short-press the menu button

Test button

Short-press to switch modes

Long-press for 3 seconds to lock

01

Product diagram

USB Type-C firmware upgrade port

2.5mm sync jack

Autofocus-assist beam

Hot shoe

Hot shoe quick lock

Battery compartment (back)

Autofocus-assist beam switch

Power switch

LCD Display

①

②

③

④

⑤

⑥

⑦

⑧

⑨

⑩

① Channel

② Attached to a camera

③ Sound

④ Modeling lamp master control

⑤ High-speed sync

⑥ Battery power

⑦ Group

⑧ Group modeling lamp

⑨ Flash mode

⑩ Function button icon

02

Product diagram

Multiple Group Display

Single Group Display

Menu Display

Multiple Group Zoom Display

03

Set-Up

Battery Installation

Slide open the battery compartment cover on the back of the flash trigger and insert 2 AA batteries (sold separately), ensuring that the positive and negative polarity markings are respected.

Battery Level

Remaining battery level indicator shown on LCD display during use.

| LCD screen battery indicator | Indicates                                                                                                                                                                                         |
|------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 4 bars                       | Full battery                                                                                                                                                                                      |
| 2 bars                       | 50% battery                                                                                                                                                                                       |
| 1 bar                        | 25% battery                                                                                                                                                                                       |
| Empty                        | Low battery. Please replace the batteries.                                                                                                                                                        |
| Flashing                     | The battery power is about to run out. It is recommended to replace the batteries now to avoid misfires or the trigger not working over a larger transmission distance due to insufficient power. |

Note: This battery charge indication only corresponds to AA alkaline batteries; please do not refer to this table as NiMH batteries are of low voltage.

Attaching to a camera

① Turn the hot shoe quick release lock clockwise to the unlocked position as shown in the figure.

② Slide the trigger's base into your camera hot shoe as shown in the figure.

04

Set-Up

③ After mounting on your camera, turn the hot shoe quick release lock counterclockwise to the locked position to use as shown in the figure.

④ Turn the hot shoe quick lock clockwise to the unlocked position as shown in the figure and slide the hot shoe out in the direction of the arrow to remove the flash trigger.

● Turning on/off

Move the power switch to the "ON" position to turn on the remote flash trigger. The status indicator will not light up when doing so.

Note: The power switch should be returned to the off position after use to save power.

05

How to Use the Trigger

● Wirelessly trigger an on-camera speedlite flash

There follows an example demonstrating the use of the NEEWER Z1 flash with the trigger:

- 1.1 Turn off your camera first, then insert the trigger into your camera's hotshoe, turn on the trigger and then your camera.
- 1.2 Long press the <2m/CH> button of the trigger to set channel, group, mode and apply other settings (please check the "Trigger Settings" part of this manual for detailed instructions).
- 1.3 Turn on the Z1 flash, press wireless setting button until the display shows wireless symbol and the slave unit icon <SLAVE>, then press the channel setting button <Ch> to set the flash on the same channel with the trigger. Next press the group setting button <Gr> to set flash on the same group as that of the trigger. (Note: the connection to other models of speedlite flash may differ. Please check their manuals for reference.)
- 1.4 Press your camera shutter to trigger the Z1 flash, and the trigger's "Status Indicator" will flash red.

● Wireless sync of external flash

How to use: Using the Q3 as an example.

- 2.1 Turn off the camera, place the flash trigger on the camera hot shoe mount and turn on both the flash trigger power switch and the camera. (Note: For other models of external flash settings, please follow the corresponding external flash instruction manual.)
- 2.2 Press and hold the <GR/CH> button to set the channel, group, mode and apply settings (see Setting the flash unit for details).

06

How to Use the Trigger

● Wirelessly trigger a Nikon on-camera Speedlite flash

There follows an illustration to show how to connect an SB-5000 flash with the trigger:

- 3.1 Turn off your camera first, then insert the QPro-N trigger into your camera's hotshoe. Turn on the trigger and then your camera.
- 3.2 Long press the <2m/CH> button of the Qpro-N trigger to set channel, press <MENU> and choose <ID> to set wireless ID of the trigger.
- 3.3 Connect the Nikon flash to a Q-N receiver, long press the <TX/RX> button to enter RX mode, then long press the <2m/CH> button on the receiver to set it on the same channel as the QPro-N trigger. Next, press its <MENU> button and choose <ID> to match the trigger's wireless ID.
- 3.4 Turn on the Nikon flash and set it to on-camera flash mode (Note: please refer to the manual of your Nikon flash about this setting).
- 3.5 Press your camera shutter to trigger the Nikon flash. The trigger's "Status Indicator" will flash red.

07

How to Use the Trigger

● Wirelessly trigger a studio strobe

Using a NEEWER S101-300 Pro strobe to demonstrate how to connect:

- 4.1 Turn off your camera first, then insert the trigger into your camera's hotshoe. Turn on the trigger and then your camera.
- 4.2 Long press the <2m/CH> button of the trigger to set channel, group, mode and apply other settings (please check the "Trigger Settings" part of this manual for detailed instructions).
- 4.3 Connect the strobe to a power source and turn it on. Press both the <GR/CH> button and the <S1/S2> button until the screen displays a wireless icon. Long press the <GR/CH> button to make the strobe channel match the trigger channel. Then, short press the <GR/CH> button to make sure the trigger and strobe groups correspond. (Note: the connection method for other strobe models may differ. Please check their manuals for reference.)
- 4.4 Press your camera shutter to trigger the strobe. The strobe and trigger's "Indicator Status" will flash red.

● Wirelessly triggered camera shutter

How to connect:

Two QPro-N triggers are required for connection: one connects to your camera as a receiver and the other as a transmitter.

- 5.1 Turn off your camera first, then connect one end of a shutter release cable to the camera's shutter port and the other end of the cable into the QPro-N receiver's "2.5mm Sync Port". Next turn on the camera followed by the receiver.
- 5.2 Press the receiver's <MENU> button, then rotate the dial to select <SYNC> and set it to "OUT".

08

How to Use the Trigger

● Connection with a 2.5mm sync cable

How to use:

- 6.1 Connect one end of the 2.5mm Sync cable to a speedlite flash's sync port, and other end to a Q-N receiver's sync port.
- 6.2 Long press the <TX/RX> button on the Q-N receiver and enter RX mode. Short press the Q-N receiver's <MENU> and select <SYNC>, then set it to "OUT".
- 6.3 Set the QPro-N transmitter and the Q-N receiver on the same channel and to the same wireless ID. Long press <2m/CH> button to change channel, short press <MENU> and choose <ID> to set wireless ID. (To set mode and other parameters, please check the "Trigger Settings" part of this manual for more detailed instructions.)
- 6.4 Trigger the flash with the QPro-N transmitter.

09

Trigger Settings

● Auto Sleep Mode

1. If no operation is performed within 90 seconds, the trigger will automatically enter standby mode and the LCD display will go dark.
2. Press the <A> button to activate the trigger system. When mounted on a Nikon camera hotshoe, you can also half press camera shutter to activate.

NOTE: To deactivate the auto sleep function, simply press <MENU> to access custom menu setting page, select STBY and set it to OFF.

● Auto Focus (AF) Beam

Place the AF Beam switch in the 'ON' position to emit Auto Focus beam.

When your camera can't focus, the AF beam will automatically light up. Once the camera re-focuses, the AF beam will automatically go off.

● Channel Setting

1. Long press the <2m/CH> button to enter channel setting page.
2. Rotate the dial to select a channel number. Short press the <2m/CH> button to confirm the channel selected.

※ The trigger offers 32 channels to choose from. Please be sure to set the trigger transmitter and receiver on the same channel before firing flashes.

10

Trigger Settings

● Wireless ID Setting

In addition to pairing transmission channels, it is also possible to match the wireless ID to avoid signal interference. A master unit and a slave unit have to be on the same channel and set to the same wireless ID to trigger. Press <MENU> button to enter C.Fn ID sub-menu. Rotate the dial to select the <ID> menu. Then short press <SET> button to make it editable. Finally, rotate the dial to choose a wireless ID value and press button to confirm.

● Mode Setting

1. Short press the <MODE> button to switch between different modes.
2. When the trigger is set as 5 groups (A-E):
- 2.1 When multiple groups are set, you can switch on Multi Flash for each group. Enter a group, select Multi, choose "ON" or "-" to switch on/off.
- 2.2 When multiple groups are set, choose one group or multiple groups, then you can press <MODE> button to switch modes in the order of TTL/M/- for different groups separately or together.
- 2.3 Long press the <MODE> button for 2 seconds until the word "LOCKED" shows on the bottom part of the display. The icon indicates that the trigger is locked and no settings can be changed at this stage. Long press the <MODE> button for 2 seconds to unlock.

● Group Highlighting

Highlight multiple groups or one single group: in multiple group setting, choose a group and press its group letter twice to highlight this group and change settings for this single group.

※ Press the Back button to exit group highlighting page.

11

Trigger Settings

● Set Flash Output

1. When multiple groups are set and in M mode:
- 1.1 Choose one group by pressing its group letter. Then, rotate the dial to change flash output for this group from Min. to 1/1 in increments of 0.1 or 0.3. Press the <A> button to confirm the output value and exit.
- 1.2 Press the <ALL> button to select all groups and make their power output values editable, then rotate the dial to change their output from Min. to 1/1 in increments of 0.1 or 0.3. Press the <ALL> button again to confirm the setting.
2. When one single group is highlighted and in M mode, rotate the dial directly to change the group output from Min. to 1/1 in increments of 0.1 or 0.3. Press the <A> button to confirm the setting.

NOTE: "Min." refers to the minimum output level that is available in M or Multi mode, 1/128(0.1) or 1/256(0.1) respectively based on the setting of C.Fn-STEP. On most on-camera speedlite flashes, the minimum output available is 1/128 or 1/128(0.1), not 1/256 or 1/256(0.1).

● Flash Exposure Compensation Setting

1. When multiple groups are set and in TTL mode:
- 1.1 Choose one group by pressing its group letter. Then rotate the dial to adjust its flash exposure compensation (FEC) level from -3 to 3 in the increment of 0.3. Press the <A> button to confirm the value and exit.
- 1.2 Press the <ALL> button to select all groups and make their FEC values editable, rotate the dial to adjust the FEC level from -3 to 3 in the increment of 0.3. Press <ALL> again to confirm the setting.
2. When one single group is highlighted and in TTL mode, rotate the dial directly to change the group FEC value from -3 to 3 in the increment of 0.3.

12

Trigger Settings

● Multi Flash Setting (Flash Output, Flash Times, and Flash Frequency)

1. When in Multi Flash mode, the screen will not display the TTL or M icon.
2. The three values underneath "Multi" on the display refer to flash output, flash times (Times), and flash frequency (Hz) respectively.
3. Rotate the dial to adjust flash output from Min. to 1/4.
4. Short press the Times button to highlight flash times. Rotate the dial to change its value.
5. Short press the Hz button to highlight flash frequency. Rotate the dial to adjust frequency number.
6. After choosing the required settings, short press the <A> button to exit. Then no item will flash on the display.
7. In the Multi flash sub-menu, when no item is flashing, short press the <A> button to return to main menu.

NOTE: The flash times are subject to both flash output and flash frequency. Flash times you set cannot exceed the maximum value allowed. The flashes transmitted to the receiver are actual flash times and depend also on camera shutter settings.

● Modelling Lamp Setting

1. When multiple groups are set, press the <MOD> button to turn the modelling lamp on or off for all groups of strobes.
2. When only one group is set, or select one group from within the multiple groups setting by pressing its group letter, press the <MOD> button to turn the modelling lamp on or off for this group of strobes.

13

Trigger Settings

3. Short press a group letter to highlight this group to change its strobe settings: short press the <MOD> button to adjust modelling lamp brightness of this group of strobes.

(NOTE: The strobe models that support the turning on/off of the modelling lamp in one, single group include the Z1.S101 PRO, Z2 series, the Q4 PRO and Q3 flash strobe. The future NEEWER flash strobes that feature a modelling lamp will all support this function.)

● Zoom Setting

Short press the <2m/CH> button until the display shows the Zoom value. Select a particular group, then rotate the dial to change its Zoom value from AUTO, 24 to 200. After setting the value required, press the <A> button to return to menu page.

● High-Speed Sync Settings

1. High-speed sync: press the <SYNC> button. The symbol will display on the LCD panel. Set the shutter sync speed to 1/320s (auto FP) or 1/250s (auto FP) in the Nikon camera settings. Turn the camera dial to adjust the shutter speed which can be set to or more than 1/250s. The shutter speed can be checked through the camera viewfinder which will confirm whether the FP high-speed function is in use. If the shutter speed is set at or is higher than 1/250s, it means the high-speed sync function is active.
2. Second Curtain Sync: To synchronise the rear curtain shutter, press and hold <A> on your Nikon camera. Turn the main control dial until the rear curtain flash mode appears in the control panel, then set the camera shutter.

14

Trigger Settings

● Audible Alert Setting

Press the <MENU> button to enter C.Fn BEEP page, rotate the dial to choose <BEEP>, then press the <SET> button. You can now rotate the dial to choose "ON" or "OFF" to activate / deactivate this audible alert. Press the <A> button to return to menu page.

● Sync Port Setting

1. Press the <MENU> button to enter C.Fn SYNC page, rotate the dial to choose <SYNC>, then, press the <SET> button. You can now rotate the dial to choose "IN" or "OUT". Short press the <MENU> button to return to the menu page.
- 1.1 Choose "IN" to transmit signal to trigger flashes.
- 1.2 Choose "OUT" to transmit signals to trigger camera shutter or to trigger speedlite flashes via PC sync.

15

Trigger Settings

● Shoot Settings

Press <MENU> to enter C.Fn SHOOT, press <SET> to choose <ON> or <OFF>, then press <MENU> to return to the menu page.

ON: to activate single contact control mode, suitable for non-Nikon cameras. In M and Multi flash mode, the master unit can only trigger the slave unit to fire flashes.

OFF: to disable single contact control mode, suitable for Nikon cameras. When pressing the camera shutter, the master unit will not only trigger the slave unit, but also transmit flash settings.

● Restore Factory Settings

On the menu page, long press the "SYNC" button and the "ALL" button at the same time until the display shows "RESET" to indicate that the trigger has been restored to factory settings.

16

Trigger Settings

● C.Fn: Set Custom Functions

The different custom functions of this product are categorised below. Please check the table to change the settings as required.

| Custom functions symbol | Functions                    | Settings symbol            | Settings and meanings                                                                                                |
|-------------------------|------------------------------|----------------------------|----------------------------------------------------------------------------------------------------------------------|
| STBY                    | Sleep                        | ON/OFF                     | Enable/disable                                                                                                       |
| BEEP                    | Buzzer                       | ON/OFF                     | Enable/disable                                                                                                       |
| LIGHT                   | Backlight duration           | 12sec<br>ON/OFF            | Turn off automatically after 12 seconds<br>Always on/always off                                                      |
| SYNC                    | Sync jack                    | IN<br>OUT                  | Set the QPro-N to trigger flash<br>Output triggering signal or control shutter signal                                |
| LCD                     | LCD contrast ratio           | -3+3                       | Selectable value of contrast ratio                                                                                   |
| SHOOT                   | Single-point triggering mode | ON<br>OFF                  | Single-point triggering mode on<br>Single-point triggering mode off                                                  |
| DIST                    | Triggering distance          | 0-30M<br>1-100M            | 0-30m triggering<br>1-100m triggering                                                                                |
| ID                      | Wireless ID                  | OFF<br>01-99               | Close<br>Any number from 1 to 99 can be selected                                                                     |
| STEP                    | Flash power output           | 1/128 (0.3)<br>1/256 (0.1) | Minimum output is 1/128 (with a step increment of 0.3)<br>The minimum output is 1/256 (with a step increment of 0.1) |

※ When the single-point triggering mode ("SHOOT") is turned on, the product can only send flash triggering signals which will disable other functions.

17

Compatible models

1. Compatible flash models

Compatible with NEEWER 2.4G flashes with built-in Q wireless control system, including NW420-N, Z1-N, S101-300W Pro, S101-400W Pro, Q3, NW655-N, Q-N (off camera trigger), and later flash models with built-in Q wireless control.

※ Supported functions: all functions that both QPro and the flash have.

2. Compatible camera models

Compatible with the majority of Nikon branded cameras (for TTL, M, Multi flash mode), and also works with other models of camera using the PC port (can only be used in M mode).

The tested compatibility list is as follows:

D4, D5, D60, D70S, D90, D100, D200, D300S, D300, D500, D610, D700, D750, D780, D800, D810, D850, D3100, D3200, D3300, D3400, D3500, D5000, D5100, D5200, D5300, D5600, D7000, D7100, D7200, D7500, Z5, Z6, Z6ii

※ The camera models listed above only includes the ones that we have lab tested on the trigger and doesn't include all compatible Nikon cameras. The trigger may be compatible with other models not specified here and will be updated further based on user feedback received.

Firmware upgrade

The firmware of this product can be upgraded through the USB port. The latest software announcements and instructions will be published on the official website.

※ This product does not come with a USB cable for the firmware upgrade. Please purchase separately. The USB port of this product is a Type-C port. Please use only a USB Type-C cable.

※ Upgrading the firmware requires NEEWER Firmware software support. Please download and install "NeeWER Firmware Update", and then select the corresponding firmware file before updating.

※ As the product is undergoing a firmware upgrade, please refer to the latest electronic version of the manual.

18

Causes for misfires and solutions

1. External environment 2.4GHz signal interference (such as wireless base station, 2.4GHz Wi-Fi router, Bluetooth device, and others)– Please adjust the channel ("CH") settings of the flash trigger (recommended +10), find a channel without interference, or turn off other 2.4GHz devices while using this product.

2. Please check whether your flash has recycled to full power or the recycling rate has kept up with the continuous shooting speed (the flash ready lamp is already on), and that the device's overheat protection hasn't activated, or is operating abnormally. Please lower the power output of the flash. If it is in TTL mode, you can try changing to M mode. (In TTL mode, a pre-flash is required.)

3. Check whether the distance between the flash trigger and the flash is too close (distance <0.5m)– Please turn on the "near-range wireless mode" on the flash trigger and set "C.Fn-DIST" to "0-30m".

4. Check whether the flash trigger and the receiver unit are running low on power– Please replace the batteries (1.5V disposable alkaline batteries are recommended).

Notes

1. If the flash trigger is subject to a strong impact or vibration, it may malfunction.
2. This product is not waterproof. If it is immersed in water or placed in a high humidity environment, it may malfunction. The development of rust on internal components resulting from such conditions may cause irreparable damage.
3. Sudden changes in temperature, such as entering or leaving a warm building on a cold day with the flash trigger exposed in the air, may cause condensation inside the product. To avoid condensation, please put the flash trigger in a handbag or plastic bag in advance to prevent sudden temperature changes.
4. Strong static electricity or strong magnetic fields generated by radio broadcast transmitters and other equipment may interfere with the normal operation of this product.
5. If you can't trigger your flash or take pictures correctly, please check whether the battery is installed correctly and whether the flash trigger's power switch is turned on; whether the flash trigger is set to the same channel; whether the cable or hot shoe is correctly and firmly connected in place; whether the function mode settings are correct.
6. If the camera can only shoot but cannot focus, please check whether the camera body or lens is set to manual focus (MF) and set it to auto focus (AF).
7. If your flash trigger is triggered by other wireless flash systems, simply change the channel settings of the trigger to counter interference.

19

Specifications

| Model                           | QPro-N                                                                                                            |
|---------------------------------|-------------------------------------------------------------------------------------------------------------------|
| Built-in Wireless System        | 2.4GHz frequency                                                                                                  |
| Modulation Mode                 | MSK                                                                                                               |
| Channels                        | 32                                                                                                                |
| Wireless ID                     | 01-99                                                                                                             |
| Group                           | A, B, C, D, E (5 groups)                                                                                          |
| TTL Autoflash                   | 1-TTL                                                                                                             |
| Power Supply                    | 2 AA batteries                                                                                                    |
| Manual/ Stroboscopic Flash      | Yes                                                                                                               |
| High-speed/ Second-curtain sync | Yes                                                                                                               |
| Exposure compensation/lock      | Yes                                                                                                               |
| Focus Assist                    | Yes                                                                                                               |
| Modeling Lamp                   | The modeling lamp of the flash is controlled by the trigger                                                       |
| Buzzer                          | The buzzer of the flash is controlled by the trigger                                                              |
| Wireless Shutter                | The receiver can control camera shooting through the 2.5mm sync jack                                              |
| Zoom Settings                   | The focus value of the flash is adjusted through the transmitter                                                  |
| Firmware Update                 | Upgrade the firmware through the USB Type-C port                                                                  |
| Memory Function                 | Changes to settings are automatically saved after 2 seconds and automatically restored after powering it on again |
| Display Screen                  | FSFN dot-matrix screen                                                                                            |
| Frequency Range                 | 2412.75MHz-2464.25MHz                                                                                             |
| Maximum radio-frequency power   | 3.76dBm                                                                                                           |

20