


Godox



iM30<sup>Pro</sup>

Instruction Manual

## Important Safety Instructions

This product is professional photographic equipment, intended for professional use only.

Remove all transport protection materials and packaging before use.

Strictly observe the following safety precautions during use:

1. Read this manual thoroughly before use and strictly observe the safety instructions. Failure to do so may result in death, serious injury, product damage, or other property loss.
2. High voltage exists inside the flash unit during operation. The capacitor remains charged for a certain period even after powering off.
3. This product is professional lighting equipment. Keep out of reach of children. Adult supervision is required when children are present to prevent injury caused by collision or misuse.
4. This is not an ordinary light fixture. Do not use it for general illumination. People with eye injuries or sensitivity should avoid using or looking directly at this flash.
5. Do not touch the flash head or surrounding metal parts during use to avoid burns.
6. Do not stare directly at the flash tube at close range (especially for infants), otherwise it may cause visual impairment in a short time. If you experience visual discomfort, stop using immediately and seek medical attention.
7. Do not use damaged equipment. Wait for professional repair personnel to inspect and confirm it is safe before use.
8. Stop using immediately if the product casing is cracked due to drops, squeezing, or strong impact, to avoid electric shock from touching internal electronic components.
9. This device is NOT waterproof. Strictly do not immerse in water or other liquids. Install in a dry, well-ventilated location. Do not use in rainy, damp, dusty, or overheated environments. Do not place objects on top of the device or allow liquids to flow into it.
10. Do not disassemble this product without authorization. Malfunctions must be inspected and repaired by Godox or an authorized service center.
11. Ensure the device has cooled down completely and disconnect the power cord (if applicable) before storage. Store in a carrying case or a dry, well-ventilated place.

12. Strictly do not use or store the device near flammable solvents or gases such as alcohol, gasoline, methane, or ethane.
13. Do not use in environments with a risk of explosion.
14. Use only original accessories approved by Godox to avoid fire, electric shock, or personal injury.
15. Clean with a dry, soft cloth only. Strictly do not use a wet cloth, otherwise the device may be damaged.
16. This manual is based on strict testing. Design and specifications are subject to change without notice. Visit our official website for the latest digital manual and product information.
17. Must be charged using a dedicated charger according to the instructions, within the specified voltage and temperature range.
18. This product is powered by a lithium battery. Lithium batteries have a limited lifespan, typically 300 - 500 complete charge-discharge cycles. The maximum capacity will gradually decrease with usage and time, which is normal. Check the battery condition regularly. If the charging time increases significantly or the runtime decreases noticeably, please consider replacing the battery.
19. Charge the battery to approx. 50% before storage. Charge the battery to approx. 50% at least every 6 months. Failure to perform maintenance charges may result in over-discharge, leading to permanent performance degradation or battery failure. Detachable batteries should be stored separately. Storage temperature: 0°C to 40°C.
20. This product is powered by a lithium battery. Please note the following:
  - Do not disassemble, crush, or puncture the battery.
  - The battery is not waterproof. Do not immerse it in water or expose it to mist.
  - Avoid short-circuiting the battery contacts.
  - Do not expose the battery to fire or heat.
  - Do not expose the battery to temperatures above 60°C.
  - Keep out of reach of children.
  - Protect the battery from excessive shock or vibration.
  - Do not use damaged batteries.
  - If the battery leaks, avoid contact with the leaking fluid.

- If the fluid comes into contact with your eyes, rinse immediately with water for at least 15 minutes. Lift your eyelids to ensure thorough rinsing and seek medical attention immediately.
21. Replace the battery only according to the instructions in this manual. Using a battery not specified in this manual may result in overheating, fire, or explosion.
  22. Dispose of used batteries in accordance with local law and regulations.
  23. The warranty period for the device is 1 year. Consumables (e.g., batteries, adapters, power cords) are not covered by the warranty.
  24. Unauthorized repairs will void the warranty and incur repair fees.
  25. Malfunctions caused by improper operation are not covered by the warranty.

## Foreword

Thank you for purchasing !

The iM30Pro features a single-contact hot shoe design, making it compatible with Fujifilm, Canon, Nikon, Olympus, and Sony cameras. With simplified button operations, it is suitable for entry-level photography.

## Main Features

**Dual Mode Switching:** Supports AUTO automatic flash / M manual flash.

**Adjustable Flash Head:** 45°, 60°, 75°, 90° four-level angle adjustment.

**Optical Triggering:** Supports S1 / S2 optical triggering modes, enables off-camera triggering.

**Powerful Battery Life:** Built-in 7.4V/700mAh lithium battery, approx. 550 full-power flashes.

**Fast Recycling:** Full-power output recycling time approx. 1.5 seconds.

**Magnetic Ecosystem:** Flash head integrates magnetic mount, quick compatibility with Godox magnetic light modifiers.

## What's Inside



Flash Unit ×1



USB-C Cable×1




Instruction Manual×1

## Separately Sold Accessories



MA01  
Flash Magnetic Accessory

## Names of Parts



1. Photocell Sensor
2. Flash Head
3. Magnetic Mount
4. Auto Metering Sensor
5. Sync Cord Jack
6. USB-C Charging Port

7. Select Dial
8. < SET > Button
9. < M/≡ > Mode / Menu Button
10. < 1/0 > Test / Power Button
11. Hot Shoe Locking Ring
12. Single Contact Hot Shoe

## Power Switch

**Power On:** Press and hold the < 4/⏻ > Button. When the unlock icon appears on the screen, turn the Select Dial to unlock.

**Power Off:** Press and hold the < 4/⏻ > Button until the screen turns off.

### • Battery Level Indicator

The battery icon is displayed in the top right corner of the screen. Refer to the table below for detailed information:

Icon	Status
3 Bars	Full Power
2 Bars	Medium Power
1 Bars	Low Power
No Bars	Low Battery. Please charge promptly.
Full-screen Low Battery Icon	The device will shut down. Be sure to complete charging within 10 days to prevent the battery from irreversible performance degradation caused by over-discharge.

### • Charging

Use the included USB-C cable to connect the device to a power adapter (sold separately) for charging.

## Flash Mode

Short press the < M/☰ > Button to switch between M and AUTO modes.

- **M Manual Flash**

Manually set the flash output. This mode supports S1 / S2 Photocell triggering.

Turn the Select Dial to set the output power.

Range: 1/128 - 1/1

Step: 1/3



**Photocell (S1 / S2):** Detects ambient light changes via the optical sensor and triggers the flash. Press and hold the < M/☰ > button to access the menu and enable S1/S2 mode.

Mode	Applicable Scenarios	Trigger Conditions
S1 Standard Photocell	M Manual flash environment	Triggers in sync with the first flash of the main flash
S2 Pre-Flash Suppression	TTL automatic flash environment	Ignores the TTL pre-flash and triggers on the main flash

### M Mode Practical Table:

Shooting Distance(m) Aperture Value GN Value	2	2.8	4	5.6	8	11	16
60	30	21.4	15	10.7	7.5	5.4	3.8
42.4	21.4	15	10.7	7.5	5.4	3.8	2.7
30	15	10.7	7.5	5.4	3.8	2.7	1.9
21.2	10.7	7.5	5.4	3.8	2.7	1.9	1.3
15	7.5	5.4	3.8	2.7	1.9	1.3	0.9
10.6	5.4	3.8	2.7	1.9	1.3	0.9	0.7
7.5	3.8	2.7	1.9	1.3	0.9	0.7	0.5
5.3	2.7	1.9	1.3	0.9	0.7	0.5	0.3
3.8	1.9	1.3	0.9	0.7	0.5	0.3	0.2
2.7	1.3	0.9	0.7	0.5	0.3	0.2	0.1
1.9	0.9	0.7	0.5	0.3	0.2	0.1	
1.3	0.7	0.5	0.3	0.2	0.1		
1	0.5	0.3	0.2	0.1			

ISO value GN Value Flash Power	50	100	200	400	800	1600
1	10.6	15	21.2	30	42.4	60
1/2	7.5	10.6	15	21.2	30	42.4
1/4	5.3	7.5	10.6	15	21.2	30
1/8	3.8	5.3	7.5	10.6	15	21.2
1/16	2.7	3.8	5.3	7.5	10.6	15
1/32	1.9	2.7	3.8	5.3	7.5	10.6
1/64	1.3	1.9	2.7	3.8	5.3	7.5
1/128	1	1.3	1.9	2.7	3.8	5.3


- **AUTO Auto Flash**

The flash measures light via the Light Sensor Window and automatically control flash output. Ensure the ISO and Aperture (F) settings on the flash match the camera settings for correct exposure.

Short press the <SET> Button and turn the Select Dial to set ISO / F values. The bottom left of the screen displays the current effective flash range.

ISO Range: 25 - 1600

F Range: 1.4 - 45






### AUTO Mode Practical Table

Shooting Distance (m) Aperture	ISO										
	25	32	40	50	64	80	100	125	160	200	
1.4	0.8~3.9	0.9~4.4	1.2~5.0	1.5~5.5							
1.6	0.7~3.4	0.8~3.9	0.9~4.4	1.2~5.0	1.5~5.5						
1.8	0.6~3.1	0.7~3.4	0.8~3.9	0.9~4.4	1.2~5.0	1.5~5.5					
2	0.5~2.7	0.6~3.1	0.7~3.4	0.8~3.9	0.9~4.4	1.2~5.0	1.5~5.5				
2.2	0.5~2.4	0.5~2.7	0.6~3.1	0.7~3.4	0.8~3.9	0.9~4.4	1.2~5.0	1.5~5.5			
2.5	0.5~2.2	0.5~2.4	0.5~2.7	0.6~3.1	0.7~3.4	0.8~3.9	0.9~4.4	1.2~5.0	1.5~5.5		
2.8	0.4~1.9	0.5~2.2	0.5~2.4	0.5~2.7	0.6~3.1	0.7~3.4	0.8~3.9	0.9~4.4	1.2~5.0	1.5~5.5	
3.2	0.4~1.7	0.4~1.9	0.5~2.2	0.5~2.4	0.5~2.7	0.6~3.1	0.7~3.4	0.8~3.9	0.9~4.4	1.2~5.0	
3.5	0.4~1.5	0.4~1.7	0.4~1.9	0.5~2.2	0.5~2.4	0.5~2.7	0.6~3.1	0.7~3.4	0.8~3.9	0.9~4.4	
4	0.4~1.3	0.4~1.5	0.4~1.7	0.4~1.9	0.5~2.2	0.5~2.4	0.5~2.7	0.6~3.1	0.7~3.4	0.8~3.9	
4.5	0.4~1.2	0.4~1.3	0.4~1.5	0.4~1.7	0.4~1.9	0.5~2.2	0.5~2.4	0.5~2.7	0.6~3.1	0.7~3.4	
5	0.4~1.1	0.4~1.2	0.4~1.3	0.4~1.5	0.4~1.7	0.4~1.9	0.5~2.2	0.5~2.4	0.5~2.7	0.6~3.1	
5.6	0.4~1.0	0.4~1.1	0.4~1.2	0.4~1.3	0.4~1.5	0.4~1.7	0.4~1.9	0.5~2.2	0.5~2.4	0.5~2.7	
6.3		0.4~1.0	0.4~1.1	0.4~1.2	0.4~1.3	0.4~1.5	0.4~1.7	0.4~1.9	0.5~2.2	0.5~2.4	
7.1			0.4~1.0	0.4~1.1	0.4~1.2	0.4~1.3	0.4~1.5	0.4~1.7	0.4~1.9	0.5~2.2	
8				0.4~1.0	0.4~1.1	0.4~1.2	0.4~1.3	0.4~1.5	0.4~1.7	0.4~1.9	
9					0.4~1.0	0.4~1.1	0.4~1.2	0.4~1.3	0.4~1.5	0.4~1.7	
10						0.4~1.0	0.4~1.1	0.4~1.2	0.4~1.3	0.4~1.5	
11							0.4~1.0	0.4~1.1	0.4~1.2	0.4~1.3	
13								0.4~1.0	0.4~1.1	0.4~1.2	
14									0.4~1.0	0.4~1.1	
16										0.4~1.0	

Shooting Distance (m)	ISO									
	250	320	400	500	640	800	1000	1250	1600	
Aperture										
3.2	1.5~5.5									
3.5	1.2~5.0	1.5~5.5								
4	0.9~4.4	1.2~5.0	1.5~5.5							
4.5	0.8~3.9	0.9~4.4	1.2~5.0	1.5~5.5						
5	0.7~3.4	0.8~3.9	0.9~4.4	1.2~5.0	1.5~5.5					
5.6	0.6~3.1	0.7~3.4	0.8~3.9	0.9~4.4	1.2~5.0	1.5~5.5				
6.3	0.5~2.7	0.6~3.1	0.7~3.4	0.8~3.9	0.9~4.4	1.2~5.0	1.5~5.5			
7.1	0.5~2.4	0.5~2.7	0.6~3.1	0.7~3.4	0.8~3.9	0.9~4.4	1.2~5.0	1.5~5.5		
8	0.5~2.2	0.5~2.4	0.5~2.7	0.6~3.1	0.7~3.4	0.8~3.9	0.9~4.4	1.2~5.0	1.5~5.5	
9	0.4~1.9	0.5~2.2	0.5~2.4	0.5~2.7	0.6~3.1	0.7~3.4	0.8~3.9	0.9~4.4	1.2~5.0	
10	0.4~1.7	0.4~1.9	0.5~2.2	0.5~2.4	0.5~2.7	0.6~3.1	0.7~3.4	0.8~3.9	0.9~4.4	
11	0.4~1.5	0.4~1.7	0.4~1.9	0.5~2.2	0.5~2.4	0.5~2.7	0.6~3.1	0.7~3.4	0.8~3.9	
13	0.4~1.3	0.4~1.5	0.4~1.7	0.4~1.9	0.5~2.2	0.5~2.4	0.5~2.7	0.6~3.1	0.7~3.4	
14	0.4~1.2	0.4~1.3	0.4~1.5	0.4~1.7	0.4~1.9	0.5~2.2	0.5~2.4	0.5~2.7	0.6~3.1	
16	0.4~1.1	0.4~1.2	0.4~1.3	0.4~1.5	0.4~1.7	0.4~1.9	0.5~2.2	0.5~2.4	0.5~2.7	
18	0.4~1.0	0.4~1.1	0.4~1.2	0.4~1.3	0.4~1.5	0.4~1.7	0.4~1.9	0.5~2.2	0.5~2.4	
20		0.4~1.0	0.4~1.1	0.4~1.2	0.4~1.3	0.4~1.5	0.4~1.7	0.4~1.9	0.5~2.2	
22			0.4~1.0	0.4~1.1	0.4~1.2	0.4~1.3	0.4~1.5	0.4~1.7	0.4~1.9	
25				0.4~1.0	0.4~1.1	0.4~1.2	0.4~1.3	0.4~1.5	0.4~1.7	
29					0.4~1.0	0.4~1.1	0.4~1.2	0.4~1.3	0.4~1.5	
32						0.4~1.0	0.4~1.1	0.4~1.2	0.4~1.3	
36							0.4~1.0	0.4~1.1	0.4~1.2	
40								0.4~1.0	0.4~1.1	
45									0.4~1.0	

## Menu Functions

1. Long press the < M/≡ > Button to enter the Menu.
2. Turn the Select Dial to select an item.
3. Short press < SET > and turn the Select Dial to adjust parameters.

Icon	Function	Option	Note
	Photocell	OFF	Function disabled.
		S1	Available in M Mode only.
		S2	
	Auto off	OFF	Function disabled.
		30 min	Auto power off after 30 min of inactivity.
		60 min	Auto power off after 60 min of inactivity.
		90 min	Auto power off after 90 min of inactivity.
	Standby	30 sec	Screen standby after 30 s of inactivity.
		1 min	Screen standby after 1 min of inactivity.
		2 min	Screen standby after 2 min of inactivity.
		3 min	Screen standby after 3 min of inactivity.

## Button Combinations

- **Factory Reset**

With the device powered on, press and hold the < M/≡ > and < 4/⏻ > Buttons to factory reset.

- **Forced Power Off**


With the device powered on, press the < SET > and < 4/⏻ > Buttons simultaneously.

## Other Operation

- **Bounce Flash**

Tilt the flash head to point the flash toward the ceiling or wall. Using large-surface bounce lighting, the light becomes softer, reducing subject shadows and creating natural, textured photography results.

**Adjustable tilt angle:** 45°, 60°, 75°, 90°.



- **Sync Cord Jack Triggering**

Featuring a  $\varnothing 2.5$  mm specification, the Sync Cord Jack accepts a sync cable or trigger plug to fire the flash.

## Technical Data

Product Name	iFlash Camera Flash
Model	iM30Pro
Flash Mode	M (Manual), AUTO (Automatic)
GN (m ISO 100)	15
Flash Output Power	Range: 1/128 - 1/1, Step: 1/3
Flash Times (1/1)	≈ 550
Recycle Time	≈ 0.1 - 1.5 s
Built-in Lithium Battery	7.4 V / 700 mAh
Power Saving	Standby / Auto Power Off supported
Sync Triggering Mode	Hot Shoe, Photocell, 2.5mm Sync Cord
Working Environment	-10°C - 45°C
Dimensions	62 × 64 × 48 mm
Net Weight	≈ 121 g

Note: Specifications and parameters are subject to change without notice.

## Maintenance

**Impact Protection:** The device may malfunction if subjected to strong shocks or vibration.

**Keep Dry:** This product is NOT waterproof. Strictly do not operate with wet hands or use in rainy, damp, or high-humidity environments (e.g., bathrooms).

**Temperature Precautions:** Avoid sudden temperature changes, such as moving from a cold environment to a warm one, which may cause internal condensation. To prevent this, place the device in a protective bag beforehand to allow it to adjust to the temperature change.

## Battery Replacement

This product is designed to allow users to replace the battery using common tools during its lifecycle.

**Warning:** Battery replacement is only recommended when battery performance has degraded significantly.

### Safety Guidelines



1. If liquid enters the device, stop using it immediately and disconnect the power. Remove the battery and allow it to dry in a dry place before proceeding.
2. Use original batteries to ensure safety and performance.
3. Ensure the working environment is dry and dust-free.

## Required Tools


Tool Name	Note
Screwdriver	Standard tool available at hardware stores
Insulating Tape	Used to insulate the terminals of discarded batteries

## Replacement Steps

- 1. Power off:** Turn off the power switch and unplug the charging cable.
- 2. Remove the housing:** Use a Phillips screwdriver to remove the 3 fixing screws on the bottom cover, then open the bottom cover.



- 3. Disconnect:** Carefully separate the battery terminal connector. Do not pull the cable forcefully.
- 4. Install the new battery:** Ensure the connector is oriented correctly, secure it in the original position, and reassemble the housing.



Note: If the device does not start normally, check if the battery connector is properly installed.

### Recycling & Disposal

1. Wrap the battery terminals with insulating tape to prevent short circuits.
2. Comply with local environmental regulations. Dispose of the battery at an authorized recycling point.

## Declaration of Conformity

GODOX Photo Equipment Co.,Ltd. hereby declares that this equipment are in compliance with the essential requirements and other relevant provisions of Directive2014/35/EU,2014/30/EU. They are allowed to be used in all EU member states.

For more information of DoC, Please click this web link:  
<https://www.godox.com/eu-declaration-of-conformity/>

## **FCC Caution**

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

## **IC Warning**

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions:

- (1) This device may not cause interference, and
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

- (1) l'appareil ne doit pas produire de brouillage, et
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

## Warranty

Dear customers, as this warranty card is an important certificate to apply for our maintenance service, please fill in the following form in coordination with the seller and safe-keep it. Thank you!

Product Information	Model	Product Code Number
Customer Information	Name	Contact Number
	Address	
Seller Information	Name	
	Contact Number	
	Address	
	Date of Sale	
Note		

Note: This form shall be sealed by the seller.

### Applicable Products

The document applies to the products listed on the Product Maintenance Information (see below for further information). Other products or accessories (e.g. promotional items, giveaways and additional accessories attached, etc.) are not included in this warranty scope.

## Warranty Period

The warranty period of products and accessories is implemented according to the relevant Product Maintenance Information. The warranty period is calculated from the day (purchase date) when the product is bought for the first time, and the purchase date is considered as the date registered on the warranty card when buying the product.

## How to Get the Maintenance Service

If maintenance service is needed, you can directly contact the product distributor or authorized service institutions. You can also contact the Godox after-sale service call and we will offer you service. When applying for maintenance service, you should provide valid warranty card. If you cannot provide valid warranty card, we may offer you maintenance service once confirmed that the product or accessory is involved in the maintenance scope, but that shall not be considered as our obligation.

## Inapplicable Cases

The guarantee and service offered by this document are not applicable in the following cases:

- ① The product or accessory has expired its warranty period;
- ② Breakage or damage caused by inappropriate usage, maintenance or preservation, such as improper packing, improper usage, improper plugging in/out external equipment, falling off or squeezing by external force, contacting or exposing to the improper temperature, solvent, acid, base, flooding and damp environments, etc;
- ③ Breakage or damage caused by non-authorized institution or staff in the process of installation, maintenance, alternation, addition and detachment;
- ④ The original identifying information of product or accessory is modified, alternated, or removed;
- ⑤ No valid warranty card;
- ⑥ Breakage or damage caused by using illegally authorized, nonstandard or non-public released software;
- ⑦ Breakage or damage caused by force majeure or accident;
- ⑧ Breakage or damage that could not be attributed

to the product itself. Once met these situations above, you should seek solutions from the related responsible parties and Godox assumes no responsibility. The damage caused by parts, accessories and software that beyond the warranty period or scope is not included in our maintenance scope. The normal discoloration, abrasion and consumption are not the breakage within the maintenance scope.

## Maintenance and Service Support Information

The warranty period and service types of products are implemented according to the following Product Maintenance Information:

Product Type	Name	Maintenance Period(month)	Warranty Service Type
Parts	Circuit board	12	Customer sends the product to designated site
	Battery	3	Customer sends the product to designated site
	Electrical parts e.g.battery charger, etc.	12	ustomer sends the product to designated site
Other Items	Flash tube, modeling lamp, lamp body, lamp cover, locking device, package, etc.	No	Without warranty

Godox After-sale Service Call +86-755-29609320(8062)



Wechat  
Official Account

MANUFACTURER: GODOX Photo Equipment Co., Ltd.

Add.: Building 2, Yaochuan Industrial Zone, Shenzhen 518103, China

Tel: +86-755-29609320 (8062) Fax: +86-755-25723423

E-mail: [godox@godox.com](mailto:godox@godox.com) Website: [Godox.com](http://Godox.com)



Copyright © 2026 Godox All Rights Reserved.

Made in China | 705-YM30P0-00