

Motorized Turntable

MT12-360

INSTRUCTIONS



Thank you for choosing Angler.

The Angler MT12-360 Motorized Turntable helps capture 360° product photos with your camera or smartphone. Place your product in the center of the platform and select a continuous direction or use the automatic angles to rotate watches, footwear, and mobile phones. Capture images using the trigger output to your camera or wirelessly with your phone. The remote's simple controls allow you to trigger a shot, select continuous directions, and with a single press, take photos at desired increments.


Precautions

- ▶ Please read all instructions carefully before operating this product.
- ▶ Use this electronic equipment with only the rated voltage on the power supply, as any misuse could risk damage or malfunction.
- ▶ Avoid using this product in any high-moisture environments, as this could also cause damage or malfunction.
- ▶ Do not attempt to disassemble or repair this product. There are components inside that can produce a hazardous electric shock.
- ▶ Keep this product away from water and any flammable gases or liquids.
- ▶ Do not leave the device in a closed vehicle under the sun or in other areas subject to very high temperatures.
- ▶ Handle this product with care.
- ▶ Do not force the turntable's rotation by hand.
- ▶ Clean this product with only a soft, dry cloth.
- ▶ Keep this product away from children.
- ▶ Make sure that this product is intact and that there are no missing parts.
- ▶ All images are for illustrative purposes only.

Overview



Control Panel




Also Included:

- ▶ USB-C to USB-A cable
- ▶ Placemats White, Blue, Black, Orange



Remote



Using the Turntable with Your Mobile Device

1. Turn on your mobile device's Bluetooth settings and look for a new device.
2. Plug in the power cord and search for the turntable's wireless name, which is located on the bottom of the turntable.

Note: When attempting to pair the turntable, a blue light will flicker rapidly at the bottom of the device.

3. After your device is connected, navigate to your mobile camera app. Automatically trigger your camera app by selecting one of the eleven preset angles, or manually trigger it with the remote's shutter trigger button.

Troubleshooting

PROBLEM	SOLUTION
THE CAMERA IS NOT TRIGGERING	MAKE SURE THE TRIGGER CABLE IS CONNECTED TO THE TURNTABLE AND YOUR CAMERA.
THE MOBILE DEVICE NOT CONNECTING	TURN OFF THE TURNTABLE. DISCONNECT AND RECONNECT THE POWER CORD. TURN THE TURNTABLE BACK ON. OPEN YOUR WIRELESS DEVICE SETTINGS. REPEAT UNTIL SUCCESSFUL.

Specifications

TURNTABLE

COLOR	WHITE
MATERIAL	PLASTIC
SUPPORTED COMMUNICATION	IR REMOTE, WIRELESS
VOLTAGE INPUT	100-240 V, 50 / 60 HZ
INPUT POWER	DC 5 V
ROTATION	360°
ROTATION SPEEDS	1.7 TO 4 RPM
ROTATION DIRECTIONS	CLOCKWISE, COUNTERCLOCKWISE
PRESET ROTATION ANGLES	11 (5°, 10°, 15°, 20°, 25°, 30°, 40°, 45°, 60°, 90°, 180°)
TEMPERATURE	23° TO 113° F (-5° TO 45° C)
MAX. WEIGHT CAPACITY	15 LB. (6.8 KG)
TURNTABLE DIAMETER	11.75 IN. (29.8 CM)
HEIGHT	2.25 IN. (5.7 CM)
WEIGHT	2.5 LB. (1.1 KG)

One-Year Limited Warranty

This Angler product is warranted to the original purchaser to be free from defects in materials and workmanship under normal consumer use for a period of one (1) year from the original purchase date or thirty (30) days after replacement, whichever occurs later. The warranty provider's responsibility with respect to this limited warranty shall be limited solely to repair or replacement, at the provider's discretion, of any product that fails during normal use of this product in its intended manner and in its intended environment. Inoperability of the product or part(s) shall be determined by the warranty provider. If the product has been discontinued, the warranty provider reserves the right to replace it with a model of equivalent quality and function.

This warranty does not cover damage or defect caused by misuse, neglect, accident, alteration, abuse, improper installation or maintenance. EXCEPT AS PROVIDED HEREIN, THE WARRANTY PROVIDER MAKES NEITHER ANY EXPRESS WARRANTIES NOR ANY IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. This warranty provides you with specific legal rights, and you may also have additional rights that vary from state to state.

To obtain warranty coverage, contact the Angler Customer Service Department to obtain a return merchandise authorization ("RMA") number, and return the defective product to Angler along with the RMA number and proof of purchase. Shipment of the defective product is at the purchaser's own risk and expense.

For more information or to arrange service, visit www.anglerlights.com or call Customer Service at 212-594-2353.

Product warranty provided by the Gradus Group.
www.gradusgroup.com

Angler is a registered trademark of the Gradus Group.
© 2026 Gradus Group LLC. All Rights Reserved.

