



Mini PRO

MNBM1 User Manual

1.0 GETTING STARTED

Installing the Memory Card

- Insert the memory card into the memory card slot (refer to diagram for correct orientation).
- Do not force the card. It only fits one way.
- Push gently until the card clicks into place.




Charging the Camera

- Connect the USB cable to the USB-C PORT.
- Connect the other end to a power source.
- The STATUS LED glows solid red while charging.
- The light turns off when charging is complete.



2.0 BUTTON OVERVIEW



2.1 BUTTONS FUNCTIONS

POWER / MODE BUTTON

- Press and hold: Power On / Off
- Press: Switch Modes



SHUTTER BUTTON

- Press: Capture Photo
- Press: Start / Stop Video Recording



UP BUTTON

- Press: Toggle Silent Mode
- Press and hold: Turn Fill Light On / Off



DOWN BUTTON

- Press: Change Filters
- Press and hold: Open Settings Menu



3.0 USING THE CAMERA

POWER ON / OFF

- Press and hold the **POWER / MODE BUTTON** to turn the camera on.
- The screen turns on and the camera enters Photo Mode.
- Press and hold the **POWER / MODE BUTTON** again to turn the camera off.

SWITCHING MODES

- Press the **POWER / MODE BUTTON** to cycle through modes.
- Available modes include Photo, Video, and Playback.
- The mode icon changes on the screen as you switch.

TAKING PHOTOS

- In Photo Mode press, the **SHUTTER BUTTON** to capture a photo.
- The image briefly freezes on the screen after capture.
- Keep the camera steady while taking photos.

RECORDING VIDEO

- In Video Mode press, the **SHUTTER BUTTON** to start recording.
- A recording icon and timer appear on the screen.
- Press the **SHUTTER BUTTON** again to stop recording.



3.1 ADDITIONAL FUNCTIONS

USING FILTERS

- Press the **DOWN BUTTON** to cycle through filters.
- Filters apply to both photos and videos.
- The selected filter is applied to the live view on the screen.
- Available filters: *Normal, Pink, Green, Blue, B & W, Retro*



SILENT MODE

- Press the **UP BUTTON** to enable Silent Mode.
- The microphone and sound effects are disabled.
- A mute icon appears on the screen.



USING THE FILL LIGHT

- Press and hold the **UP BUTTON** to turn the Fill Light On or Off.

SOUND RECORDING

- Press and hold the **SHUTTER BUTTON** to enter Sound Recording Mode.
- Press the **SHUTTER BUTTON** to start recording.
- Press the **SHUTTER BUTTON** to stop recording.
- Press the **POWER / MODE BUTTON** to exit Sound Recording Mode.



3.2 SCREEN ICONS EXPLAINED

Photo Mode

Available Photo Count



08456



Battery Status

20M

Current Resolution

2026/05/14 11:03:24

Set Date & Time

PHOTO MODE

Current Shooting Time Counter

Video Mode



00:00:04



Microphone Status

2K

2026/05/14 11:03:24

VIDEO MODE

File Name

File Type

Playback Mode



MOV10009.avi



PLAYBACK MODE

4.0 FILE MANAGEMENT

PLAYBACK MODE

- Press the **POWER / MODE BUTTON** to switch to Playback Mode.
- Use the **UP BUTTON** or **DOWN BUTTON** to browse files.
- Press the **SHUTTER BUTTON** to play or pause video.



DELETING FILES

- In Playback Mode, press and hold the **SHUTTER BUTTON**.
- Select delete options as prompted on the screen.



CONNECTING TO A COMPUTER

- Connect the camera to a computer using the USB cable.
- The camera appears as a removable drive.
- Open the drive to view and transfer files.



WEBCAM MODE

- Remove the memory card.
- Connect the camera to a computer.
- The camera functions as a webcam.

OTG CONNECTION (ANDROID)

- Connect the camera to your phone using an OTG adapter.
- The camera powers on automatically.
- Open your phone's file manager to access files.

AUTOMATIC SHUTDOWN

- The camera turns off automatically after a period of inactivity.
- The camera saves files before shutting down when the battery is low.



RESET

- Insert a pin into the reset hole to restart the camera if it becomes unresponsive.

5.0 MENU SETTINGS

Menu Settings allow you to adjust camera preferences such as resolution, sounds, and system options.

USING THE SETTINGS MENU

- Press and hold the **DOWN BUTTON** to open the Settings Menu.
- Use the **UP BUTTON** and **DOWN BUTTON** to select a setting.
- Press the **SHUTTER BUTTON** to open the setting.
- Use the **UP BUTTON** and **DOWN BUTTON** to adjust the value.
- Press the **SHUTTER BUTTON** to confirm.
- Press the **POWER / MODE BUTTON** to exit the menu.

5.1 SETTINGS

PHOTO RESOLUTION

- 20MP, 12MP, 5MP

VIDEO RESOLUTION

- 2K, 1080P

DATE & TIME STAMP

- On, Off

LANGUAGE

AUTO SCREEN OFF

- Off, 1 min, 2 min, 3 min

AUTO POWER OFF

- Off, 1 min, 2 min, 3 min

SPEAKER VOLUME

- 0, 1, 2, 3

FORMAT MEMORY CARD

- Cancel, Execute

DATE & TIME SETUP

- Use the **UP BUTTON** and **DOWN BUTTON** to change values
- Press the **SHUTTER BUTTON** to move between fields

FACTORY RESET

- Cancel, Execute

FIRMWARE VERSION

6.0 WARRANTY INFORMATION

Your Minolta product is covered by a limited one-year warranty from the original date of purchase against defects in materials and workmanship.

At its discretion, Elite Brands Inc. will repair or replace a defective product covered under this warranty. Proof of purchase is required for warranty service.

This warranty does not cover:

- Batteries, flash equipment, or accessories not manufactured by Elite Brands Inc.
- Damage caused by accident, misuse, abuse, impact, sand, dirt, water, or other liquids.
- Damage resulting from failure to follow operating instructions.
- Products that have been modified or serviced by unauthorized parties.

This warranty applies only to products distributed in the United States by Elite Brands Inc. and purchased through authorized dealers. Products obtained through unauthorized dealers, distributors, or sellers are not covered.

Except as expressly stated above, Elite Brands Inc. makes no other warranties, express or implied, including any implied warranties of merchantability or fitness for a particular purpose. Elite Brands Inc. shall not be liable for any incidental, consequential, or special damages arising from the use of this product.

Some states do not allow certain warranty limitations or exclusions, so these limitations may not apply to you. This warranty gives you specific legal rights, and you may also have other rights that vary by state.

PRODUCT REGISTRATION

Register your product and view the complete warranty policy at:

www.minoltadigital.com/warranty

Minolta is a registered trademark of JMM Lee Properties, LLC and is used under license.



SCAN QR
CODE TO
REGISTER
THE
WARRANTY



For a detailed overview of advanced features,
creative options, and other functions, please
refer to the instruction manual.

For quick access to product
information, scan this QR code.

