

WPM-20R **WIRELESS** PRESENTER

With Mouse Control and Laser Pointer



Thank you for choosing Xcellon.

The Xcellon WPM-20R is a handheld wireless controller that provides users with the flexibility to move around freely while presenting a PowerPoint or Keynote slideshow. This innovative tool features a powerful laser pointer and is designed with numerous special functions that imitate keyboard and mouse commands. Users can accurately control the cursor, right- or left-click on objects, navigate to the next or previous slide, draw on the screen with a pen tool, and erase it with the eraser tool. Special functions built into the Presenter allow you to pause the slide show while having the option of fading to a white or black screen. All of these features are built into a light, compact, and ergonomically designed tool that is comfortable to hold and easy to use throughout lengthy presentations.

The Presenter operates on a strong 2.4 GHz radio signal with low interference for precise control of your computer at up to 65' (19.8 m). It offers plug-and-play technology for Mac OS and Windows computers. Inserting the included USB receiver into your computer's USB port is the only setup necessary.

Precautions

- » Please read and follow the instructions in this manual for proper use of this device.
- » Keep this product away from water and flammable gases or liquids.
- » Use a soft, slightly moistened cloth when cleaning. Do not use solvents or abrasive substances.
- » This product has no serviceable parts.
- » Do not open this device for maintenance.



Important! This product emits a Class II laser. Do not stare into the beam. The laser beam can cause permanent damage to eyes. Keep this device away from children.

Overview

Front

- 1 PC (PowerPoint): Pen Tool
Mac (Keynote): Switch Presenter Display
- 2 Pause, fade to black screen
- 3 Pause, fade to white screen
- 4 Right-click
- 5 Navigation
- 6 Mode selector
- 7 LED indicator
- 8 PC (PowerPoint): Eraser Tool
Mac (Keynote): Show/Hide Cursor
- 9 Play slideshow
- 10 Stop slideshow

11 Left-click

12 Toggle mouse control on/off

13 Laser pointer


Rear

14 Battery compartment

15 Receiver compartment

Also Included

- » USB Nano Receiver
- » USB extension cable
- » Carrying case
- » AAA batteries (×2)
- » User manual



Getting Started

1. Locate the battery compartment on the back of the Presenter.
2. Slide open and remove the battery compartment door.
3. Remove the USB receiver from the battery compartment and plug it into a powered USB port on your computer.
4. Insert two fresh AAA batteries in the orientation indicated by the illustration within the compartment.
5. Slide the battery compartment door back into place. You may hear a slight click, indicating the door has been securely closed.
6. Press any button on the Presenter to turn it on.



Important! When replacing batteries, replace both at the same time. Do not mix types or brands or use old and new batteries together. This could damage the device.

The Extension Cable

Electronic interference can occur when there is electronic equipment between the Presenter and the USB receiver. Simply plugging the USB receiver into the back of a desktop computer can affect the performance of the Presenter.

If there is electronic interference and your Presenter isn't responding, follow these steps:

1. Insert the extension cable into the powered USB socket in your computer.
2. Plug the receiver into the extension cable.
3. Place the USB receiver where there is a clearer path to the Presenter, for example on top of the computer case.

Using the Presenter

The LED Indicator

The LED indicator lets you know the status of the Presenter:

- Slow blink: Presenter not connected.
- Fast blink: Battery power is low.
- LED constant on: Presenter connected in PC PowerPoint mode.
- LED off: Presenter connected in Mac Keynote mode.

When the battery is low, the LED will blink rapidly. The Presenter will automatically turn off when the battery power is very low.



Note: After a few minutes of inactivity, the Presenter automatically shuts off. To wake the Presenter, push any button and the LED will come on briefly and then proceed to display the current mode.

Mouse Control

To use the mouse control, point the Presenter at the screen and press the Mouse Control button to toggle to mouse mode.

Use small movements of your wrist to control the mouse and assure smooth cursor tracking.

Use the Left-Click and Right-Click buttons to perform the same operations as you would with a mouse.

If the cursor becomes misaligned:

1. Position the cursor in the center of the screen and press the Mouse Control button to switch the mouse off.
2. Reposition the Presenter so that it is pointing at the center of the screen and press the Mouse Control button to switch the mouse on. The cursor will now be aligned.

Presentation Features

To use the advanced features of the Presenter when using PowerPoint or Keynote follow these steps:

1. Press the mode selector [ ] to choose the computer you are using.
 - When PowerPoint is selected (Windows only), the LED indicator is on.
 - When Keynote (Mac OS) is selected the LED indicator is off.
2. Open PowerPoint or Keynote on the computer and open your presentation.
3. Press the Play button [] to launch the slide show.

Press the navigation buttons to move to the next or previous slide.

Press the Fade to White [] or Fade to Black [] buttons to pause the slide show and create a blank screen.

Press the Fade to White or Fade to Black button again to resume the slide show.

Press the Stop button [] to end the slide show.

The Laser Pointer

To use the laser pointer, press and hold the laser button. Releasing the button turns the laser pointer off.

The Pen and Erase Tools (Windows PowerPoint only)

1. Press the Pen [] or Eraser [] button to switch the cursor to the corresponding tool.
2. Press and hold the Left-Click button to draw or erase on the screen.

You can also single-click with the eraser tool to erase individual drawings from the screen.

To return to the cursor from the pen or eraser, press and hold the Pen or Eraser button for three seconds.

Switch Presenter Display (Mac OS Keynote only)

Press the Switch Presenter Display button [] button in Keynote to swap the position of the presenter display and the secondary display.

Show/Hide the Cursor (Mac OS Keynote only)

Press the Show/Hide Cursor [] button to hide the cursor during your slide presentation. Press the [] button again and the cursor will return to the screen.

Troubleshooting

Problem	Solution
My computer is not responding to the Presenter.	• Make sure the batteries have power and are installed in the correct orientation. • Make sure the receiver is fully plugged into your computer's USB port. • Remove and reseal the receiver in your computer's USB port. • There may be interference with the signal. Use the extension cable to move the receiver to a spot where there is less interference.

Specifications	
Receiver	Nano style
Connection port	USB port
Transmission mode	GFSK 2.4 GHz, up to 65' (19.8 m)
Transmission power	Less than +4 dB
Power	AAA battery (×2)
Sleeping current class 1	50 μ A
Operation voltage	3 V
Operating current	<15 mA
Extension cable length	16.9" (43 cm)
Weight (including battery)	2.3 oz. (65 g)
Dimensions (D × W × H)	5.2" × 1.6" × 0.9" (13.2 × 4 × 2.2 cm)

One-Year Limited Warranty

This Xcellon product is warranted to the original purchaser to be free from defects in materials and workmanship under normal consumer use for a period of one (1) year from the original purchase date or thirty (30) days after replacement, whichever occurs later. The warranty provider's responsibility with respect to this limited warranty shall be limited solely to repair or replacement, at the provider's discretion, of any product that fails during normal use of this product in its intended manner and in its intended environment. Inoperability of the product or part(s) shall be determined by the warranty provider. If the product has been discontinued, the warranty provider reserves the right to replace it with a model of equivalent quality and function.

This warranty does not cover damage or defect caused by misuse, neglect, accident, alteration, abuse, improper installation or maintenance. EXCEPT AS PROVIDED HEREIN, THE WARRANTY PROVIDER MAKES NEITHER ANY EXPRESS WARRANTIES NOR ANY IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. This warranty provides you with specific legal rights, and you may also have additional rights that vary from state to state.

To obtain warranty coverage, contact the Xcellon Customer Service Department to obtain a return merchandise authorization ("RMA") number, and return the defective product to Xcellon along with the RMA number and proof of purchase. Shipment of the defective product is at the purchaser's own risk and expense.

For more information or to arrange service, visit www.xcellongear.com or call Customer Service at 212-594-2353.

Product warranty provided by the Gradus Group.

www.gradusgroup.com

Xcellon is a registered trademark of the Gradus Group.

© 2015 Gradus Group LLC. All Rights Reserved.



