

WATSON™

Ni-MH Battery Pack

for Camcorders and
Digital Cameras

Owner's Manual

Please read
before using
this equipment.





The background is a solid yellow color. On the left side, there are two large, white, rounded rectangular shapes that appear to be overlapping or stacked, creating a modern, abstract design.

Thank you for
purchasing the
Watson Ni-MH
Battery Pack.

Browse through
this manual for
information and
useful tips on how
to use your new
equipment.



SAFETY INSTRUCTIONS:

- Charge the battery pack before use. Read your camcorder or digital camera manual for charging instructions.
- When not in use, remove the battery pack from its device and store in a cool, dry place.
- Do not short circuit the terminals. This battery is protected with an internal self-resetting fuse, but short circuits may still cause severe damage to the battery. Be careful where you set the battery down.
- Under no circumstance attempt to open the battery case.
- Do not expose the battery to rain or moisture.

- Keep away from fire. Do not incinerate. Battery may explode in the presence of fire.
- Do not drop battery or expose it to strong shocks.
- Do not use at temperatures below 15°F (-10°C) or above 105°F (40°C). Use of the battery at very high temperatures will activate a safety circuit, disallowing use.
- Running time depends on the power demanded. Stated manufacturer run times are developed in simple laboratory tests of non-stop recording. Real-life use of zoom, automatic focus, tape review, etc., all demand extra power and shorten run time.

TO MAXIMIZE BATTERY PERFORMANCE

- Make sure the battery is fully charged before use.
- Fully discharge before recharging.
- Clean the battery and terminals with a clean, soft, dry cloth.
- The battery may be warm during use or recharging. This is normal.
- Total natural discharge may occur during long storage periods. If the battery pack is not to be used for a long time, perform the following maintenance to extend its life. Fully charge the battery. Discharge the battery on your electronic equipment, then remove and store in a cool, dry place.
- Remove the battery from your equipment when not in use. Some electronic equipment will draw current even when the switch is off.
- When operation time has noticeably shortened, the battery may need to be replaced.

LIMITED ONE-YEAR WARRANTY

Watson provides a limited warranty that this product is free from defects in materials and workmanship to the original purchaser under normal use for a period of one (1) year from the original purchase date or thirty (30) days after replacement whichever occurs later. Our responsibility with respect to this limited warranty shall be limited solely to repair or replacement, at its option, of any product which fails during normal consumer use. To obtain warranty coverage during the Warranty Period, contact your place of purchase ("Seller") to obtain a return merchandise authorization ("RMA") number, and return to Seller the defective product along with proof of purchase and the RMA number. This warranty does not extend to damage or failure which results from misuse, neglect, accident, alteration, abuse, improper installation or maintenance. EXCEPT AS PROVIDED HEREIN, WATSON MAKES NEITHER ANY EXPRESS WARRANTIES NOR ANY IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. This warranty provides you with specific legal rights, and you may also have additional rights which vary from state to state.

The background is a solid dark blue color. It features a repeating pattern of stylized, light blue outlines of keys and locks, arranged in a diagonal, interlocking fashion.

WATSON™

www.poweredbywatson.com