

circo 19" led ring light

CI-LR20

INSTRUCTIONS



anglerTM

Introduction


Congratulations on purchasing the Angler Circo 19" LED ring light.

The Angler Circo CI-LR20 is a compact, lightweight, and portable way to light your subject. It provides 360 degrees of even illumination, ideal for enhancing facial features. It's a great fit for fashion and beauty photography and when used in combination with its diffuser sock, which provides softer lighting. The light also features silent operation, so it can be used for video applications such as hair and make-up tutorial videos.

Precautions


- ▶ Please read all instructions carefully before assembling and operating this product.
- ▶ To avoid damage to this product, be careful not to overtighten or improperly thread any of the threaded fittings.
- ▶ It is recommended to keep the diffuser sock on the array at all times, as the array is quite powerful at close distances without it.
- ▶ The camera bracket is designed to support cameras with small- to mid-size lenses. It may not support the weight of lenses which require a tripod collar to mount.
- ▶ Use this light with only the rated voltage on the power supply, as any misuse could risk damage or malfunction.
- ▶ Avoid using this light in any high-moisture environments, as this could also cause damage or malfunction.

- ▶ To prolong the life of the unit, turn the power off and unplug the light when it is not in use.
- ▶ Do not attempt to disassemble or repair this product. There are components inside that can produce a hazardous electric shock.
- ▶ Keep this product away from water and any flammable gases or liquids.
- ▶ Do not leave the device in a closed vehicle under the sun or in other areas subject to very high temperatures.
- ▶ Make sure this product is powered off when plugging it into a power source.
- ▶ Always remove the power cord by holding the plug—do not pull the cord.
- ▶ Do not stare at the light when it is powered on.
- ▶ Handle this product with care.
- ▶ Clean this product with only a soft, dry cloth.
- ▶ Make sure everything is secure before proceeding.
- ▶ Keep this product away from children.
- ▶ Make sure that this product is intact and that there are no missing parts.
- ▶ All images are for illustrative purposes only.



Also included:

- ▶ Carrying case
- ▶ User manual




Attaching the Diffuser Sock

It is recommended that the diffuser sock is placed on the LED array before adding any other accessories.

1. Lay the LED array faceup on a flat, clean surface.
2. Look for the elastic band on the bottom of the sock, and wrap it around the base of the array. Fit the sock over the ring light so that the dark fabric band is on the inside of the ring. Stretch the elastic edge of the sock over the outside of the ring. Secure the sock with the attached touch-fastener straps.

Note: When fitting the diffuser sock over the array, make sure the touch fasteners are on the outside of the sock.



Attaching the Camera Bracket

The adjustable camera bracket attaches your camera to the ring light for tripod-mounted shooting. It connects to the bottom of the LED array via two Phillips-head screws.

1. Use a Phillips screwdriver (not included) to remove the screws from the bottom of the LED array. Do not remove the larger screw in the middle—only the two on the ends.
2. Position the camera bracket behind the LED array, and align the screw holes on the bracket with the ones on the array.
3. Insert the two Phillips screws, and fasten them with the screwdriver.
4. Make sure the two thumbscrews in the camera bracket are fully tightened. Attach your camera to the camera bracket via the stud on 1/4"-20 set screw. Make sure your camera is secure before continuing to the next step.



5. If necessary, use the two thumbscrews on the back of the camera bracket to adjust the bracket's height.



6. For tripod-mounted shooting, use the socket in the 1/4"-20 set screw to mount the assembly to your tripod. Make sure the assembly is securely mounted to the tripod.



Attaching the Flexible Stand Adapter

The flexible stand adapter incorporates a gooseneck and 5/8" receiver to mount the ring light on a light stand for easy off-camera positioning. Like the camera bracket, it connects to the bottom of the LED array via two Phillips-head screws.

1. Use a Phillips screwdriver (not included) to remove the screws from the bottom of the LED array. Do not remove the larger screw in the middle—only the two on the ends.
2. Align the flexible stand adapter screw holes with the ones on the array.
3. Insert the two Phillips screws, and fasten them with the screwdriver.
4. Loosen the flexible stand adapter's locking knob. Carefully seat the adapter's 5/8" receiver onto your light stand's 5/8" stud, and tighten the adapter's locking knob until secure.
5. Bend the adapter to position the light as needed.



Powering and Dimming the LED

The power supply is rated for multivoltage use at a range of 100–240 V and 50/60 Hz. Before connecting, make sure the array's power switch is set to Off. Connect the AC cord to the AC input on the DC barrel connector. Plug the DC barrel connector into the LED array's DC input, and then plug the power cord into an AC power socket. Plug adapters (not included) may be required in some countries.

The LED is turned on or off via the power switch. Dimming is controlled via the dimming knob, and the light can be dimmed from 0%–100%. Turning the knob clockwise increases brightness. The array is also equipped with a remote socket covered by a rubber cap.



SPECIFICATIONS	
NUMBER OF LED COUNT'S	640
COLOR TEMPERATURE	5500 K
CRI	95
DIMMING RANGE	0%-100%
CAMERA WEIGHT RATING	2 LB. (0.9 KG)
AC POWER SUPPLY	100-240 V AC AT 50/60 HZ; CONVERSION TO DC 14.8-15 V, 1.5 A
DIMENSIONS	(H × W × D): 23" × 19" × 1.75" (58.4 × 48.3 × 4.4 CM)
DIAMETER	19" (48.26 CM)
WEIGHT	2.85 LB. (1.3 KG)

One-Year Limited Warranty

This Angler product is warranted to the original purchaser to be free from defects in materials and workmanship under normal consumer use for a period of one (1) year from the original purchase date or thirty (30) days after replacement, whichever occurs later. The warranty provider's responsibility with respect to this limited warranty shall be limited solely to repair or replacement, at the provider's discretion, of any product that fails during normal use of this product in its intended manner and in its intended environment. Inoperability of the product or part(s) shall be determined by the warranty provider. If the product has been discontinued, the warranty provider reserves the right to replace it with a model of equivalent quality and function.

This warranty does not cover damage or defect caused by misuse, neglect, accident, alteration, abuse, improper installation or maintenance. EXCEPT AS PROVIDED HEREIN, THE WARRANTY PROVIDER MAKES NEITHER ANY EXPRESS WARRANTIES NOR ANY IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. This warranty provides you with specific legal rights, and you may also have additional rights that vary from state to state.

To obtain warranty coverage, contact the Angler Customer Service Department to obtain a return merchandise authorization ("RMA") number, and return the defective product to Angler along with the RMA number and proof of purchase. Shipment of the defective product is at the purchaser's own risk and expense.

For more information or to arrange service, visit www.anglerlights.com or call Customer Service at 212-594-2353.

Product warranty provided by the Gradus Group.
www.gradusgroup.com

Angler is a registered trademark of the Gradus Group.
© 2016 Gradus Group LLC. All Rights Reserved.

