

* Press and hold the **Down/Wi-Fi Button** for three seconds to turn **OFF Wi-Fi**.

The **Ez iCam App** is compatible with smartphones and tablets listed below.

For Apple iOS

* iPhone 5 , 5S , 6 & 6 Plus (iOS 8)

* iPad Air & Mini (iOS 8)

For Android:

* Android 4X Quad-core devices



iOS / Android
App Download

COMPATIBILITY

* Compatibility varies by device. Content playback, sharing and access to the camera's memory card might be not available on some devices.

Action Camera

Wi-Fi · Waterproof · Ultra HD



Wide Angle
Lens



HDMI



Ultra HD





Waterproof
to 30m



Long-lasting
battery

THE BASICS




Battery Door Latch



Battery Door

WATERPROOF HOUSING



ACCESSORIES



Waterproof Housing



Handle Bar/
Pole Mount



Mount 1



Mount 2



Mount 3



Mount 4



Mount 5



Mount 6



Mount 7



Clip 1



Clip 2



Helmet
Mounts



Bandages



Battery



Lens Cloth



Tethers



Protective
Backdoor





USB Cable







Charger

MOUNTING YOUR CAMERA

Attach your camera to helmets, gear and equipment.





GETTING STARTED

HELLO

Congratulations on your new camera! This user manual will help you learn the basics of capturing life's most incredible moments!

To power ON:


Press the **Power/Mode Button**.


To power OFF:

Press and hold the **Power/Mode Button**.

OVERVIEW


Turn camera ON and repeatedly press the **Power/Mode Button** to cycle through camera modes and settings. The modes will appear in following order:




 **Video** Record Video


 **Photo** Capture a single photo.

 **Burst Photo** Capture photo bursts

 **Time Lapse** Shoot a series of photos at set time intervals

 **Settings** Adjust camera settings, resolution and more.

SETTINGS



Press the **Shutter/Select Button** to enter the settings menu. Repeatedly press the **Power/Mode Button** to cycle through options and press the **Shutter/Select Button** to select desired option. Or use the **Up/Playback** or **Down/Wi-Fi Button** to cycle through the various options.

Video Resolution: 4K 10fps, 2.7K 15fps, 1080p 60/30fps, 720p 120/60fps

MicroSD Card	4K10/1080p60	1080p30	720p60
32 GB	120 mins	240 mins	320 mins
16 GB	60 mins	120 mins	160 mins

Looping Video: Off/On (4K & 2.7K not supported)

Time Stamp: Off/Date/Date & Time

Exposure: +-2.0/+-1.7/+-1.3/+-1.0/+-0.7/+-0.3/0

Photo Resolution: 12M/8M/5M/2M

Burst Photo: 3 Photos

Time Lapse: 2s/3s/5s/10s/20s/30s/60s

Continuous Lapse: Off/On

Power Frequency: 50Hz/60Hz/Auto

Language: English/Tranditional Chinese
/Italian/Spanish/Portuguese/German/
Dutch/France/Czech/Polish/Turkish/
Russian/Japanese/Korean/Thai

Date & Time: MM/DD/YY, DD/MM/YY,
orYY/MM/DD

Sound Indicator: Shutter On/Off, Start Up 1/2/3/
None, Beep On/Off, Volume
0/1/2/3

Upside Down: On/Off

Screen Saver: Off/1 min/3 min/5 min

Power Saver: Off/1 min/3 min/5 min

Format: No/Yes

Reset: No/Yes

Version

VIDEO MODE

Video

To record Video, verify the camera is in **Video** mode. If the **Video** icon on your camera's LCD screen is not showing, press the **Power/Mode Button** repeatedly until it appears.

To start recording:

Press the **Shutter/Select Button**. The camera will emit one beep and the **Camera Status Lights** will flash while recording.

To stop recording:

Press the **Shutter/Select Button**. The **Camera Status Lights** stop flashing and the camera emits one beep to indicate recording has stopped.

This camera automatically stops recording when the battery is out of power. Your **Video** will be saved before the camera powers **OFF**.

PHOTO MODE

Photo

To capture a **Photo**, verify the camera is in **Photo** mode. If the **Photo** icon on your camera's LCD screen is not showing, press the **Power/Mode Button** repeatedly until it appears.

To take a photo:

Press the **Shutter/Select Button**. The camera will emit the camera shutter sound.

BURST PHOTO MODE

Burst Photo

To capture a **Burst Photo** series, verify the camera is in **Burst Photo** mode. If the **Burst Photo** icon on your camera's LCD screen is not showing, press the **Power/Mode Button** repeatedly until it appears. In **Burst Photo** mode, your camera takes 3 photos in 1.5 seconds.

To take a Burst Photo series:

Press the **Shutter/Select Button**. The camera will emit camera shutter sounds.

TIME LAPSE MODE

Time Lapse

To capture a **Time Lapse** series, verify the **Continuous Lapse** is **ON** and camera is in **Time Lapse** mode. If the **Time Lapse** icon on your camera's LCD screen is not showing, press the **Power/Mode Button** repeatedly until it appears. In **Time Lapse** mode, your camera captures a series of photos at **2,3,5,10,20,30** or **60** second intervals.

To take Time Lapse:

Press the **Shutter/Select Button**. The camera initiates countdown and emits the camera shutter sound each time a **Photo** is taken.

QUICK MODES



To enter the Quick Modes menu

1. Verify the camera is in **Camera modes**.

2. Press and hold the **Shutter/Select Button** for three seconds.
3. Repeatedly press the **Power/Mode Button** to cycle through **camera modes**.
4. Press the **Shutter/Select Button**.
5. **To exit**, hold down the **Shutter/Select Button** for three seconds.

PLAYBACK

Playing Back Videos and Photos

To enter the Playback menu:

1. Verify the camera is in **Camera modes**.
2. Press the **Up/Playback Button** to enter the **Playback** menu.
3. Repeatedly press the **Power/Mode Button** to cycle through **Video** and **Photo**.
4. Press the **Shutter/Select Button** to select desired option.
5. Use **Up/Playback Button** or **Down/Wi-Fi Button** to cycle through the various options.
6. Press the **Shutter/Select Button**.
7. To return to the **Playback menu**, press the **Power/Mode Button**.

8. **To exit**, hold down the **Up/Playback Button** for two seconds.

STORAGE/MICROSD CARDS

This camera is compatible with **32GB & 64 GB** capacity **microSD**, **microSDHC**, and **microSDXC** memory cards. You must use a **microSD** card with a **Class 10 speed** rating. We recommend using brand name memory cards for maximum reliability in high-vibration activities.

BATTERY

Charging The Battery

To charge the battery:

1. Connect the camera to a computer or USB power supply.
2. The **Charging Status Light** remains **ON** while the battery is charging.
3. The **Charging Status Light** will turn **OFF** when the battery is fully charged.

* Charging Time: 3.5 hours

CAMERA APP

Connecting to the Ez iCam App (4K & 2.7K not supported)

The **Ez iCam App** lets you control your camera remotely using a smartphone or tablet. Features include full camera control, live preview, photo playback and sharing of select content and more.

1. Download the **Ez iCam App** to your smartphone or tablet at the **Google Play** or **Apple App Store**.
2. Press the **Power/Mode Button** to power camera **ON**.
3. Make sure the camera is in **Camera modes**.
4. Press the **Down/Wi-Fi Button** to turn on **Wi-Fi***.
5. In your smartphone or tablet's Wi-Fi settings, connect to the network called "**ICAM-H9**" followed by a series of numbers.
6. Enter the password "**1234567890**".
7. Open the **Ez iCam App** on your smartphone or tablet.