

# Relay Camera Coupler Guide



CAMERA BRAND	CAMERA MODEL	RELAY CAMERA COUPLER
Canon	EOS 5D	CRC400
	EOS 5D MK II	CRCE6
	EOS 5D MK III	CRCE6
	EOS 5D MK IV	CRCE6
	EOS 5Ds	CRCE6
	EOS 5Ds R	CRCE6
	EOS 6D	CRCE6
	EOS 6D MK II	CRCE6
	EOS 7D	CRCE6
	EOS 7D MK II	CRCE6
	EOS 10D	CRC400
	EOS 20D	CRC400
	EOS 30D	CRC400
	EOS 40D	CRC400
	EOS 50D	CRC400
	EOS 60D	CRCE6
	EOS 70D	CRCE6
	EOS 77D	CRCE18
	EOS 80D	CRCE6
	EOS 500D	CRCE5
	EOS M6	CRCE17
	EOS Rebel SL1	CRCE15
	EOS Rebel T1i	CRCE5
	EOS Rebel T2i	CRCE8
	EOS Rebel T3	CRCE10
	EOS Rebel T3i	CRCE8
	EOS Rebel T4i	CRCE8
	EOS Rebel T5	CRCE10
	EOS Rebel T5i	CRCE8
	EOS Rebel T6i	CRCE18
EOS Rebel T7i	CRCE18	
EOS Rebel XS	CRCE5	
EOS Rebel XSi	CRCE5	

CAMERA BRAND	CAMERA MODEL	RELAY CAMERA COUPLER
Fujifilm	X-T2	CRW126
	D2H	CRND4
	D2Hs	CRND4
Nikon	D2X	CRND4
	D2Xs	CRND4
	D3	CRND4
	D3s	CRND4
	D3X	CRND4
	D4	CRND4
	D4s	CRND4
	D5	CRND4
	D40	CRN5
	D40X	CRN5
	D60	CRN5
	D70s	Not Required
	D80	Not Required
	D90	Not Required
	D200	CRND4
	D300	Not Required
	D300s	Not Required
	D600	CRN5B
	D610	CRN5B
	D700	Not Required
	D750	CRN5B
	D800	CRN5B
	D800e	CRN5B
	D810	CRN5B
	D810A	CRN5B
D3000	CRN5	
D3100	CRN5A	
D3200	CRN5A	
D3300	CRN5A	
D3400	CRN5A	
D5000	CRN5	

CAMERA BRAND	CAMERA MODEL	RELAY CAMERA COUPLER
Nikon	D5100	CRN5A
	D5200	CRN5A
	D5300	CRN5A
	D5500	CRN5A
	D5600	CRN5A
	D5600	CRN5A
	D7000	CRN5B
	D7100	CRN5B
	D7200	CRN5B
	D7500	CRN5B
	Df	CRN5A
	DL24-500	CRN5C
	Panasonic Lumix	GH4
GH4R		CRPBLF19
GH5		CRPBLF19
Sony	α7	CRSFW50
	α7 II	CRSFW50
	α7R	CRSFW50
	α7R II	CRSFW50
	α7S	CRSFW50
	α7S II	CRSFW50
	α58	CRPW10AM
	α65	CRPW10AM
	α77	CRPW10AM
	α77 II	CRPW10AM
	α99	CRPW10AM
	α5000	CRSFW50
	α5100	CRSFW50
	α6000	CRSFW50
	α6300	CRSFW50
α6500	CRSFW50	
DSC-RX10 II	CRSFW50	
DSC-RX10 III	CRSFW50	