



Canon Cameras

	EOS 1Dx Mark II
	EOS 1Dx
	EOS 1Ds Mark III
	EOS 1Ds Mark II
	EOS 1Ds
	EOS 1D Mark IV
	EOS 1D Mark III
	EOS 1D
	EOS 1D Mark II (N)
	EOS 1D Mark II
	EOS 5Ds R
	EOS 5Ds
	EOS 5D Mark IV
	EOS 5D Mark III
	EOS 5D Mark II
	EOS 5D
	EOS 6D Mark II
	EOS 6D
	EOS 7D Mark II
	EOS 7D
	EOS 80D
	EOS 70D
	EOS 60D
	EOS 50D
	EOS 40D
	EOS 30D
	EOS 20D
	EOS 10D
	EOS 77D (9000D) (Rebel T7i)
	EOS 760D (8000D) (Rebel T6s)
	EOS 750D (Kiss X8i) (Rebel T6i)
	EOS 700D (Kiss X7i) (Rebel T5i)
	EOS 100D (Kiss X7) (Rebel SL1)
	EOS 650D (Kiss X6i) (Rebel T4i)
	EOS 600D (Kiss X5) (Rebel T3i)
	EOS 550D (Kiss X4) (Rebel T2i)
	EOS 500D (Kiss X3) (Rebel T1i)
	EOS 450D (Kiss X2) (Rebel XSii)
	EOS 400D (Kiss Digital X) (Rebel XTii)
	EOS 350D (Kiss Digital N) (Rebel XT)
	EOS 300D (Kiss Digital) (Rebel X)
	EOS 1200D (Kiss X70) (Rebel T5)
	EOS 1100D (Kiss X50) (Rebel T)
	EOS 1000D (Kiss F) (Rebel Xs)
	PowerShot G1X Mark II
	PowerShot G1X
	PowerShot G11
	PowerShot G7X
	PowerShot G7 / G9 / G10
	PowerShot G5X
	PowerShot G3X
	PowerShot S5 IS
	PowerShot SX1 IS
	PowerShot SX10 IS
	PowerShot SX20 IS
	EOS M5
	EOS M3
	EOS M

Nissan Model																																																											
NIAR10SC	●	●	—	—	—	●	●	—	—	—	—	—	●	●	●	—	●	●	●	●	●	●	●	—	—	—	●	●	●	●	●	●	●	●	—	—	—	●	●	●	○	○	○	○	○	○	○	○	○	○	○	○	○						
NINDA1C	● ^{*2} *3	● ^{*2}	●	●	○	●	●	○	● ^{*1}	●	● ^{*2}	● ^{*2}	● ^{*2} *3	●	●	● ^{*1}	○	●	● ^{*2}	●	● ^{*3}	●	●	●	● ^{*1}	● ^{*1}	● ^{*1}	●	●	●	●	●	●	●	●	●	●	● ^{*1}	● ^{*1}	● ^{*1}	●	●	●	○	○	○	○	○	○	○	○	○	○	○	○	○			
NIND700AC	● ^{*3}	●	●	●	○	●	●	○	● ^{*1}	●	●	●	● ^{*3}	●	●	● ^{*1}	● ^{*3B}	●	●	●	● ^{*3}	●	●	●	●	● ^{*1}	● ^{*1}	● ^{*1}	●	●	●	●	●	●	●	●	●	●	●	● ^{*1}	● ^{*1}	● ^{*1}	●	●	●	● ^{*5} *8	○	○	● ^{*5} *8	○	● ^{*5} *8	○	○	○	○	○	○	○	○
NIND60AC	●	●	—	—	○	●	●	○	● ^{*1}	—	●	●	●	●	●	●	●	●	●	●	●	●	●	●	● ^{*1}	● ^{*1}	● ^{*1}	●	●	●	●	●	●	●	●	●	●	●	●	●	●	—	○	○	—	○	—	—	○	○	○	○	○	● ^{*5}	● ^{*5}	● ^{*5}			
NIND40C	● ^{*3}	●	—	—	○	●	●	○	● ^{*1}	●	●	●	● ^{*3}	●	●	● ^{*1}	● ^{*3} *9	●	●	●	● ^{*3}	●	●	●	●	● ^{*1}	● ^{*1}	● ^{*1}	●	●	●	●	●	●	●	●	●	● ^{*4}	●	●	●	● ^{*5} *8	● ^{*5} *8	● ^{*5} *8	● ^{*5} *8	● ^{*5} *8	● ^{*5} *8	● ^{*5} *8	● ^{*5} *8	● ^{*5} *8	● ^{*5} *8	● ^{*5} *8	● ^{*5}	● ^{*5}	● ^{*5}				
NINDMF18C	○	●	●	●	○	●	●	●	●	●	—	—	—	●	●	●	○	●	●	●	○	●	●	●	●	●	●	○	●	○	●	●	●	●	●	●	●	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○				
NINDMG8000C	○	●	—	—	○	○	●	○	●	●	●	●	○	●	●	●	—	●	● ^{*4}	●	○	●	●	●	●	●	●	—	● ^{*4}	○	●	●	●	●	●	●	●	●	●	●	●	—	○	○	○	○	○	—	—	○	○	○	○	○	○	○	○		
NIND866MKIIC	○	●	●	●	○	●	●	○	●	—	●	○	●	●	●	○	●	● ^{*4}	●	○	●	●	○	●	●	●	—	● ^{*4}	○	●	●	●	●	●	●	●	●	●	●	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○		
	○	●	—	—	○	●	●	○	●	—	—	—	—	●	●	● ^{*1}	—	●	● ^{*4}	●	○	●	●	●	●	●	● ^{*1}	● ^{*1}	● ^{*1}	—	●	○	●	●	●	●	●	●	●	●	○	○	—	○	—	—	○	○	○	○	○	○	○	○	○	○	○	○	
NIND600C	● ^{*3}	● ^{*7}	—	—	○	●	●	○	●	●	●	●	● ^{*3}	● ^{*7}	●	●	● ^{*9}	● ^{*7}	●	●	● ^{*3}	● ^{*6} *7	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	—	—	○	—	● ^{*5} *8	—	—	● ^{*5} *8	○	● ^{*5} *8	○	○	○	○	○	○	○	○			

- HSS High speed sync. and second-curtain sync not supported.
- *2 For using with those Canon camera models, before Binding setting, please set Commander Air 1 to "Mode 2". At the same time, the second curtain sync can not be selected. For details, please refer to Air 1's user manual page8 - Appendix1.
- *3 When using the the first 4 product's serial numbers digits smaller-than the following value : Di600: 6803020001~ Di700A:6720100001~ Air 1:C67217001~ i40:67281609001~ an error message would appear on camera display when changing "external flash function setting", but the setting is reflected normally.
- *3B An error message would appear on camera display when changing "external flash function setting" on camera menu setting, but the setting is reflected normally.
- *4 Wireless Slave mode does not support the camera built-in flash as the master function.
- *5 Since those camera built-in flash have not the master function, they should use a optional master remote unit (e.g. Canon ST-E2) to control wirelessly any slave flash equipped optical slave receiver.
- *6 Zoom head operation not supported.
- *7 The flash charging lamp in the camera viewfinder will not go out.
- *8 Limited by the camera system function, Flash TTL function will be disabled when camera set to M manual exposure mode.
- *9 When shooting in continuous mode, flash exposure of TTL mode may become unstable.

[illegible]

- Compatible Model

	GN Mode. 25-49
	GN Mode. 50-65

Nikon Cameras																																																					
	D5	D4s	D4	D3x	D3s	D3	D2Xs	D2Hs	D2H	D1	Df	D850	D810	D800E	D800	D750	D700	D610	D600	D500	D300s	D300	D200	D100	D7500	D7200	D7100	D7000	D5600	D5500	D5300	D5200	D5100	D5000	D3400	D3300	D3200	D3100	D3000	D90	D80	D70 / D70s	D60	D50	D40 / D40X	Coolpix A	Coolpix P7700	Coolpix P5100	Coolpix P5000				
Nissin Model																																																					
NIAIR10SN	—	●	●	●	●	●	○	○	○	○	●	●	●	●	●	●	●	●	●	●	●	●	●	○	—	●	●	●	●	●	●	●	●	●	●	—	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●		
NINDA1N	*1	*2	*2	●	●	●	○	○	○	○	●	*5	●	●	●	●	●	●	●	●	●	●	●	○	●	●	●	●	●	●	—	●	●	●	●	●	●	—	●	●	●	○	○	○	○	○	○	○	○	○	○	○	○
NIND700AN	●	●	●	●	●	●	○	○	○	○	●	●	●	●	●	●	●	●	●	●	●	●	○	●	●	●	●	●	●	—	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	○	○	○	○	○	
NIND60AN	●	●	●	●	●	●	○	○	○	○	●	●	●	●	●	●	●	●	●	●	●	●	○	●	●	●	●	●	●	●	●	●	○	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	
NIND40N	●	●	●	●	●	●	○	○	○	○	●	●	●	●	●	●	●	●	●	●	●	●	○	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	
NINDMF18N	●	●	●	●	●	●	○	○	○	○	●	—	●	●	●	●	●	●	●	●	●	●	○	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	○	○	○	○	○	○	○	
NINDMG8000N	●	●	●	●	●	●	○	○	○	○	●	—	●	●	●	●	●	●	●	●	●	●	○	●	○	●	○	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	○	○	○	○	○	○	
NIND866MKIIN	*3	●	●	●	●	●	●	○	○	○	●	—	●	●	●	●	●	●	●	●	●	●	○	●	●	●	●	—	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	○	○	○	○	○	○	
	○	●	●	●	●	●	○	—	—	—	●	—	●	●	●	●	●	●	●	○	●	●	○	—	○	●	●	—	●	●	●	●	●	○	●	●	●	●	●	●	●	●	●	●	●	●	○	○	○	○	○	○	
NIND600N	○	●	●	●	●	●	●	○	○	○	●	—	●	●	●	●	●	●	●	○	●	●	○	—	○	●	●	—	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	○	○	○	○	○	○	○

- Compatible Model
- Incompatible Model
- No information available. To be confirmed.

*1 Extremely underexposure (about -2EV) appear when Air 1 mounted on D5 to control wirelessly the slave flash and the flash light does not hit the subject directly, such as bouncing or diffusing,

*2 In D4 · D4s, when manual flash is set, when you shoot continuously and rapidly manually in the Q mode · 1 sheet shooting mode, emission may be missing. Please understand that it is based on specifications.

*3 At the time of FP flash, it may be underexposed by about 1 stage compared with the genuine strobe

*4 SD Mode not supported

*5 Commander / Flash unit may be freeze when camera turn on the electronic shutter mode with mirror up mode. If Commander / Flash unit freezes, remove and re-insert the battery. Turn off the in-compatible function of camera then power on Commander / Flash unit again.

		Nissin Flashes								Nikon Flashes							
		i40 Nikon	Di466 Nikon	Di600 Nikon	Di622 Mark II Nikon	Di700 Nikon	Di866 Nikon	Di866 Mark II Nikon	MG8000 Nikon	SB-500	SB-600	SB-700	SB-800	SB-900	SB-910	SB-5000	
NINDARNIK		●	●	●	● +5	●	●	●	●	●	●	●	●	●	●	●	

- Compatible Model
- Air R's GN Mode. 25-49
- Air R's GN Mode. 50-65
- *5 FP/HSS high speed sync function not supported



Last update: April 2018

Sony Cameras

[illegible]

- Compatible Model
- incompatible Model
- No information available. To be confirmed.

*1 Use the Sony Shoe Adaptor (ADP-AMA)

*2 It slightly interferes (contacts) with the EVF. Since you can not use EVF, it can not be used because diopter correction does not work by interfering.

		Nissin Flashes			Sony Flashes				
		i40 Sony	Di622 Mak II Sony	Di866 Mak II Sony	HVL-F32M	HVL-F42AM	HVL-F43M	HVL-F58AM	HVL-F60M
NINDARSNY		●	● +3	●	●	● +3	●	● +3	●

- Compatible Model
 - GN Mode. 25-49
 - GN Mode. 50-65

*1 Use the Sony Shoe Adaptor (ADP-AMA)

*3 Use the Sony Shoe Adaptor (ADP-MAA). Due to the design of the ADP-MAA adapter, bad contact may always occur when using ADP-MAA. Depends on the situation of use, the operation may be unstable.

*4 For using with those Sony camera models, the HSS High-speed sync function of the flash inserted on Air R can not be used, α9, α7R Mark III, α7R Mark II, α7S Mark II, α7 Mark III, α7 Mark II, α99 Mark II, α6500.

Nissin DIGITAL		Compatibility Chart																								Last update: April 2018			
Olympus Micro Four Thirds / Four Thirds Cameras																													
		E-M1 Mark II (OMD)	E-M1 (OMD)	E-M5 Mark II (OMD)	E-M5 (OMD)	E-M10 Mark III (OMD)	E-M10 Mark II (OMD)	E-M10 (OMD)	PEN-F	E-P5	E-P3	E-P2	E-P1	E-PL7	E-PL6	E-PL5	E-PL3	E-PL2	E-PL1	E-PM2	E-PM1	E-620	E-520	E-500	E-410	E-30			
Nissin Model																													
NINDA1FT		●	●	●	●	○	●	●	● ^{*1}	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●			
NIND700AFT		●	●	○	●	○	●	●	● ^{*1}	●	●	●	●	●	●	●	●	●	●	●	●	● ^{*2}	● ^{*2}	● ^{*2}	● ^{*2}	● ^{*2}			
NIND60AFT		●	●	● ^{*1}	●	○	●	●	● ^{*1}	●	●	●	●	●	●	●	●	●	●	●	●	● ^{*2}	● ^{*2}	● ^{*2}	● ^{*2}	● ^{*2}			
NIND40FT		● ^{*1}	●	● ^{*1}	●	○	●	●	● ^{*1}	●	●	●	●	●	●	●	●	●	●	●	●	● ^{*2}	● ^{*2}	● ^{*2}	● ^{*2}	● ^{*2}			
		—	●	○	●	—	○	●	○	●	●	●	●	○	●	●	●	●	●	●	●	●	●	●	●	●			

- Compatible Model
- Incompatible Model
- No information available. To be confirmed.

^{*1} Unstable operation may appear when turn on the S-OVF Function (Optical view finder simulation) of EVF and shoot with EVF.

^{*2} Flash's optical slave wireless mode is incompatible with camera's wireless flash system.

Nissin

DIGITAL

Compatibility Chart

Last update: April 2018

Panasonic Micro Four Thirds Cameras *3

	GH5	GH4	GH3	GH2	GH1	GX8	GX7	Gx7 Mark II / Gx85 / Gx80	GX1	G10	G9	G8 / G80 / G85	G7 / G70	G6	G5	G3	G2	G1	GF2	GF1	LX100	LX7	LX5	LX3	FZ200
Nissin Model																									
NINDA1FT	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●
NIND700AFT	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●
NIND60AFT	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●
NIND40FT	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●
	●	●	●	●	●	○	●	○	●	●	●	●	○	●	●	●	●	●	●	●	●	●	●	●	●

- Compatible Model
- Incompatible Model
- No information available. To be confirmed.

^{*3} According to the specifications of Panasonic Lumix series, the continuous shooting function cannot be used when an external flash is installed on the hot shoe.



Compatibility Chart

Last update: April 2018

Fujifilm Cameras

	GFX 50s	X-H1 New	X-T2	X-T1 / X-T1 GS	X-T20	X-T10	X-Pro2	X-Pro1	X-E2S	X-E2	X-E1	X-M1	X-A2	X-A1	X100F	X100T	X100S	X100	X70	X30	X20	X10	X-S1	HS50EXR	HS30EXR	HS20EXR
Nissin Model																										
NINDA1FJ	• *1	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	○
NIND700AFJ	• *1	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	○
NIND60AFJ	• *1	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	○
NIND40F	• *1	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	○

- Compatible Model
- Incompatible Model
- The Fujifilm camera is supporting of High speed synchronize function after camera firmware updated

*1 Flash can be insert on the hot shoe of main body or that of EVF. When inserted a flash on the EVF shoe, do not tilt-up EVF since this may make the EVF damage.