

26 in. BoomBox for Flashes

BB-26DSL

INSTRUCTIONS




 **angler**[®]

Setting Up the BoomBox

1. Place the stand mount onto a light stand's 5/8-inch stud. Tighten the locking knob until secure.
2. Press down the locking button, and swing the mounting bracket into position until it snaps into place.
3. Attach the BoomBox to the stand mount by aligning the thumbscrew with one of the mounting bracket holes. Tighten until secure.
4. Open the BoomBox, and push the center ring over the shaft until it's all the way in, just like an umbrella. A slight counterclockwise turn of the center ring locks it into place.
5. Optional: Attach the deflector plate to the shaft with the thumbscrew. The deflector plate minimizes the hot spot at the center of the box and diffuses the light for beauty dish-style wraparound light.

Note: For a creative lighting option, the deflector plate can also be mounted in reverse.



6. Optional: Attach the diffuser by pressing the touch-connect strips against the inner rim of the BoomBox. The diffuser softens and spreads the light for an even and flattering effect. It can be used with or without the deflector plate.
7. Loosen the tension knob, and slide your flash's foot into the cold shoe. Tighten the tension knob until the flash is secure.
8. Use the thumbscrews to adjust the height of the BoomBox and the position of the cold shoe.



Recommended Accessories

Angler Grid for the BB-26DSL BoomBox

- BB-G26

SPECIFICATIONS

SHAPE	OCTAGONAL
COMPATIBILITY	SHOE-MOUNT FLASHES
REMOVABLE FRONT DIFFUSER	YES
ACCEPTS GRID	YES
REQUIRES SPEED RING	NO, PROVIDED
DIAMETER	26 IN. (66 CM)
WEIGHT	2.7 LB. (1.2 KG)

One-Year Limited Warranty

This Angler product is warranted to the original purchaser to be free from defects in materials and workmanship under normal consumer use for a period of one (1) year from the original purchase date or thirty (30) days after replacement, whichever occurs later. The warranty provider's responsibility with respect to this limited warranty shall be limited solely to repair or replacement, at the provider's discretion, of any product that fails during normal use of this product in its intended manner and in its intended environment. Inoperability of the product or part(s) shall be determined by the warranty provider. If the product has been discontinued, the warranty provider reserves the right to replace it with a model of equivalent quality and function.

This warranty does not cover damage or defect caused by misuse, neglect, accident, alteration, abuse, improper installation or maintenance. EXCEPT AS PROVIDED HEREIN, THE WARRANTY PROVIDER MAKES NEITHER ANY EXPRESS WARRANTIES NOR ANY IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. This warranty provides you with specific legal rights, and you may also have additional rights that vary from state to state.

To obtain warranty coverage, contact the Angler Customer Service Department to obtain a return merchandise authorization ("RMA") number, and return the defective product to Angler along with the RMA number and proof of purchase. Shipment of the defective product is at the purchaser's own risk and expense.

For more information or to arrange service, visit www.anglerlights.com or call Customer Service at 212-594-2353.

Product warranty provided by the Gradus Group.
www.gradusgroup.com

Angler is a registered trademark of the Gradus Group.
© 2018 Gradus Group LLC. All Rights Reserved.

