

# User Guide



# IMPORTANT SAFETY INSTRUCTIONS

- Please read User Guide before using this product.
- Please keep User Guide for future reference.
- Please read the cautions to prevent possible danger and loss of property.

## FEATURES

### 4K Ultra-HD resolution

# 4K

Ultra HD 4K screens containing 8.3 million pixel (3840x2160), so the resolution is four times that of Full HD. Which makes the innovative 4K screen ultimate in cinematic displays.

### Quad view



Support 4 views splinted from 4 different input signals simultaneously, such as SDI, HDMI, DVI and VGA, It's easy to watch images come from 4 specified places or angles on screen at the same time, HDMI 2.0 supports 4K 60Hz, HDMI 1.4 supports 4K 30Hz.



### Image flip

It offers great convenience for user's user to place the monitor with various mounting methods under different conditions. Users can view the monitor normally no matter what mounting angles.



### 4 user-definable buttons

This unit provides F1-F4 user-definable buttons, which can be customized as shortcut function, such as peaking, underscan, overscan, checkfield, image flip, etc.

# CAUTIONS


- Please do not place the display screen towards the ground.
- Please avoid heavy impact or drop onto the ground.
- Please do NOT use chemical solutions to clean this product.  
Please wipe with a clean soft cloth to maintain the brightness of the surface.
- Please do not block any vent hole.
- Please follow the instructions and trouble-shootings to adjust the product. Other improper adjustment may result in damage. Any further adjustment must be performed or conducted by a qualified technician.
- Please unplug the power and remove the battery if long-term no-use, or thunder weather.

## Contents

|                                 |    |
|---------------------------------|----|
| 1. PRODUCT DESCRIPTION.....     | 3  |
| 2. SUN SHADE INSTALLATION ..... | 6  |
| 3. MENU SETTING.....            | 7  |
| 4. ACCESSORIES .....            | 10 |
| 5. PARAMETERS .....             | 11 |
| 6. TROUBLE SHOOTING.....        | 12 |

# 1、 PRODUCT DESCRIPTION

## Front



1. Speaker

2. **SDI**

Signal switch to SDI mode when light on.

3. **HDMI 1 ~ 4**

Signal switch to HDMI mode when light on.

4. **DVI**

Signal switch to DVI mode when light on.

5. **VGA**

Signal switch to VGA mode when light on.

6. **MENU/ENTER**

Press to enter menu.

Press to enter option in the menu.

7. ◀

Select option in the menu.

Decrease the option value.

Before enter the menu, single press to activate volume, press again to switch among of volume, brightness, contrast, color, hue, sharpness and backlight.

8. ►

Select option in the menu.

Increase the option value.

9. **EXIT**

Back or exit.

10. **F1~F4 User definable buttons**

Default function options :

F1 : Display Mode      F2 : Display Rotate


F3 : Safety Marker      F4 : Aspect

**( functions can be customized by long keep pressing any one of the 4 buttons )**

11 . Power indicating light (green light: working).

12 . Earphone jack


## Back




1. Handle
2. VESA 75×75 & VESA 100×100 mounting port
3. Connector protector  
Preventing connectors from damage.
4. TALLY port
5. VGA input port
6. DVI input port
7. HDMI input port×4.  
**HDMI 1:** HDMI2.0, support 4K 60Hz  
**HDMI 2,HDMI 3&HDMI 4:** HDMI1.4, support 4K 30Hz
8. Audio L/R
9. SDI input/output ports
10. XLR power port
11. Power switch  
I: on; O: off

## 2. SUN SHADE INSTALLATION

1. Put the sun shade on the suitcase, and match the magnets on both sides.



2. As shown below after finished.



# 3. MENU SETTING

Please check whether the device is connected well or not.

## 3-1. F1~F4 user definable shortcut buttons

Long keep pressing any one of the 4 buttons for 3-5 seconds to activate shortcut menu setting. Option selected will be highlighted as white, option will be highlighted as yellow, unavailable option will be highlighted as gray.

Select option via “◀/▶” buttons.

Then press “MENU” button to confirm to set as default option.

Functions can be customized to meet user' s needs: center marker, safety marker, aspect ratio, under scan, check field, image freeze, peaking, display mode and image flip.

### Default options:

F1 : Display Mode            F2 : Display Rotate

F3 : Safety Marker            F4 : Aspect

## 3-2. ◀ / ▶ Buttons Operation

Under non menu screen, press ◀/▶ buttons to activate volume bar,

Use “◀ / ▶” buttons to select the desired option.

Press the “MENU ” button to select Volume, Brightness, Contrast, Saturation, Hue, Sharpness, Backlight, Menu and Exit.



### 3-3. MENU Operation

When power on, press "MENU" on the device, The menu of function setting will display on the screen.

Press ◀ / ▶ button to choose menu ;

Then press "MENU" button to confirm ;

Press "EXIT" button to return / exit menu.

|                        |                                  |  |                |
|------------------------|----------------------------------|--|----------------|
| <b>Picture</b>         | Brightness                       | 0~100  |                |
|                        | Contrast                         | 0~100  |                |
|                        | Saturation                       | 0~100  |                |
|                        | Hue                              | 0~100  |                |
|                        | Sharpness                        | 0~4  |                |
|                        | Temperature                      | 9300 , 7500 , 6500 , 5800 , User                 |                |
|                        | Backlight                        | 0~100  |                |
| <b>Function</b>        | Center Marker                    | ON, OFF  |                |
|                        | Safety Marker                    | OFF , 95% , 93% , 90% , 88% , 85% , 80%          |                |
|                        | Aspect                           | Full Screen , 16:9 , 17:9, 4:3 , 1.85:1 , 2.35:1 |                |
|                        | Underscan                        | ON, OFF  |                |
|                        | Check Filed                      | OFF, Red, Green, Blue                            |                |
|                        | Freeze Input                     | ON, OFF  |                |
|                        | Peaking                          | ON, OFF  |                |
| <b>Display Mode</b>    | 1P , 2P LR , 2P TB , 2P PIP , 4P |  |                |
| <b>Display Setting</b> | Display Rotate                   | 0° , 90° , 180° , 270°                           | Available when |

|                      |   |   |  |
|----------------------|---|---|--|
|                      |   |   | single display.                                |
|                      | LR Ratio  | 0~4   | Available when dual display on left and right. |
|                      | Input Swap  |   |  |
| <b>Select Region</b> | Menu setting to region selected according to users' needs.  |   |  |
| <b>Input</b>         | Signal switch to region selected according to users' needs. |   |  |
| <b>Audio</b>         | Volume  | 0~100   |  |
|                      | Audio Source  | Analog ,Digital 1 ,Digital 2 ,Digital 3 ,Digital 4. |  |
| <b>VGA</b>           | Auto Adjust   | Press to confirm after selected.                    | Only for adjusting VGA signal modes.           |
|                      | H Position  | 0~100   |  |
|                      | V Position  | 0~100   |  |
|                      | Clock   | 0~100   |  |
|                      | Phase   | 0~100   |  |
| <b>System</b>        | Reset   | Press to confirm after selected.                    |  |
|                      | Menu Time   | 5~60s   |  |
|                      | OSD H Position  | 0~100 (To set menu display area)                    |  |
|                      | OSD V Position  | 0~100 (To set menu display area)                    |  |
|                      | Transparency  | 0~255 (To set menu transparency)                    |  |
|                      | OSD Rotate  | 0° , 90° , 270°                                     |  |
|                      | Border Width  | 0~10  |  |
|                      | Border Color  | R, G, B, W  |  |
| <b>Info</b>          | To display current information.                             |   |  |

## 4、 ACCESSORIES

|  |                   |
|--|-------------------|
| 1. Folding sun shade cover               | 1 piece           |
| 2. Carry-on suitcase                     | 1 piece           |
| 3. 15V DC adapter                        | 1 piece           |
| 4. Adapter fixing belt                   | 2 pieces          |
| 5. Battery plate bracket                 | 1 piece           |
| 6. V-mount/Anton bauer mount power cable | 1 piece           |
| 7. V-mount or Anton bauer mount          | 1 piece           |
| 8. TALLY connector (in bulk)             | 1 piece           |
| 9. Manual                                | 1 copy            |
| 10. WHDI Accessories                     | 1 pair (optional) |
| 11. Acrylic screen protector             | 1 piece(optional) |

## 5、PARAMETERS

|                       |   |
|-----------------------|---|
| Panel                 | 15" LED backlight                           |
| Resolution            | 3840×2160                                   |
| Aspect Ratio          | 16 : 9                                      |
| Brightness            | 330cd/m <sup>2</sup>                        |
| Contrast              | 1000: 1                                     |
| Viewing Angle         | 176°/ 176°(H/V)                             |
| Input Voltage         | DC 12~24V ( XLR )                           |
| Input Signal          | HDMI, VGA , DVI and 3G-SDI                  |
| Power Consumption     | ≤15W  |
| Operating Temperature | -0°C~60°C                                   |
| Storage Temperature   | -20°C~60°C                                  |
| Dimension ( LWD )     | 283×267×38mm<br>524×305×170mm ( with case ) |
| Weight                | 3.4kg/ 12kg ( with case )                   |

## 6、 TROUBLE SHOOTING

1. Only black-and-white display.  
Check whether the color saturation is properly setup or not.
2. Power on but no pictures.  
Check whether the cables of HDMI, VGA , DVI and 3G-SDI are correctly connected or not. Please use the standard power adapter coming with the product package. Improper power input may cause damage.
3. Wrong or abnormal colors.  
Check whether the cables are correctly and properly connected or not. Broken or loose pins of the cables may cause a bad connection.
4. When on the picture shows size error.  
Press “MENU → Function → Underscan” to zoom in/out pictures automatically when receiving HDMI signals
5. Other problems.  
Please press “MENU” button and choose “MENU→System→Reset →confirm”
6. According to the ISP, the machine cannot function properly.  
ISP for program upgrades, non-professionals do not use. Please reboot your device if press accidentally!
7. No Sound.  
Press HDMI button if no sound; if still unavailable, please contact the technician.

**Note: due to constant effort to improve products and product features, specifications may change without notice.**

