



BG-N15-2

BATTERY GRIP

Designed for the Nikon
D750 DSLR Camera

 VELLO®

USER'S MANUAL

Thank you for choosing Vello

The Vello BG-N15-2 battery grip offers extended shooting time and comfort when shooting in a vertical (portrait) orientation. The grip is compatible with the Nikon D750 DSLR camera and accepts one Nikon EN-EL15 rechargeable battery, providing you with an extra battery option together with the one in your camera. It offers familiar controls like an alternate shutter release button, main and sub-command dials, a multi selector, and AE-L/AF-L button. This makes the grip ideal for shooting portrait photography and allows your hand to be in a comfortable position while accessing the most-used controls.


Please read through this entire manual before using the BG-N15-2 battery grip.



Precautions

- 1.** The BG-N15-2 should be used only with the compatible devices specified in this manual.
- 2.** Use only with the batteries and battery holders recommended in this manual.
- 3.** If you notice smoke, noise, or an unusual smell from the battery pack, discontinue use immediately. Remove the batteries, and take the device to a Vello authorized reseller.
- 4.** The battery level may not display properly if batteries are installed before mounting the grip.
- 5.** Remove batteries from the grip when not in use.
- 6.** Do not attempt to disassemble.
- 7.** Avoid exposing this product to water or extreme humidity, and keep it in a cool, dry place.
- 8.** Keep out of reach of children.
- 9.** All images are for illustrative purposes only.

Overview



① Sub-command dial

② Nonslip grip

③ Tripod socket

④ Shutter release button

⑤ Control lock switch

⑥ Power contacts

⑦ Mounting screw

⑧ Power-contact cap

⑨ Camera contact-cap holder

⑩ AE-L/AF-L button

⑪ Main command dial

⑫ Multi selector

⑬ Thumbwheel lock

⑭ Battery tray lock

⑮ Battery tray compartment


⑯ Battery slot lock tab

⑰ Battery slot


⑱ Battery slot contacts

⑲ 6-bay AA battery tray


Attaching the Battery Grip




1. Ensure that the camera is turned off.




2. Remove the camera's contact cap, and store it in the grip's contact-cap holder.



3. Remove the grip's power-contact cap.



4. Line up the battery grip's power contacts and camera mount, and attach the grip to the camera.




5. Rotate the thumbwheel counterclockwise until the grip is secured.


Inserting the Battery




1. Turn off the camera, and make sure the grip's control lock switch is in the L position.




2. Twist the battery tray lock, and remove the battery tray from the grip.



3. **Nikon EN-EL15:** Insert the battery into the slot as shown, and push down to lock the battery in place.



AA Batteries: Place six identical AA batteries into the AA battery tray as indicated.



- 4.** Insert and lock the battery tray inside the battery grip.




- 5.** Turn on the camera, and make sure the grip's control lock switch is in the • position.

Note: When removing the grip, turn off the camera's power and switch the control lock to the L position, and then remove the batteries.


Removing the Battery



1. Turn off the camera, and make sure the grip's control lock switch is in the L position.



2. Twist the battery tray lock, and remove the battery tray from the grip.











3. Push down on the battery slot lock tab, and slide the battery out of the slot.






Battery Info

The camera displays the following battery levels.

Nikon EN-EL15 Battery:


LCD/Control Panel	Viewfinder	Description
	—	Battery fully charged.
	—	Battery partially discharged.
		
		
		Low battery. Prepare spare batteries.
 (blinking)	 (blinking)	Battery exhausted. Shutter release is disabled.

AA Batteries:

LCD/Control Panel	Viewfinder	Description
	—	Batteries fully charged.
		Low battery power. Prepare spare batteries.
 (blinking)	 (blinking)	Batteries exhausted. Shutter release is disabled.

AA Battery Settings

To ensure that the camera shows the correct battery level when AA batteries are used, choose the appropriate setting in the Custom Settings menu (Group *d*).




Battery Type	Menu Option to Select
AA alkaline (LR6)	LR6 (AA alkaline)
AA NiMH (HR6)	HR6 (AA Ni-MH)
AA Lithium (FR6)	FR6 (AA lithium)

Note: The menu screens on this page are from the D750.

Nikon Rechargeable Batteries

The camera can display information (including calibration information) for Nikon EN-EL15 batteries via the Battery Info option in the Setup Menu. For AA batteries, only battery levels are displayed.



Battery Order

Set the order in which the internal camera and BG-N15-2 batteries are used via the Custom Settings menu (Group *d*). To view the status for both batteries, check your camera's LCD screen. The camera's control panel displays the status of the active battery.



Specifications

Power source	Nikon EN-EL15 type rechargeable Li-ion battery 6 × AA batteries
Operating temperature	32°F to 104°F (0°C to 40°C)
Dimensions (H × W × D)	2 × 5.5 × 3 in. (5 × 14 × 7.6 cm)
Weight	7.25 oz. (205.5 g) without battery

Specifications and design are subject to change without notice.

Please note: When using the AA battery tray, the battery indicator works with only Ni-MH batteries. This product is not compatible with Duracell® brand alkaline batteries.

One-Year Limited Warranty

This Vello product is warranted to the original purchaser to be free from defects in materials and workmanship under normal consumer use for a period of one (1) year from the original purchase date or thirty (30) days after replacement, whichever occurs later. The warranty provider's responsibility with respect to this limited warranty shall be limited solely to repair or replacement, at the provider's discretion, of any product that fails during normal use of this product in its intended manner and in its intended environment. Inoperability of the product or part(s) shall be determined by the warranty provider. If the product has been discontinued, the warranty provider reserves the right to replace it with a model of equivalent quality and function.

This warranty does not cover damage or defect caused by misuse, neglect, accident, alteration, abuse, improper installation or maintenance. EXCEPT AS PROVIDED HEREIN, THE WARRANTY PROVIDER MAKES NEITHER ANY EXPRESS WARRANTIES NOR ANY IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. This warranty provides you with specific legal rights, and you may also have additional rights that vary from state to state.

To obtain warranty coverage, contact the Vello Customer Service Department to obtain a return merchandise authorization ("RMA") number, and return the defective product to Vello along with the RMA number and proof of purchase. Shipment of the defective product is at the purchaser's own risk and expense.

For more information or to arrange service, visit www.vellogear.com or call Customer Service at 212-594-2353.

Product warranty provided by the Gradus Group.

www.gradusgroup.com

Vello is a registered trademark of the Gradus Group.
© 2020 Gradus Group LLC. All Rights Reserved.

All other trademarks are the property of their respective owners.



GG2