


OWNER'S MANUAL

Model CD[®]



Tivoli Audio[®]



This symbol is intended to alert the user to the presence of uninsulated “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



This symbol is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

Important Safety Instructions

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water. For example, do not use near a bathtub, in a wet basement, near a swimming pool, and the like. **WARNING** – To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.
6. Clean only with a dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer’s instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
13. Unplug this apparatus during lightning storms or when unused for long periods of time.



14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
15. Complies with 21CFR 1040.10 and 1040.11.
16. This product utilizes a laser. Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure. Do not open the panels and do not repair yourself. Refer servicing to qualified persons only.
17. This product has been tested and found to comply with the limits for Part 15 of the FCC rules. This device complies with Part 15 of the FCC Rules. Operation is subject to the condition that this device does not cause harmful interference. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the product on and off, the user is encouraged to try to correct the interference by one or more of the following measures:
 - Reorient or relocate the receiving antennas.
 - Increase the separation between the equipment and the receiver.
 - Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
18. This Class B digital device complies with the Canadian ICES-003.
19. For added protection for this product during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet. This will prevent damage to the product to lightning and power-line surges.
20. Operate this product only from the type of power source indicated on the bottom panel. For products using an external power supply, use an exact replacement if lost or damaged. For products operating from battery power, refer to the user manual.
21. Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:
 - a. When the power supply cord or plug is damaged.
 - b. If liquid has been spilled or objects have fallen into the product.
 - c. If the product has been exposed to water or rain.
 - d. If the product does not operate normally by following the operating instructions.
 - e. If the product has been dropped or damaged in any way.
 - f. When the product exhibits a distinctive change in performance.
22. If the LCD becomes cracked and damaged, do not touch the liquid.
23. Keep this product a safe distance away from naked flame, such as a lit candle.
24. Do not expose this product to splashing or dripping. Objects containing liquid, such as vases or drinking glasses, should not be placed on top of this product.
25. The recommended operating temperature range is 41° F to 104° F (5° C to 40° C).
26. As the main plug is used to disconnect the system from the mains, connect the system to an easily accessible AC outlet.

Model CD Instructions

Congratulations on purchasing Tivoli Audio's Model CD®. The Model CD provides excellent sound quality and anti-skip protection in an elegant, compact package. Its front loading slot design makes inserting a CD quick and easy, and permits greater placement flexibility. The furniture-grade wood cabinet makes it a perfect companion piece to Tivoli Audio's radios, or a handsome addition to any existing audio system.

Please take a moment to read this manual in order to take full advantage of all the features of the Model CD. If you have any questions, do not hesitate to contact your dealer or Tivoli Audio directly. It is a good idea to save the carton and original packing should you ever need to ship your Model CD, as shipping damage is not covered under the factory warranty.

On behalf of all of us at Tivoli Audio, thank you for your purchase and enjoy your new Model CD!

About Tivoli Audio

Tom DeVesto founded Tivoli Audio with the mission of bringing simple to use, elegantly designed, high quality audio products to the consumer. As the CEO and head of research and development at his former company, Cambridge SoundWorks*, Tom was responsible for developing many of the best selling home entertainment and multimedia products on the market. He also held senior management positions in product development for Advent and Kloss Video.

*Cambridge SoundWorks is a registered trademark of Creative Labs, Singapore.

Packed with your Model CD you should find one each:

- External Power Supply
- Compact Remote Control (battery installed)
- 3.5mm to Stereo RCA Audio Cable 3.5' (1.07 m)
- Warranty Registration Card

Getting Started:


Before operating the Model CD, please wait until the unit has reached room temperature. Otherwise, as the unit warms up, condensation may form inside the player resulting in faulty operation.

With all components turned off:

1. Connect the red male RCA from the included audio cable to the Model CD's rear panel red RCA audio output marked "RIGHT".
2. Connect the white male RCA from the included audio cable to the Model CD's rear panel white RCA output marked "LEFT".
3. Connect the 3.5mm male plug from the included audio cable to the Auxiliary input on your Tivoli Audio radio.
4. Connect the included external power supply to the Model CD's rear 12VDC input and plug it into a wall outlet.
5. Press the Model CD's front panel power button and insert a CD into the loading slot. Adjust the volume to the desired level using the controls on the remote or the volume control on your radio.


Guide to Features (Front panel):

Note the playback functions are duplicated on the included remote control.



1. **POWER:** Push to turn the Model CD on. The power LED will illuminate. Push again to turn the Model CD off. The LED will extinguish.
2. **DISPLAY:** Shows individual track number and playback time. Text will scroll if the inserted CD contains CD text.
3. **INSERTION SLOT:** Insert a CD with the label side (side with printing) facing up and the mechanism will draw the CD in and start playback automatically. Do not attempt to insert more than one CD.
4. **EJECT:** Press to remove a CD. Grasp the CD and remove it in a straight position, taking care not to bend the CD.
5. **PLAY/PAUSE:** Press to start playback. The display will show the Play arrow icon. Press again during playback to pause. The pause icon will flash during pause mode. Playback will cease when the last track is reached.
6. **STOP:** Press to halt CD playback. The stop icon will appear in the lower left of the display.
7. **TRACK SKIP:** Press to advance to the start of the previous track or next track.
8. **FAST FORWARD/REVERSE:** Press to fast forward or fast reverse playback. Press again to resume normal playback or press Play.
9. **IR SENSOR:** Receives command signals from the included remote control.

Guide to Features (Rear panel):




- LEFT/RIGHT RCA OUTPUTS:** Connect the included audio cable from these outputs to your radio's Auxiliary input. For more, see "Getting Started".
- HEADPHONE OUTPUT:** Connect a pair of headphones (not included) to this 3.5mm female mini stereo variable output. The headphone volume is controlled by the Volume +/- buttons on the remote control. Avoid listening to headphones at high volume levels to prevent hearing damage.
- 12VDC INPUT:** Connect the included external power supply to this input. Use only the power supply provided with this product. Be sure your region's voltage is consistent with the voltage indicated on the external adapter. Tivoli Audio is not responsible for damaged caused by incorrect voltage. To obtain a replacement, contact your authorized dealer or Tivoli Audio USA: 1.877.297.9479. The power supply connector measures 5.5mm/2.1mm x 13mm long, center positive. It is normal for the power supply to become warm during use. An optional 12VDC nominal, 1A fused source may also be used.

Helpful advice:

- Avoid moving the Model CD while a CD is playing inside to prevent possible damage to the CD or player. It is further recommended you do not ship the Model CD with a CD inside.
- Do not insert a CD if one is already inside the player.
- Do not insert CDs that are warped or cracked.
- In the unlikely event a CD becomes jammed inside the player, contact your dealer. Attempting to extract the CD yourself will void your warranty and could damage the Model CD.
- Do not use a lens cleaning CD since most of these products are designed to work with tray-type players only and could damage the Model CD. Other aftermarket accessories such as stabilizer mats and rings should also be avoided.
- When cleaning CDs, be sure no water remains on the surface before inserting the CD.

Remote Control:

Pull out the clear protective strip from the battery compartment before using.



1. **MUTE:** Press to mute the audio output. Press again to restore the audio.
2. **DIRECT TRACK ACCESS 1-10:** Press the number that corresponds to the CD track you wish to play.
3. **10+:** Press for direct track access above the number 10. For example, to enter track 14, press the 10+ button followed by the #4 button. For tracks 20 and above, press the 10+ multiple times. For example, for track 21, press the 10+ button two times, followed by the #1 button.
4. **INTRO:** Press to start playback at track 1 and audition the first 10 seconds of each track. Press a second time to cancel Intro or press Stop.
5. **VOL+/-:** Repeatedly press to raise or lower the volume level. The display will show the volume level from 0 (Mute) to 63. Although CD levels vary, we recommend level 36. These buttons also control the volume level of headphones (not included) connected to the Model CD.
6. **REPEAT:** Press once to repeat the track playing. A “1” will appear in the upper right corner of the display. Press a second time to repeat All tracks. The repeat icon will be shown in the upper right of the display. Press a third time to cancel or press Stop.
7. **SHUF (Shuffle):** Press to playback the CD’s tracks in random order. The Shuffle icon will appear in the upper right of the display. Press again to cancel Shuffle or press Stop. It is possible some tracks might repeat during shuffle play.
8. **Battery:** Replace the battery when the remote stops working or works intermittently. Use only a major brand 3V Lithium battery, type CR2025. To reduce the risk of fire or injury, do not leave a dead battery in the remote. Do not dispose of spent batteries in a fire. Dispose of a dead battery according to your state’s/country’s regulations. Never open or tamper with a battery. Do not attempt to recharge the battery. To replace the battery, follow the illustration on the underside of the remote.

Placement:

The Model CD features excellent anti-skipping protection, but it is not skip proof. Place the Model CD on a flat, level surface that is not subject to vibration. Should the Model CD affect radio reception of your Tivoli Audio radio or other equipment, move the Model CD further away from the unit or keep the Model CD turned off when listening to the radio.

Formats

CD and audio CD-R formats are supported. Refrain from inserting any media inside the Model CD that isn't a standard music CD. Refrain from inserting specially-shaped CDs and 3" mini CDs. CDs with severe scratches might not play correctly.

Cleaning:

Never use harsh cleansers or solvents on your Model CD. A liquid polish usually provides best results.

NOTE: Tivoli Audio cabinets are made with real wood veneers. Since natural wood varies greatly, it is not possible to achieve an exact wood color/grain match between models. You may also notice the wood darken over time with exposure to sunlight. Again, this is normal for real wood.

Limited Warranty:

Tivoli Audio manufactures its products to very high standards and we are confident our products will perform well. Accordingly, we provide a limited warranty on this product against manufacturing defects in material and workmanship to the original owner, for a period of one year from the original date of purchase. This warranty is non-transferable.

This Limited Warranty covers the functionality of the product for its normal, intended use as specified in this Owner's Manual. It does not cover a malfunction or damage that has resulted from improper or unreasonable use or installation, faulty ancillary equipment, modifications, unauthorized repair, shipping damage or loss, abuse, accidents, use on improper voltage/current, power surges, lightning or other acts of God, excess moisture, normal wear and tear, commercial use, or purchase from unauthorized dealers. Proof of purchase as evidence the unit was purchased from an authorized dealer may be required for warranty service. **Please contact the dealer of purchase or local distributor for warranty service or repair.**

Returns of any model purchased directly from Tivoli Audio via our website, telephone, mail, or fax: must have a Return Authorization (RA) number clearly indicated on the outside of the package. An RA number can be obtained by phoning Tivoli Audio customer service (1.877.297.9479) with the product's model name, serial number, approximate date of purchase, and detailed description of the problem, or by filling out the RA form on our web site (www.tivoliaudio.com). PRODUCTS RETURNED TO TIVOLI AUDIO WITHOUT A VALID RA # WILL BE RETURNED UNOPENED TO THE SENDER.

Please refrain from opening this product or taking it apart as doing so will void this Limited Warranty. There are no user serviceable parts inside. Tivoli Audio will not pay for costs incurred due to correction of reception problems, elimination of externally generated static/noise, loss of time, inconvenience, loss of use of product, or damage caused by improper use of this product.

In the event the product is returned during the warranty term and is eligible for service under this Limited Warranty, we will repair or replace any defective parts within a reasonable period of time and free of charge.

THIS LIMITED WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS SUBJECT TO SPECIFIED CONDITIONS. YOU MAY ALSO HAVE OTHER LEGAL RIGHTS WHICH APPLY TO THE PRODUCT YOU HAVE ACQUIRED. SOME PLACES DO NOT ALLOW THE EXCLUSION, RESTRICTION, OR MODIFICATION OF CERTAIN IMPLIED RIGHTS OR THEIR EFFECT. IN THOSE SITUATIONS THIS LIMITED WARRANTY WILL ONLY APPLY TO THE EXTENT THAT THE APPLICABLE LAW ALLOWS.

The provisions of the Limited Warranty are in lieu of any other warranties or conditions, except those provided by law. This Limited Warranty does not affect any legal rights provided to you by law and does not preclude any remedy you may have under law.

In states where liability limits are not precluded by statute, the maximum liability of Tivoli Audio shall not exceed the purchase price paid by you for the product. In states where limitations of liability are precluded by law, Tivoli Audio shall be liable for no more than the direct damages for bodily injury, and/or real or personal property arising from the negligence of Tivoli Audio.

Where not prohibited by law, Tivoli Audio shall not be liable for special, incidental, consequential, or indirect damages. Some places do not allow limitations on the exclusion or limitation of relief,

special, incidental, consequential or indirect damages, or the limitation of liability to specified amounts, so the above limitations or exclusions may not apply to you.

This Limited Warranty is void if the label bearing the serial number has been removed or defaced.

For service outside the USA, please contact your local distributor.

If you purchased an extended service contract from your dealer and service is required after the term of this Limited Warranty has expired, please contact your extended service contract provider to obtain service.

For your convenience, you may register your product for warranty service online at our website, www.tivoliaudio.com. There is no legal obligation for you to provide personal information. However, such information allows us to maintain a record of the Tivoli Audio products acquired by you and better understand the purchasers of our products. The information collected will be used for marketing purposes by Tivoli Audio and, where permitted, to contact you in relation to the products you have acquired or other products which might be of interest to you from Tivoli Audio or other companies. The information that you provide may be processed in another country.

Please visit the Tivoli Audio FAQ section at <http://www.tivoliaudio.com> prior to any request for warranty service as information available there may answer your questions or concerns.

You may email questions to us at mail@tivoliaudio.com

For your convenience, you may register your product for warranty coverage on-line at www.tivoliaudio.com.

Specifications:

Model:	Model CD
Formats:	CD/CD-R
Power Supply:	12VDC 500mA 120V 60Hz
Dimensions:	8.375"W x 4.5"H x 5.98"D (213 mm W x 114 mm H x 152 mm D)
Weight:	3.89 lbs./1.76 kg

All specifications subject to change without notice.

Tivoli Audio reserves the right to make product changes without notice.

Tivoli Audio, the Tivoli Audio logo, and Model CD are registered trademarks of Tivoli Audio, LLC.

This manual was written by Peter Skiera and cannot be reproduced in whole or in part without the permission of Tivoli Audio. The information included within this owner's manual was accurate at the time of printing. Tivoli Audio shall not be held liable for operational, technical, or editorial errors/omissions. Visit our website for the latest version of the owner's manual.

For more information about other exciting products from Tivoli Audio, please visit our website or contact us directly:

Tivoli Audio, LLC
Seaport Center
70 Fargo Street, Suite 900
Boston, MA 02210 USA
1.877.297.9479
www.tivoliaudio.com
help@tivoliaudio.com