

# BINOCULAR TRIPOD ADAPTER

## ITEM # 93524



This useful adapter attaches to the center hinge of most porro or roof prism binoculars, allowing you to mount them to any tripod equipped with a standard 1/4" x 30 mounting bolt. A must for vibration-free viewing, this adapter conveniently sets your hands free for other tasks while observing.



Binocular  
Tripod Adapter

### INSTALLATION

1. Attach the bottom of the binocular adapter to the 1/4" - 20 thread on your photo tripod.
2. Remove the cap screw on your binoculars that covers the threaded mounting hold. This will be located between the two binocular barrels.
3. Thread the binocular adapter into the mounting hold on your binocular. Tighten down so that the binoculars stay securely in place.



### WARRANTY

One year limited warranty. See the Celestron Accessory Catalog (#93685) for complete warranty details or contact Celestron.

Product design and specifications are subject to change without prior notification.

This product is designed and intended for use by those 14 years of age and older.

www.celestron.com  
2835 Columbia Street • Torrance, CA 90503 U.S.A.  
Telephone: 310.328.9560 • Fax: 310.212.5835  
©2012 Celestron  
All rights reserved.

Binocular tripod adapter shown with binoculars and tripod (not included)