

Instruction Manual

Manuel d'instructions	FR
Manual de instrucciones	ES



©2016 Sony Corporation Printed in Malaysia

NW-WM1A/WM1Z

English

About the manuals

1. Instruction Manual (this manual)
2. (Startup Guide)

The Startup Guide describes the following:

- Basic operating instructions of your WALKMAN®
- How to access useful PC applications websites on the internet

3. Help Guide (web document for a PC/smartphone)

The Help Guide contains more detailed operating instructions, specifications and customer support website URL, etc.



http://rd1.sony.net/help/dmp/nwwm1/h_ww/

While browsing is free, you may be charged a communication fee according to your carrier contract.

Depending on the country/region in which you have purchased your Walkman, some models may not be available.

Notes for using Walkman

Note for battery

- To prevent battery deterioration, charge the battery at least once every six months.

Formatting a microSD card

Be sure to read the instructions for microSD cards in the Help Guide on the Internet before you store content on a microSD card (not supplied).

Bluetooth capabilities

You can listen to music stored on your Walkman from Bluetooth audio devices such as headphones or speakers.

Pairing (first time the device is used)

1. Set the Bluetooth audio device to pairing mode. (Refer to the device's instruction manual.)
2. Tap - [Settings] - [Connect to/Add Audio Device] under [Bluetooth].
3. Tap the Bluetooth switch to turn on the Bluetooth function.

4. Tap [Add Device (Pairing)] to start pairing.
5. Select the device from the paired device list to make the Bluetooth connection. After the Bluetooth connection is established, [Connected.] is displayed.

Connecting (subsequent uses)

1. Turn on the paired Bluetooth audio device and set it to standby.
2. Tap - [Settings] - [Connect to/Add Audio Device] under [Bluetooth].
3. Tap the Bluetooth switch to turn on the Bluetooth function.
4. Select the device from the paired device list to make the Bluetooth connection.

Disconnecting

1. Tap - [Settings] - [Connect to/Add Audio Device] under [Bluetooth].
2. Tap the connecting device name on the paired device list, and tap [OK] on the disconnection dialog.

Bluetooth Specification

Communication system: Bluetooth Specification Version 4.2

NFC Specification

Active type (for reader and writer)

Tag Type

Symptom & Remedy

Your Walkman cannot charge the battery or is not recognized on your computer.

- The USB cable (supplied) is not connected to a USB connector on your computer properly. Disconnect the USB cable, and then reconnect it.
- The charge lamp on the Walkman lights up in red while the battery is charging, and goes off when the charging is completed.
- When you use your Walkman for the first time, or if you have not used the Walkman for a long time, it may take a few minutes to be recognized by the computer. Check that the computer recognizes the Walkman after you have connected it to the computer for about 10 minutes.
- If the approaches listed above fail to resolve the issue, turn off your computer completely and disconnect your Walkman. Then disconnect the power cable, battery, and anything else connected to the computer and discharge it for five minutes. After discharging, turn on the computer again and reconnect the Walkman.

You want to connect a 3-pole mini plug (balanced connection)x2 type headphone cable to the headphone jack (balanced standard) on your Walkman.

- Consult your nearest Sony dealer.

Compliance & Information

Information on laws and trademarks

For information on laws, regulations and trademark rights, refer to "Important Information" contained in the supplied software. To read it, install the supplied software on your computer.

To install it, open [WALKMAN] in your Walkman's system storage after connecting to your computer.

Windows user: [FOR_WINDOWS] - [Help_Guide_Installer(.exe)]

Mac user: [FOR_MAC] - [Help_Guide_Installer_for_mac]

After installing the software, double-click the shortcut or the alias icon generated on your desktop.

About the in-ear headphones

The earbuds seal your ears. Therefore, be aware that there is a risk of damage to your ears or eardrums if strong pressure is applied to the earbuds or the earbuds are suddenly removed from your ears. After use, be sure to take the earbuds off your ears gently.

About the headphones

- Avoid playing the unit at so loud a volume that extended play might affect your hearing.
- At a high volume outside sounds may become inaudible. Avoid listening to the unit in situations where hearing must not be impaired, for example, while driving or cycling.
- As the headphones are of open-air design, sounds go out through the headphones. Remember not to disturb those close to you.

Owner's Record

The model and serial numbers are located on the back of the player. Record them in the space provided below. Refer to these numbers in the spaces whenever you call upon your Sony dealer regarding this product.

Model No. _____

Serial No. _____

For customers in the U.S.A. and Canada

Authentication information based on laws and regulations is displayed on this product's screen electronically. Follow the steps below to display this information.

Tap - [Settings] - [Certificates].

Design and specifications are subject to change without notice.

Français

À propos des manuels

1. Manuel d'instructions (ce manuel)
2. (Guide de démarrage)

Le Guide de démarrage comprend les éléments ci-dessous :

- Instructions d'utilisation basiques de votre WALKMAN®
- Comment accéder aux sites web d'applications PC utiles sur Internet

3. Guide d'aide (document web pour un PC/

smartphone)

Le Guide d'aide contient des instructions d'utilisation plus détaillées, les spécifications, l'URL du site web d'assistance clientèle, etc.



http://rd1.sony.net/help/dmp/nwwm1/h_ww/

Bien que la navigation soit gratuite, des frais de communication peuvent vous être facturés par votre opérateur.

Selon le pays ou la région où vous avez acheté votre Walkman, certains modèles risquent de ne pas être disponibles.

Remarques sur l'utilisation du Walkman

Remarque sur la batterie

- Pour éviter toute détérioration de la batterie, chargez-la au moins une fois tous les six mois.

Formatage d'une carte microSD

Veillez à lire les instructions relatives aux cartes microSD dans le Guide d'aide sur Internet avant d'enregistrer du contenu sur une carte microSD (non fournie).

Fonctionnalités Bluetooth

Vous pouvez écouter la musique stockée sur votre Walkman à partir de périphériques audio Bluetooth tels que des écouteurs ou des enceintes.

Pairage (lors de la première utilisation du périphérique)

1. Réglez le périphérique audio Bluetooth sur le mode de pairage. (Reportez-vous au manuel d'instructions du périphérique.)
2. Appuyez sur - [Paramètres] - [Connecter à/Ajouter périph. audio] sous [Bluetooth].
3. Appuyez sur le commutateur Bluetooth pour activer la fonction Bluetooth.
4. Appuyez sur [Ajouter un périphérique (Pairage)] pour démarrer le pairage.
5. Sélectionnez dans la liste des périphériques appariés le périphérique avec lequel établir la connexion Bluetooth. Une fois la connexion Bluetooth établie, [Connecté.] s'affiche.

Connexion (utilisations ultérieures)

1. Mettez le périphérique audio Bluetooth apparié sous tension et réglez-le sur veille.
2. Appuyez sur - [Paramètres] - [Connecter à/Ajouter périph. audio] sous [Bluetooth].
3. Appuyez sur le commutateur Bluetooth pour activer la fonction Bluetooth.
4. Sélectionnez dans la liste des périphériques appariés le périphérique avec lequel établir la connexion Bluetooth.

Déconnexion

1. Appuyez sur - [Paramètres] - [Connecter à/Ajouter périph. audio] sous [Bluetooth].
2. Appuyez sur le nom du périphérique connecté dans la liste des périphériques appariés et appuyez sur [OK] dans la boîte de dialogue de déconnexion.

Spécification Bluetooth

Système de communication : spécification Bluetooth version 4.2

Spécification NFC

Type actif (pour lecteur et enregistreur)

Type étiquette