

尺寸：300*210mm 2折3页


100.00 mm

100.00 mm

100.00 mm

210.00 mm

1 Package Contents



Motorized Slider



Remote



Battery



Hook&Loop



Battery Charger



Remote cable





Shutter release extension cable



Portable bag


2 Installing the Battery

1. Locate the battery clip on the back of the remote.
2. Insert the battery.



3 Connecting the remote and motor

Plug the remote cable into the remote and motor.





Using the time-lapse function

1. Locate the shutter release and extension cable.



1

2. Plug the shutter release cable into the remote control and the camera's remote control terminal. Use the extension cable if more length is required.




4 Settings Menu :

1. Turn off power to reset the remote control.

2. Settings Menu


1/ Set the Language:

1. Press the up or down arrow and highlight the Settings menu option (P1).
2. Press the up or down arrow and highlight the Language menu option (P2).
3. Press the right or left arrow button to change language between English and Chinese. Long press the middle button to save your settings.



2/ Set the start point:

1. Press the up or down arrow and highlight the Settings menu option (P1).
2. Press the middle button.
3. Highlight the Set Start option and press the middle button (P3).
4. Press the right or left arrow button to move the slider. Press the middle button to stop the motion.
5. Press the middle button a second time to select the start point (P4)
6. Long press the middle button to save the start point.




3/ Set the end point:

1. Highlight the Set End option and press the middle button (P5)
2. Press the right or left arrow button to move the slider. Press the middle button to stop the motion.
3. Press the middle button a second time to select the end point (P6)
4. Long press the middle button to save the end point.

2

4/ Set the speed:

1. At any time while setting the start or end points, you can adjust the speed from [1-100%] by pressing the Up or Down arrows (P4), (P6).



5/ Reset:


- 1.Highlight the Reset option(P7).
- 2.Press the right r left arrow button to choose "Yes"or"No".Press the middle button to reset the remote control or go back setting menu.
- 3.Long press the middle button to save the setting.



3. Time lapse menu

1/ Set the start point:



1. Press the up or down arrow and highlight the Time Lapse menu option (P8).
2. Press the middle button.
3. Highlight the parameter you want to change and adjust its value by pressing the right or left arrow button (P9).
4. Press the middle button when complete.
5. Press the right or left arrow button to begin time lapse shooting.
6. Press the middle button to pause any motion.
7. The minimum Interval time is 0.1 second, the minimum Stop time is 1 second, and the Stop time needs longer than Time-lapse time at least 0.2 seconds 。



4. Video shot menu

1/ Manual Mode:

1. Press the up or down arrow and highlight the Video Shot menu option (P10) and then press the middle button.
2. Highlight Manual Mode and then press the middle button(P11).
3. Press the left or right arrow button to begin motion (P12).
4. You can adjust the speed at any time by pressing the Up or Down arrow buttons.




3

5. Auto Mode

Auto Mode has two options: Auto Loop and Auto Stop. To use either one, you first must set the start and end points as described in the Settings section.

1. Press the up or down arrow and highlight the Video Shot menu option. Then press the middle button(P13).
2. Press the up or down arrow buttons and highlight the Auto Mode menu option (P14).




1/ Auto Loop will provide motion between the start and end points indefinitely.

1. Highlight the Auto Loop button and then press the middle button (P15).
2. Press the right or left arrow to start motion.
3. Press the middle button to pause the motion.




2/ Auto Stop will provide motion between the start and end points one time.

1. Highlight the Auto Stop button and then press the middle button (P16).
2. Press the right or left arrow to start motion.
3. Press the middle button to pause the motion.



5 Introduction

The WY-2V is a portable solution for achieving smooth, linear camera motion in your video productions. You can capture tracking shots and push-ins that will increase production value and add a cinematic quality to your firm.




- 1 Adjustable feet
- 2 Slider rail
- 3 Camera mount base
- 4 1/4" mount
- 5 Bubble level
- 6 Tripod mount base
- 7 DC Power interface


4

1 Using the slider

When used it on the floor or table, the WY-2V provides 6.5-inch sliding distance.



You can use a heavy-duty tripod or light stand to support the slider for height and tracking length. After installation, the WY-2V offer 13-inch sliding length. The mounting base of the slider is equipped with a 1/4"-20 screw sockets.




TROUBLE SHOOTING

1. Use a standard Sony NP-F550/F570/F770/F9XX series battery.
2. Monitor the battery power level shown on the bottom of the remote controller.
3. Make sure all cables are firmly inserted into all devices.
4. If the slider is not horizontal, make sure to lock the center brake before turning off the power or disconnecting the cable. Under normal operations, the motor acts as a brake and any loss of power will permit the camera base to quickly fall to its lowest point potentially damaging your camera or slider.

5

GVM
GREAT VIDEO MAKER



WY-2V
MOTORIZED SLIDER

Add: 338 N Canal St, #20, South San Francisco, CA94080, USA
Web: www.gvmltd.com
Email: support@gvmltd.com