



BG-BMP6K

BATTERY GRIP

Designed for the
Blackmagic Design
Pocket Cinema Camera 4K/6K

 VELLO®

USER'S MANUAL

Thank you for choosing Vello.

The Vello BG-BMP6K battery grip offers extended shooting time and is compatible with the Blackmagic Design Pocket Cinema Camera 4K/6K. The grip accepts up to three Canon LP-E6/E6N rechargeable batteries, allowing you to keep shooting for longer. You can attach the grip to standard tripod mounts and attach a hand strap for a better hold on the camera.


Please read through this entire manual before using the BG-BMP6K battery grip.



Precautions

1. The BG-BMP6K should be used only with compatible devices specified in this manual.
2. Use only with the batteries and battery holders recommended in this manual.
3. If you notice smoke, noise, or an unusual smell from the battery pack, discontinue use immediately. Remove the batteries, and take the device to a Vello authorized reseller.
4. The battery level may not display properly if batteries are installed before mounting the grip.
5. Remove batteries from the grip when not in use.
6. Do not attempt to disassemble.
7. Avoid exposing this product to water or extreme humidity, and keep it in a cool, dry place.
8. Keep out of reach of children.
9. All images are for illustrative purposes only.

Overview



① Camera battery door holder

② Charging status LED

③ USB Type-C™ port

④ Nonslip grip

⑤ Tripod socket

⑥ Hand strap mount

⑦ Mounting screw

⑧ Thumbwheel

⑨ Battery door latch

⑩ Battery bay latch

⑪ Battery compartment

⑫ Battery bay 1

⑬ Battery bay 2

⑭ Battery bay 3

⑮ Power On/Off switch

⑯ Electrical contacts


⑰ Contact cap

⑱ USB Type-C charging cable

Attaching the Battery Grip




1. Ensure that the camera power is turned off.




2. Open the camera's battery door, and remove the battery.



3. Remove the camera's battery door by pulling the release latch on the inside of the door as indicated above.



- 4.** Store the camera's battery door in the BG-BMP6K's battery door holder. Align the door with the compartment's slot as indicated, and slide the door in place.




- 5.** Insert the BG-BMP6K's electrical contacts into the camera's battery chamber, and seat the camera onto the grip's mounting screw.



- 6.** Rotate the thumbwheel lock until secure.


Inserting the Batteries




1. Turn the camera power off. Slide the battery door latch to the left, and open the compartment's door.



2. Align your battery's contacts with battery bay 1, 2, or 3, and insert the battery. Make sure the battery clicks in place and is secure.




3. Close the battery compartment door, and make sure it's secure.



4. Turn on the camera's power, and make sure the grip's power switch is set to the On position.


Note: When removing the grip, turn off the camera power, and remove the batteries.

Charging the Batteries Inside the Grip



You can charge the batteries inside the grip, using the included AC power adapter and the grip's USB Type-C charging port.

1. Turn off the camera and grip, and remove the grip from the camera.



2. Plug the USB Type-C power adapter into an AC outlet and the USB Type-C port on the grip. The LED will glow red when charging, and green when charged.

Red LED: Charging

Green LED: Charged

Note: If there are no batteries in the grip, the LED will flash green and red.

Warning! Do not leave the grip attached when charging the batteries via the grip's USB Type-C port, as this can cause damage to the grip and camera.

Specifications

Power source	Up to three Canon LP-E6/E6N rechargeable Li-ion batteries
Charging port connection	USB Type-C
Operating temperature	32°F to 104°F (0°C to 40°C)
Dimensions (H × W × D)	2 × 6.7 × 3.1 in. (5.1 × 17.1 × 8 cm)
Weight	8 oz. (227 g) without batteries

ONE-YEAR LIMITED WARRANTY

This VELLO product is warranted to the original purchaser to be free from defects in materials and workmanship under normal consumer use for a period of one (1) year from the original purchase date or thirty (30) days after replacement, whichever occurs later. The warranty provider's responsibility with respect to this limited warranty shall be limited solely to repair or replacement, at the provider's discretion, of any product that fails during normal use of this product in its intended manner and in its intended environment. Inoperability of the product or part(s) shall be determined by the warranty provider. If the product has been discontinued, the warranty provider reserves the right to replace it with a model of equivalent quality and function.

This warranty does not cover damage or defect caused by misuse, neglect, accident, alteration, abuse, improper installation or maintenance. EXCEPT AS PROVIDED HEREIN, THE WARRANTY PROVIDER MAKES NEITHER ANY EXPRESS WARRANTIES NOR ANY IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. This warranty provides you with specific legal rights, and you may also have additional rights that vary from state to state.

To obtain warranty coverage, contact the Vello Customer Service Department to obtain a return merchandise authorization ("RMA") number, and return the defective product to Vello along with the RMA number and proof of purchase. Shipment of the defective product is at the purchaser's own risk and expense.

For more information or to arrange service, visit www.vellogear.com or call Customer Service at 212-594-2353.

Product warranty provided by the Gradus Group.

www.gradusgroup.com

VELLO is a registered trademark of the Gradus Group. © 2020 Gradus Group LLC. All Rights Reserved.



www.vellogear.com

All other trademarks are the property of their respective owners.

GG1