

ONE-TOUCH BUTTON CAMERA

SKU: B3000



**USER MANUAL
FCC CE**

THANK YOU FOR PURCHASING THE ONE-TOUCH BUTTON CAMERA

Please read this manual before operating the one-touch button camera and keep it handy.

Button cameras are hidden cameras disguised to look like a shirt or accessory button. They are a popular choice for covert recording because they are so easy to hide on your person. Professionals in law enforcement, private investigation, or secret shoppers will wonder how they ever got along without this discrete, do-it-all unit.

Begin collecting your evidence with a simple button press. The high-quality CCD image sensor records to up to 16GB MicroSD cards, giving you space for hours of video and images. The built-in, top-of-the-line battery fully recharges in just 2 hours directly from a USB port. Once charged, it is capable of recording for up to 2 hours. Use the included USB cable to move your data from the unit to your computer.

Your purchase should include:

- 1 x One-Touch Button Camera
- 1 x Mini-USB Cable
- 1 x Instruction Booklet
- 1 x 8GB MicroSD Card

Contact **770-694-6921** if you are missing any of these components.

GET FAMILIAR WITH YOUR ONE-TOUCH BUTTON CAMERA




Figure 1

Figure 2




Figure 3




Figure 4

OPERATING THE ONE-TOUCH BUTTON CAMERA

IMPORTANT NOTICE: Allow the device to charge 2 – 4 hours before using.

HOW TO CHARGE THE BUTTON CAMERA

1. Plug the Mini-USB cable into the port on the button camera.
2. Plug the Mini-USB cable into your PC.
 - The device will vibrate once.
 - The red indicator light blinks while charging.

HOW TO TURN ON THE BUTTON CAMERA

1. Push and hold the Power button for 3 seconds.
 - The device will vibrate once.
 - The red light will turn on.
 - The device is now in **standby mode**.

HOW TO TURN OFF THE BUTTON CAMERA

1. Push and hold the Power button for 3 seconds.
 - The device will vibrate twice.
 - The red light will turn off.

HOW TO RECORD VIDEO

1. Put the device into **standby mode**.
2. Push the Record Button for 3 seconds.
 - The device will vibrate twice.
 - The red light will blink twice and turn off.
 - The device is now recording video.
 - Every 15 minutes, the device will save the file and start a new file.
3. Push the Power button.
 - The device will vibrate 3 times.
 - The red light will turn on.
 - The device is back in **standby mode**.

HOW TO TAKE PHOTOGRAPHS


1. Put the device into **standby mode**.
2. Push the Record Button.
 - The red light will blink once.
 - The device will vibrate once.

HOW TO TAKE AN AUDIO RECORDING


1. Put the device into standby mode.
2. Push the power button 1 time, and the device will blink and vibrate 6 times.
3. Press the power button again to return to standby mode, and it will blink and vibrate 3 times.

HOW TO RESET THE TIME AND DATE STAMP (Windows Only)

1. Visit http://mgidownloads.com/Date_Time_Set/
2. Choose “B3000” and your time zone in the dropdowns and click download.
3. Plug the device into your computer.
4. Right click and “cut” the downloaded time file.
5. Locate “Removable Disk” inside the (My) Computer folder.
 - a. Go to Start > Computer > Removable Disk




6. Open the Removable Disk Drive.
7. Right click with your mouse and paste the downloaded time file.



8. Alternatively, if you cannot get the above method to work, do the following:
9. Right click anywhere in the blank white space.
10. Scroll down to "New".
11. Click "Text Document".
12. Rename "New Text Document" as "time".

The title must be in all lowercase letters!

Before Step 8



After Step 8


13. Open the text document.

Version 1.1

14. Enter the date/time in the following format.
 - a. Example: 2016-11-17 12:11:53
15. Save the text document.
16. Unplug the device from your computer.
17. Power on the device, and begin a test recording to confirm date/time setting succeeded.


RETRIEVE THE FILES TO YOUR PC

1. Plug the device into your PC using the Mini-USB cable.
2. Locate "Removable Disk" inside the (My) Computer folder.
 - AutoPlay Removable Disk > Open folder to view files
- 3.



Or...

- Go to Start > Computer > Removable Disk



4. Open the Removable Disk drive.
5. Open the [folder name] folder.
6. Double click the file you want to view.
 - VLC Player is recommended for watching videos.

TROUBLESHOOTING

THE DEVICE WON'T TURN ON

- Charge the device for at least 4 hours before the first use.
- Make sure the charging cable is securely inserted into the device and into the power source.

THE DEVICE ISN'T CHARGING

- If possible, try a different charging cable.
- If you are charging via a wall power source, try to charge through a PC.

THE DEVICE HAS CRASHED

- You can reset the device by pressing the power and record buttons and the same time.

MY COMPUTER DOESN'T RECOGNIZE THE DEVICE

- Unplug the device from your PC and reboot the device.
- Unplug the device from your PC and reboot your PC.
- Try using a different Mini-USB slot on your PC. If available, we recommend a Mini-USB port on the back of your computer.
- Replace the Mini-USB cable.

THE RED LIGHT BLINKS FOR 10 SECONDS, VIBRATES TWICE, AND THEN SHUTS DOWN WHEN I TRY TURNING IT ON

- There is no SD card in the slot.

THE DEVICE STOPPED RECORDING WHEN THE STORAGE BECAME FULL

- This device will not overwrite older file to make room for new files. You will need to move older data off of the device before you can continue to record.

THE RED LIGHT BLINKS FOR 3 SECONDS AND THE DEVICE SHUTS DOWN

- The battery is low and needs to be charged.

OTHER PROBLEMS

- Call our technical support at **770-694-6923**

SPECIFICATIONS

Video Resolution	1280*960
Video Format	AVI
Frames per Second	30
Recording Time	1–2 Hours
Motion Detection	No
Photo Resolution	4032*3024
Photo Format	JPG
Water Resistant	No
Battery Life	1–2 Hours
Type of Memory	MicroSD Card
Memory Capacity	Up to 16GB
Recording Capacity	2GB ≈ 1 hour 4GB ≈ 2 hours 8GB ≈ 4 hours 16GB ≈ 8 hours
USB Interface	2.0 USB
Player Software	VLC recommended
Operating Systems	Windows 2000 Windows Me Windows XP Windows Vista Windows 7 Mac OSX Linux