

\* Before using this unit, carefully read "USING THE UNIT SAFELY" and "IMPORTANT NOTES" for each product to use them correctly. Also, be sure to keep this Owner's Manual handy, so that you can quickly refer to it when needed.

## Check the Included Items

After opening the package, check that all of the included items are present. If anything is missing, contact your dealer.

- DBS-30 × 1
- DCS-30 × 2
- PDS-20 × 1
- Connecting cables (set of 11 cables) × 1
- Cable tie × 4
- Owner's Manuals
  - DTS-30S Owner's Manual
  - DBS-30/DCS-30 Owner's Manual
  - PDS-20 Owner's Manual



DBS-30



DCS-30



PDS-20

Cable tie



\* The two DCS-30 stands are symmetrical.

## Caution when Setting Up

- Prepare an area in which you can perform the assembly safely.
- When setting up and adjusting the stand, make sure that your fingers don't get pinched in the gaps between the pipes, knobs or holders. If using this in a location where children are present, be sure to provide adult supervision or guidance.
- Regarding the way of mounting a drum sound module, pads, or cymbals, please refer to the Owner's Manual supplied with them.
- Check the marking labels on both ends of the cables when connecting them. For details on how to make the connections, refer to the Owner's Manual of the drum sound module you are using. The names on the labels correspond to trigger input jack names as follows.



Label	KIK	T1	T2	T3	T4
Jack	KICK	TOM 1	TOM 2	TOM 3	TOM 4

  

Label	CR1	CR2	AX1	AX2	AX3	AX4
Jack	CRASH1	CRASH2	AUX 1	AUX 2	AUX 3	AUX 4

- When disconnecting all cables, grasp the connector itself—never pull on the cable. This way you will avoid causing shorts, or damage to the cable's internal elements.
- The AUX 1–4 cables have a female plug at the pad end. Since they cannot be connected directly to the pad, you'll need to provide connection cables separately.
- There are no connection cables for snare/ride/hi-hat. You'll need to provide them separately.
- When connecting to a V-pad, V-cymbal or V-hi-hat that is equipped with a DIGITAL TRIGGER OUT port, use the connection cable included with that product.
- Never pull on any cables with excessive force.
- Fasten the cables so that they will not obstruct your playing; use cable ties. Make sure to wrap the cable ties around the stands.
- If you will be using this drum stand for an extended period of time in the same location, we recommend that you use a drum mat (TDM series) made by Roland to prevent the rubber feet from soiling the surface on which they are placed.

## USING THE UNIT SAFELY

### CAUTION

#### Route all power cords and cables in such a way as to prevent them from getting entangled

Injury could result if someone were to trip on a cable and cause the unit to fall or topple.



#### Disconnect all cords/cables before moving the unit

Damage or malfunction may result if you fail to disconnect all cables before moving the unit.



## Main Specifications

Configuration	Drum boom stand: DBS-30 x 1 Drum combination stand: DCS-30 x 2 Pad stand: PDS-20 x 1 (for drum sound module)
Connection cable	Kick plug: 1/4-inch TRS phone type Tom 1–4 plugs: 1/4-inch TRS phone type Crash 1, 2 plugs: 1/4-inch TRS phone type AUX 1–4 plugs: 1/4-inch TRS phone type (Pad side: female plug)
Weight	21 kg 39 lbs 8 oz (including connection cables)
Accessories	Cable tie x 4 Owner's Manual (DTS-30S, DBS-30/DCS-30, PDS-20)

\* This document explains the specifications of the product at the time that the document was issued. For the latest information, refer to the Roland website.