

**PYLE**  
PyleUSA.com



**VISIT US ONLINE:**  
*Have a question?*  
*Need service or repair?*  
*Want to leave a comment?*

[PyleUSA.com/ContactUs](http://PyleUSA.com/ContactUs)


**PYLE**

**PYLE**  
PyleUSA.com




**PWMA170**  
Compact & Portable PA Speaker  
**USER MANUAL**

## A. DIRECTION MAP:



- |  |                           |
|--|---------------------------|
| 1. 110V/220V Input                     | 14. Power Indicator Light |
| 2. DC 12V Input                        | 15. Mic Indicator Light   |
| 3. Input Selector                      | 16. Mic Volume Control    |
| 4. Repeat                              | 17. Echo Control          |
| 5. PREV                                | 18. MIC1 Input            |
| 6. Play / Pause                        | 19. MIC2 Input            |
| 7. Next                                | 20. Treble Control        |
| 8. DC 12V Power Switch                 | 21. Bass Control          |
| 9. USB Input                           | 22. Volume Control        |
| 10. SD/MMC/MMS Card Input              | 23. Ipod / Aux I nput     |
| 11. Battery Charged Indicator Light    | 24. Lavalier Microphone   |
| 12. Battery Be Full OF Indicator Light | 25. Headset Microphone    |
| 13. Battery Low Indicator Light        | 26. Handheld Microphone   |



1. POWER ON / OFF
  2. Mode: USB/FM/Aux input
  3. Mute
  4. Play/Pause
  5. Previous: Previous station/Previous song
  6. Next: Next song/Next station
  7. EQ: Equalizer
  8. Volume: increase
  9. Volume reduce
  10. 0-9/100+/200+
- Directly select items or the 0 of the menu.

## C. ACCESSORIES

- Audio Cable
- AC Power Cord
- Manual
- Remote Control
- Wireless Microphone
- DC 12V Cord
- AUX Cord
- Belt for carrying the speaker

## D. FUNCTION:

DualChannel400 Watt Wireless PA System W/USBISD/MP3, FM Radio, 2 VHF Wireless Microphones (1 Lavalier, 1 Handheld)

## E. IMPORTANT:

1. This unit has rechargeable battery, when the battery power runs up, kindly plug the switch to electric socket according to input voltage. When charging the battery the CHARGING light will be on. Once the battery is charged the FULL light will be on. When charging the battery make sure DC switch should be ON. Once unit is charged please UNPLUG the socket from electricity.  
You have to charge the battery for 7 to 10 hours. Battery normally working time is 3-4 hours according to the volume of speaker.
2. When you want to use microphone, please insert the microphone to MIC1 or MIC2 & you can control the volume from MIC.VOL in the control panel.

## F. ATTENTIONS:

1. In order to keep battery life longer, kindly charge the battery every time after the battery power is finished, Else it will damage the battery if you keep it in a long time without charge or not using it for long period of time, So kindly use it after regular interval of time.
2. Our company reserves the right to bring changes at the product without any notice.
3. If any issue with the product, kindly contact the professional person to handle as this unit is high powered, so please don't open the unit.
4. Keep it away from children.