

Thank you
for choosing
Magnus.

Photo/Video Tripod Components



Specifications

Max Height: 70 in. (177.8 cm)
Max Height without Center Column Extended: 59 in. (150 cm)
Minimum Height: 21.4 in. (54.3 cm)
Closed Height: 23 in. (58.4 cm)
Maximum Load: 10 lb. (4.5 kg)
Weight: 3.6 lb. (1.6 kg)
Monopod Height: Max: 62 in. (157.5 cm) Min: 17 in. (43.2 cm)

User Cautions

- Ensure that all knobs, handles, and legs are properly secured before mounting your camera on this tripod.
- Never transport, carry, or store this tripod while your camera is attached.
- Do not attempt to remove the center brace.
- Do not use solvents, grease, or oil on any of the tripod components. Use only a mild soap solution to clean, and wipe dry with a lint-free cloth.
- Do not exceed the maximum load capacity.
- All images are for illustrative purposes only.

www.magnustripods.com

ONE-YEAR LIMITED WARRANTY

This MAGNUS product is warranted to the original purchaser to be free from defects in materials and workmanship under normal consumer use for a period of one (1) year from the original purchase date or thirty (30) days after replacement, whichever occurs later. The warranty provider's responsibility with respect to this limited warranty shall be limited solely to repair or replacement, at the provider's discretion, of any product that fails during normal use of this product in its intended manner and in its intended environment. Inoperability of the product or part(s) shall be determined by the warranty provider. If the product has been discontinued, the warranty provider reserves the right to replace it with a model of equivalent quality and function. This warranty does not cover damage or defect caused by misuse, neglect, accident, alteration, abuse, improper installation or maintenance. EXCEPT AS PROVIDED HEREIN, THE WARRANTY PROVIDER MAKES NEITHER ANY EXPRESS WARRANTIES NOR ANY IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. This warranty provides you with specific legal rights, and you may also have additional rights that vary from state to state. To obtain warranty coverage, contact the Magnus Customer Service Department to obtain a return merchandise authorization ("RMA") number, and return the defective product to Magnus along with the RMA number and proof of purchase. Shipment of the defective product is at the purchaser's own risk and expense. For more information or to arrange service, visit www.magnustripods.com or call Customer Service at 212-594-2353.



Product warranty provided by the Gradus Group.
www.gradusgroup.com

Magnus is a registered trademark of the Gradus Group.
© 2022 Gradus Group LLC. All rights reserved.



LM-700

Owner's
Manual

MAGNUS®
Photo/Video Tripod

Opening the Tripod

- 1 Always extend the legs from the top flip locks first. Extend the legs to the desired height and close each flip lock.
- 2 Loosen the center brace locking collar. Gently pull the legs out, and then push the center brace all the way down. Tighten the center brace locking collar until secure.



Mounting the Quick-Release Plate to the Camera

- 1 Pull out the quick-release lever and remove the quick-release plate from the head.
- 2 Line up the quick-release plate lengthwise with the bottom of the camera, and tighten the screw into the camera's mounting socket.



The quick-release plate has a registration pin for compatible cameras.


Make sure the quick-release plate is flush with the bottom of the camera.

- 3 Pull out the quick-release lever and insert the camera/plate assembly back into the head. Push the quick-release lever in to lock the quick-release plate into place.



Using the Pan & Tilt Head

- 1 Loosen the tilt/pan bar by turning it counterclockwise. Tilt the head to the desired angle and tighten the tilt/pan bar to lock it into place.
- 2 Loosen the pan locking knob to use the 360° pan feature. Aim the camera, and tighten the locking knob to lock in the new position.
- 3 To change the camera orientation from landscape to portrait, loosen the platform orientation knob. Tilt the platform 90°, and tighten the knob to lock the platform into the new position.



Adjusting the Center Column Height

- 1 Use the center column lock to raise and lower the center column.



If the center column doesn't slide smoothly, loosen the center column pan lock.


- 2 Set the center column at the desired height and tighten the center column lock. To prevent swiveling, tighten the center column pan lock.

Important! Don't raise the height beyond the center column's stop line.



Using the Lateral Center Column

- 1 Loosen the center column lock, and lift the center column out of the tripod.
- 2 Insert the center column into the center column mount laterally, and tighten the center column lock to secure it.
- 3 Loosen the center column pan lock to turn the center column to the desired position. Tighten the lock to prevent swiveling.



Using the Monopod

The center column converts to a monopod with five telescoping sections.

- 1 Loosen the center column lock, and lift the center column out of the tripod.



- 2 Hold the monopod in one hand and rotate the foot. Each of the four telescoping sections unlocks with a quarter turn.
- 3 When the desired height is reached, turn the foot in the opposite direction to lock the sections into place.



To Retract the Monopod Sections

- 1 Turn the foot a quarter turn for each extended section and collapse all the sections.
- 2 When the monopod is fully retracted, rotate the foot to lock it closed.



Collapse the monopod to its shortest length before replacing it in the tripod.

The Counterweight Hook

In windy conditions or on an uneven surface, stabilize the tripod and camera by hanging a weight on the counterweight hook.

