



FCC Statements

Note: Changes and modifications not expressly approved by the party responsible could void the user's authority to operate this device.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

NOTE: This device complies with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This device generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this device does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

A300 MCG-13336	A300i MCG-13337	A700 MCG-13334	A700i MCG-13335	W300 KIT MCG-13384	W700i KIT MCG-13386	W300i MCG-13385	AC300 MCG-13391
AC700i KIT MCG-13392	AT300i KIT MCG-13396	AT300 MCG-13395	D300 KIT MCG-13388	D700i KIT MCG-13389	AF300 MCG-13433	A700i KIT MCG-13432	A300i KIT MCG-13382

MOULTRIE®

www.moultriefeeders.com

PRADCO Outdoor Brands • 3280 Highway 31, Ste. B • Calera, AL 35040

01292019


MOULTRIE® A-SERIES DIGITAL GAME CAMERA INSTRUCTION MANUAL

THANK YOU for your purchase of an A-Series Digital Game Camera. Please read this booklet before using the unit. If you have any questions about this product or any other Moultrie product, please contact us using the information provided on page 7 of this booklet.

MOULTRIE®

Table of Contents

Easy Setup.....	2
Important Notes.....	2
Mounting Camera.....	3
Setup Mode.....	4
Time & Date.....	5
Detection Delay.....	5
Capture.....	5
Camera ID.....	6
Erasing Images.....	6



Please register your camera at www.moultriefeeders.com/warranty to activate your warranty.

EASY SETUP INSTRUCTIONS



Open the camera cover and install eight (8) AA batteries in the battery compartment. Follow the + and - polarities as indicated.



Insert the SD Card into the SD Card slot as shown. You will hear an audible click when the card is fully inserted.



Slide the Mode switch to the SETUP position, press the OK button to begin editing the time. Use the ^ (UP) / v (DOWN) buttons to adjust the hour digits. Press OK to select. Repeat to set minutes, press OK to set correct time. Select AM/PM, press OK to continue.



Slide the Mode switch to the ON position. The battery level will appear on the LCD screen and the camera is ready for use.



Important Notes:

- We recommend the use of SDHC Class 10 SD cards up to 32 GB; camera will not operate without an SD card installed.
- If you have a 12V power source plugged into bottom of unit, leave batteries installed. They will act as a backup if power is lost.
- If the camera detects the battery level is 15% or below, the Low Battery screen (bL:LO) will show on display and the unit will turn off.
- Do not mix old and new batteries. See important battery info on page 7.

Important Battery Information

- Only use Alkaline or Lithium batteries. We recommend the use of Energizer™ or Moultrie batteries.
- Do not mix old and new batteries. Do not mix alkaline, lithium, or rechargeable batteries. Always replace ALL the batteries at the same time.
- When the camera is not in use, please remove the batteries.

Moultrie Limited Warranty

This product has been thoroughly tested and inspected before shipment. It is guaranteed from defects in material and workmanship from the date of purchase for 2 years. Under this limited guarantee we agree to replace or repair free of charge any part or parts which have been found to be defective in original material or workmanship. Should you require in-warranty service, contact us at www.moultriefeeders.com/contact-us.

You must register your camera at www.moultriefeeders.com/warranty to activate your 2-year warranty.

Troubleshooting

Please visit www.moultriefeeders.com/contact-us for troubleshooting and helpful tips.

Returns and Repairs

Please visit <http://www.moultriefeeders.com/return-policy> and complete the form or our Service Department will gladly answer any questions you have.

Moultrie Mobile® Compatibility

Your camera is compatible with our Moultrie Mobile® cellular service when combined with the Moultrie® Field Modem. Please visit www.moultriemobile.com for more information.




3. CAMERA OPTIONS SETUP (cont.)



CAMERA ID

Use the **▲ (UP)**/ **▼ (DOWN)** buttons to choose between 1-9 to set a camera ID number. Images captured via your camera will display the camera ID number. Press **OK** to lock in your selection.



Erasing Images/Resetting Picture Count

Use the **▲ (UP)**/ **▼ (DOWN)** buttons to change the display to "dELY" (Delete Yes). When the display shows "dELY" pressing **OK** will reformat and delete all images stored on the SD card.



6

MOUNTING CAMERA



Mounting with Strap

- Thread mounting strap through slots on back of camera case.
- Mount camera to a tree or pole approximately three (3) feet from ground. May need to adjust for uneven terrain.



Tips:

- Face the camera North or South to avoid overexposure from the sun.
- Clear brush away from the front of the camera to avoid false-movement triggers.
- When covering a game trail, face camera looking down the trail instead of directly at it (see graphics below).



3

1. CAMERA OPTIONS SETUP



POWER ON

- Slide the Mode Switch to the **ON** position. The battery level (bL) will appear on the LCD screen for two seconds then the camera will display a countdown. When the countdown reaches 00:00 the display will turn off and the camera will be in Capture Mode.



SETUP MODE

- Slide the Mode Switch to the **SETUP** position.

NOTE: While in **SETUP** mode, the camera will turn on the **STATUS LED** for one second when motion is detected. You can use this feature to ensure the camera is properly aimed to detect movement in the desired target area.

Setup Mode Menu Guide

SET TIME	00:00 Hour		:00 Minute		AM/PM		Time Set
SET DATE	00:00 Month		:00 Day		0000 Year		Date Set
OPTIONS	Detection Delay		Capture Mode		Camera ID		Erase Images


4

2. CAMERA OPTIONS SETUP (cont.)



TIME AND DATE

- Once time is displayed, press the **OK** button to begin editing time. Use the **Λ (UP) / V (DOWN)** buttons to adjust the hour digits. Press **OK** to select. Repeat to set minutes, press **OK** to set time entered. Select AM/PM, press **OK** to continue. Repeat to set the month, day and year.



DETECTION DELAY

- Next, set the amount of time between pictures when motion is detected. Use the **Λ (UP) / V (DOWN)** buttons to choose between 0, 15, or 30 seconds and 1 or 5 minutes. Press **OK** to lock selection and continue setup.



CAPTURE MODE

- Use the **Λ (UP) / V (DOWN)** buttons to change the camera capture mode. Press **OK** to lock selection and continue to Camera ID setup.

Capture Mode Options

Lo	1	1 Photo, Low Resolution
Hi	1	1 Photo, High Resolution
Lo	3	3 Photos, Low Resolution
Hi	3	3 Photos, High Resolution
		Video

5