

Quick-Open

FOLDING BEAUTY DISHES





INSTRUCTIONS



 **angler**[®]

Setting Up the Beauty Dish

1. Open the beauty dish's vents so you can securely grip each rod.
2. Use both hands to lift opposing support rods until they click in place.
3. Once all rods are locked in place, close the vents to prevent light leaks.
4. Insert the Bowens adapter ring into the Bowens mount of your monolight, and rotate until it clicks.
5. Lock the beauty dish in place by tightening the thumbscrew.



Attaching the Deflector Plate


1. Screw the two reflector plate extension arms into the threaded holes.
2. Align two of the plate's holes with the extension arms. You can use either side of the deflector plate.
3. Screw in the two thumbscrews, and tighten until secure.



Attaching the Diffusers

The inner and outer diffusers add two levels of diffusion that soften and spread the light for an even and flattering effect.



1. Attach the inner diffuser by connecting each of the snaps to the ones inside the beauty dish.
2. Attach the outer diffuser by pressing the touch-connect strip against the inner rim of the beauty dish.



If you plan on using the accessory grid (sold separately), attach the diffuser to the inner half of the touch-connect strip to leave enough room for the grid.

Closing the Beauty Dish




1. Remove the beauty dish from the Bowens mount of your monolight, and open the vents.
2. Place a finger under the rod support and use your thumb to press the release button. The support rods will fold down.



Changing the Adapter Ring

Adapter rings for Broncolor, Elinchrom, and Profoto are available separately. Make sure to use 130 mm adapter rings.

1. Open the vents, and use a Philips screwdriver to remove the screws and washers. Then remove the thumbscrew and washer.
2. Remove the adapter ring from the beauty dish.
3. Insert the replacement adapter ring.
4. Replace the washers and screws. Make sure to insert the thumbscrew in the recessed hole. Tighten until secure.



SPECIFICATIONS

	QO-FBD-S23/ QO-FBD-W23	QO-FBD-S33/ QO-FBD-W33	QO-FBD-S40/ QO-FBD-W40
SIZE	23 IN. (60 CM)	33 IN. (84 CM)	40 IN. (102 CM)
SHAPE	BEAUTY DISH	BEAUTY DISH	BEAUTY DISH
INTERIOR COLOR	SILVER/WHITE	SILVER/WHITE	SILVER/WHITE
COMPATIBILITY	BOWENS MOUNT	BOWENS MOUNT	BOWENS MOUNT
REMOVABLE FRONT DIFFUSER	YES	YES	YES
ACCEPTS GRID	YES	YES	YES
WEIGHT	2.4 LB. (1.1 KG)	3.4 LB. (1.5 KG)	3.9 LB. (1.8 KG)

Recommended Accessories



ADAPTER RINGS

MODEL #	MOUNT TYPE
BBAR-BRL	BRONCOLOR
BBAR-EL	ELINCHROM
BBAR-PRO	PROFOTO

BEAUTY DISH GRIDS

MODEL #	COMPATIBLE BEAUTY DISHES
QO-FBD-G23	QO-FBD-S23 / QO-FBD-W23
QO-FBD-G33	QO-FBD-S33 / QO-FBD-W33
QO-FBD-G40	QO-FBD-S40 / QO-FBD-W40

One-Year Limited Warranty

This Angler product is warranted to the original purchaser to be free from defects in materials and workmanship under normal consumer use for a period of one (1) year from the original purchase date or thirty (30) days after replacement, whichever occurs later. The warranty provider's responsibility with respect to this limited warranty shall be limited solely to repair or replacement, at the provider's discretion, of any product that fails during normal use of this product in its intended manner and in its intended environment. Inoperability of the product or part(s) shall be determined by the warranty provider. If the product has been discontinued, the warranty provider reserves the right to replace it with a model of equivalent quality and function.

This warranty does not cover damage or defect caused by misuse, neglect, accident, alteration, abuse, improper installation or maintenance. EXCEPT AS PROVIDED HEREIN, THE WARRANTY PROVIDER MAKES NEITHER ANY EXPRESS WARRANTIES NOR ANY IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. This warranty provides you with specific legal rights, and you may also have additional rights that vary from state to state.

To obtain warranty coverage, contact the Angler Customer Service Department to obtain a return merchandise authorization ("RMA") number, and return the defective product to Angler along with the RMA number and proof of purchase. Shipment of the defective product is at the purchaser's own risk and expense.

For more information or to arrange service, visit www.anglerlights.com or call Customer Service at 212-594-2353.

Product warranty provided by the Gradus Group.
www.gradusgroup.com

Angler is a registered trademark of the Gradus Group.

© 2022 Gradus Group LLC. All Rights Reserved.

