

PR53XX Cleaning Guide

Sep 2009 v4.0




Automated Cleaning:

NiSCA recommends a basic cleaning of your printer after every ribbon change. The basic automated cleaning function is accessed through the User Mode (firmware version 4.3 or higher). To gain access to the User Mode, please press and hold the "Menu/Ribbon Change" key for 10 seconds. After you gain access to the User Mode, press the "EXE" key to continue and use the "Menu" key to toggle to the "Cleaning Mode" and follow the prompts. The cleaning card used for this automated cleaning is a "sticky" card. Please use only NiSCA genuine sticky cards.

Step 1. Access Cleaning Mode through the User Mode of the PR53XX



Step 2. Remove the protective backing from the sticky card.



Step 3. Remove your standard cards from the card hopper, as directed by the printer's LCD instructions, and press the "EXE" key.

Step 4. Place the stick card into the card hopper (sticky side face down) and gently press the sticky card into the feed gate until the card stops.

Step 5. Begin the cleaning process by pressing the "EXE" key.



www.teamnisca.com
techsupport@teamnisca.com
800-359-7300 or 732-271-7367

PR53XX Cleaning Guide

Sep 2009 v4.0



Manual Cleaning:

NiSCA recommends a complete cleaning of your printer at the intervals below. The PR53XX cleaning kit has the tools required for the job.

Cleaning:

- Automated Cleaning
- Input Rollers
- Card Transport Rollers
- Print Roller
- Supply Roller
- Print Head
- Input Roller


Schedule:

- Every Ribbon Change
- 2,500 prints
- 2,500 prints
- 2,500 prints
- 2,500 prints
- 2,500 prints
- 10,000 prints


Cleaning Tool

- NiSCA Sticky Card
- Alcohol Swab
- Alcohol Swab
- Alcohol Swab
- Alcohol Swab
- Alcohol Pen
- Replacement of Unit (PR5500K569)

Input Rollers:



Card Transport Rollers:



Print Rollers



Supply Roller



Print Head

