

DUO TTL OFF-CAMERA FLASH CORD

USER MANUAL



INTRODUCTION

Thank you for choosing the Vello Duo TTL Cord. This off-camera flash sync cord allows you to set up a single flash for off-camera lighting, while retaining all of your camera's TTL flash functions. This will reduce the harsh shadows of direct on-camera flash and give your photos more natural lighting.

Or, set your camera to Manual Mode (non-TTL function) and use two flashes together, both synchronized with your shutter release. Create amazing lighting effects and two-light setups.



CAUTIONS

Switch off all devices (cameras and flashes) before adding or removing a flash unit.

Use caution in stretching the coiled cord. Do not stretch the cord to lengths where it will cause your setup to become unstable.

Do not attempt to modify or disassemble the cord, shoe, or contacts. Do not attempt to “daisy-chain” flash cords.

This device is not water-resistant. Do not immerse in or expose to water, rain, or snow.

Do not clean the cord with solvents. Use a soft, dry cloth to clean the cord and connections.

Do not use or leave the device in conditions of extreme heat, severe cold, or high humidity.

MOUNTING TO THE CAMERA



1. Mount the TTL cord to your camera's hot shoe. Make certain that you are mounting the end of TTL cord that has the multiple contacts on both sides. The cord should feed towards the lens.
2. Tighten the thumbwheel lock to secure the TTL cord.

OFF-CAMERA MOUNTING



1. The off-camera hot shoe of the Duo TTL Cord can be mounted to an accessory shoe.
2. Or use the 1/4"-20 threaded socket to mount to a compatible tripod, boom, or light stand.

USING ONE FLASH WITH TTL FUNCTIONS



1. Make certain that the flash and camera are turned OFF before mounting the flash.
2. Mount the flash to either the on-camera position or off-camera position.
3. Turn on the camera and flash (selecting TTL mode on the flash and/or camera if desired). The Duo TTL cord will maintain all TTL functions.

USING TWO FLASHES (NON-TTL FUNCTION)

1. Place one flash in the hot shoe connection on the camera and one flash in the off-camera hot shoe.
2. Turn on the camera and flashes and set all to manual mode. The camera will trigger both flashes when the shutter is released (both flashes must be compatible with each other and with the camera).



Limited One-Year Warranty

Vello provides a limited warranty that this product is free from defects in materials and workmanship to the original purchaser under normal use for a period of one (1) year from the original purchase date. Vello's responsibility with respect to this limited warranty shall be limited solely to repair or replacement, at its option, of any product which fails during normal consumer use. This warranty does not extend to damage or failure which results from misuse, neglect, accident, alteration, abuse, improper installation or maintenance. EXCEPT AS PROVIDED HEREIN, VELLO MAKES NEITHER ANY EXPRESS WARRANTIES NOR ANY IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. To obtain a replacement during the time of this warranty please return the defective item with proof of purchase along with an RMA number to the place of purchase. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.