

# Portable MP3 / FM Radio Boombox

## Quick Start Guide




AMS01F

aluratek.com


qsg Q10177 Copyright © 2010 Aluratek, Inc. All Rights Reserved.

### Package Contents

Your order has been carefully packaged and inspected. The following should be included in your package. Please inspect the contents of the package to ensure that you have received all items and that nothing has been damaged. If you discover a problem, please contact us immediately for assistance.



### Display Icon Detail



### Product Detail




| ITEM                     | DESCRIPTION  |
|--------------------------|--|
| 1 Power                  | To turn on/off speaker   |
| 2 Equalizer button       | To change equalizer setting  |
| 3 Audio play mode button | To change between shuffle and loop mode  |
| 4 Alarm button           | To turn on/off alarm, To set alarm   |
| 5 Mode button            | To change operation mode: SD / Line in / Radio / Clock                           |
| 6 Play button            | Press once to play/pause audio playback  |
| 7 Volume +               | To increase the volume   |
| 8 Volume -               | To lower the volume  |
| 9 Left button            | To move cursor left, press once for previous song, press and hold to fast rewind |
| 10 Right button          | To move cursor right, press once for next song, press and hold to fast forward   |
| 11 USB port              | Connect to PC for data transfer, to power speaker using USB cable                |
| 12 SD card slot          | Insert SD card for music playback  |
| 13 Audio Line-in port    | Line in for other audio source   |
| 14 Display               | Display  |

### Product Operation

#### Step 1: Charging the Speaker

The Built-in Li-Ion Polymer battery is not fully charged and must be fully charged before first use. It is recommended to charge the battery for a minimum of 3 hrs. You can charge either thru the USB cable or the power adapter.

1. Connect the mini-B end of the provided USB cable or power adapter to the USB port on AMS01F
2. Connect the type-A end of the same cable to a computer or the power adapter to the wall outlet
3. The LED indicator will shown Red during charging and will go off when the battery is fully charged



#### Step 2: Connect the speaker to an audio source:

From a SD card:

1. Press the power button on the speaker until the blue color LED indicator is on
2. Insert the SD card into SD card slot
3. Press the "Mode" button to switch to the SD mode
4. Press the "Play" button to play/pause music
5. You can adjust the volume by pressing the volume buttons on top of the speakers
6. Press the "Right" or "Left" buttons to play the next or previous song

From a MP3 player:

1. Press the power button on the speaker until the blue color LED indicator is on.
2. Connect the music player Line out/headset out to the Line In port of the speaker using included audio cable
3. You can now stream music from the MP3 player.
4. You can adjust the volume by pressing the volume buttons on top of the speaker
5. To turn off the speaker, press and release the "Power" button, LED indicator will fade off

#### Step 2: Continued

To Listen to the Radio:

1. Press the power button on the speaker until the blue color LED indicator is on
2. Press the "Mode" button to switch to the Radio mode
3. Connect the provided Audio Line in cable into the Audio Line in port as an antenna
4. Press the "right" and "left" button to search for stations manually
5. Press and hold the "right" or "left" buttons to search for station automatically. Stations will save as preset stations automatically. It can store up to 20 preset stations
6. Press the "Play" button to access the Preset stations

#### Step 3: EQ Settings

1. While in music playback mode, press the "Equalizer" button until the equalizer icon appears.
2. Press the "Play" button to enter EQ setting.
3. Press the "left" or "right" buttons to change the EQ setting and press "play" to confirm



#### Step 4: Playback option

While in music playback mode, press the "Loop/Shuffle" button to switch between Shuffle and Loop mode.

#### Step 5: How to set the clock

1. Press the power button on the speaker until the blue color LED indicator is on
2. Press the "Mode" button to switch to the Clock mode
3. Press and hold the "Mode" button to enter clock setting
4. Press "left", "right" buttons to select among hour, min, day, month, and year
5. Press "up", "down" buttons to selected the desired value
6. Press the "Play" button to confirm

#### Step 6: How to set an alarm

1. In clock mode, press the "left" or "right" button to switch between Alarm 1, Alarm 2 and current time
2. In Alarm 1 or Alarm 2, press and hold the "Mode" button until the "Hour" is blinking.
3. Press "left", "right" buttons to select hour or minute
4. Press "up", "down" buttons to selected the desired value
5. Press the "Play" button to confirm
6. In SD card music mode, select the desired audio file and start playing. During playback, press and hold the "Alarm" button until you see the below screen. In Radio mode, select the desired FM frequency, then press and hold the "Alarm" button until you see the below screen.



### Technical Support

If you need further assistance, please contact the Aluratek support department for troubleshooting prior to returning this device.

E-mail: [support@aluratek.com](mailto:support@aluratek.com)  
 Web: [www.aluratek.com/support](http://www.aluratek.com/support)  
 Local (Tustin, CA): 714-586-8730  
 Toll free: 1-866-580-1978

### Radio and TV Interference Statement

WARNING!!! This equipment has been tested and found to comply with the limits of a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by whatever measures may be required to correct the interference.

### Warranty

Aluratek warrants this product against defect in material or workmanship for 1 Year from the date of purchase.

This warranty becomes invalid if the factory-supplied serial number or "warranty void" sticker has been removed or altered on the product.

This warranty does not cover:

- A) Cosmetic damage or damage due to acts of God
- B) Accident, misuse, abuse, negligence or modification of any part of the product.
- C) Damage due to improper operation or maintenance, connection to improper equipment, or attempted repair by anyone other than Aluratek.
- D) Products sold AS IS or WITH FAULTS.

IN NO EVENT SHALL ALURATEK'S LIABILITY EXCEED THE PRICE PAID FOR THE PRODUCT FROM DIRECT, INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THE PRODUCT, IT'S ACCOMPANYING SOFTWARE, OR IT'S DOCUMENTATION.

Aluratek makes no warranty or representation, expressed, implied, or statutory, with respect to it's products, contents or use of this documentation and all accompanying software, and specifically disclaims it's quality, performance, merchantability, or fitness for any particular purpose. Aluratek reserves the right to revise or update it's product, software or documentation without obligation to notify any individual or entity.