




SK-GH07

Upgraded Gimbal Tripod Head

Introduction

Thank you for purchasing the SEVENOAK SK-GH07 Gimbal head!

If you have any questions that aren't answered by this manual, please contact us at www.sevenoak.biz

The SEVENOAK SK-GH07 Gimbal Head can hold up cameras weighing over 10kg (22lb), making it perfect for any photography using large telephoto lenses. Separate locks control the 360°panning base and swinging arm, allowing a full range of motion ideal for covering sporting events, catching birds in flight, or any other fast-moving subjects.


The "gravity-balanced" gimbal head makes even the bulkiest camera and lens combos seem almost weightless. The Arca-Swiss-compatible quick-release plate (included) is 120 mm long, providing ample support of most telephoto lenses. For extreme telephoto lenses, longer base plates can be easily substituted.

With numbered scales along the vertical arm allow you to easily repeat your setup for various lens and camera combinations. The panning base and vertical arm capable of 360-degree rotation (horizontal and vertical). Additionally, the lens platform can be adjusted up or down by 4" to better accommodate different camera set ups.

Specification

Durable aluminum construction
360° Pan & Tilt range gimbal head
Support friction control

What's Included



Main Body*1 (it was set-up Before leaving factory)



Base plate*1




Quick Release plate*1



1/4"to 3/8" screw*1

Components

1. Tilt Knob (360°rotating)
 2. Pan knob
 - The gimbal head can be locked with any direction on the tripod.
 - 360° rotating when loosen it by clockwise.
 3. Swing Arm Knob
 4. Quick release plate with 1/4"Thread Screw
 5. Quick Release Knob
 6. Swing Arm
 7. Upright
 8. Camera Platform Knob
 9. Swing Arm Locking Knob
 - This knob made to locking the swing arm in vertical place securely.
 - To pull the knob out and tightening it when need to locking or loosen then swing arm.
 10. Friction Control Knob
 - Loosen it by clockwise, swing arm rotates smoothly.
 - Locking it by anti-clockwise, swing arm rotates slowly.
 11. Camera platform
 12. Pan base
 13. Hard stop
 14. 1/4"to 3/8"screw
- Material: Aluminium Alloy
Size(L*W*H): 235mm*150mm*268mm
Weight: 1.918kg (4.23lb)
Max load capacity: 10kg (22lb)




© 2018 Sevenoak inc.Visit us on the web at www.sevenoak.biz

Set Up

Attaching the Camera Mounting Plate

Take the camera mounting plate and slide directly down onto the swing arm. The platform can only be attached to the gimbal head from directly above and must be aligned to dovetail with the grooves on the swing arm. Once the camera platform is correctly positioned, it should easily slide down the swing arm, and come to a natural stop at the bottom of the arm. Once the platform has been placed on the swing arm, it can be locked into place by tightening the camera platform knob. (This knob can be used to position the camera platform anywhere on the swing arm during use.)




Mounting the Gimbal Head

The SEVENOAK SK-GH07 mounts to tripods via 1/4"-20 screw thread (also can be changed into included 3/8"screw thread), located on the bottom of the unit.

Simply lower the gimbal head onto the tripod mounting screw, and rotate until it is securely tightened. Be sure to align the screw thread directly over the mounting screw, to avoid cross-threading during the tightening process.


▲ Note: Be sure to attach the gimbal head to your tripod before attempting to mounting your camera on it.




Attaching and Balancing your camera

▲ Note: Before mounting your camera on the gimbal, ensure that the pan knob, tilt knob, and camera mounting platform knob are all tightened. Make sure that the gimbal feels secure before attempting to mount your camera on it.

Attach an arca swiss quick release plate to your camera or your own compatible plate. Which plate you use, be sure that it is long enough to provide you with the stability you need for your camera and lens.




Open the clamp on the camera mounting platform until it can fit the arca-swiss plate. While carefully supporting the camera, slide the plate into the open clamp, then tighten it until it holds the plate securely. Gently let go of the camera, to make sure it doesn't pull the tripod off balance.



Vertical shooting is available

Take the swing arm and camera platform apart, and attach the camera on quick release plate securely. Mount the camera with quick release plate to the gimbal head as the picture below.

▲ Note: Make sure that the gimbal feels secure before attempting to mount your camera on it.



USAGE

After the camera has been set up on the gimbal head, you're ready to use it. Loosen the pan and tilt knobs to the point where you still receive some resistance, to ensure the head doesn't move on its own.

WARNINGS

- Please read and follow these instructions, and keep this manual in a safe place.
- Handle the unit with care.
- Clean the unit with a soft, dry cloth.
- Use only parts provided by the manufacturer.
- Make sure everything is secure before proceeding.
- Make sure the item is intact and that there are no missing parts.
- Do not exceed the maximum load capacity.
- All photos are for illustrative purposes only.

LIMITED ONE-YEAR WARRANTY

Sevenoak provides a limited warranty that this product is free from defects in materials and workmanship to the original purchaser under normal use for a period of one (1) year from the original purchase date or thirty (30) days after replacement (the "Warranty Period"), whichever occurs later. Our responsibility with respect to this limited warranty shall be limited solely to repair or replacement, at its option, of any product which fails during normal consumer use.

To obtain warranty coverage during the Warranty period, contact your place of purchase ("Seller") to obtain a return merchandise authorization ("RMA") number, and return to Seller the defective product along with proof of purchase and the RMA number.

This warranty does not extend to damage or failure which results from misuse, neglect, accident, alternation, abuse, improper installation or maintenance. Except as provided herein, sevenoak makes neither any express warranties nor any implied warranties, including but not limited to any implied warranty of merchantability or fitness for a particular purpose. This warranty provides you with specific legal rights, and you may also have additional rights which vary from state to state.

© 2018 Sevenoak inc.Visit us on the web at www.sevenoak.biz